

NVRAM Module (PMTNV-AA)

Owner's Guide

Order Number: EK-TNVRM-OG. A01

First Printing, February, 1993

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation. Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

The software described in this document is furnished under a license and may be used or copied only in accordance with the terms of such license.

No responsibility is assumed for the use or reliability of software on equipment that is not supplied by Digital Equipment Corporation or its affiliated companies.

Restricted Rights: Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

© Digital Equipment Corporation 1993.

All Rights Reserved.
Printed in U.S.A.

The postpaid Reader's Comments forms at the end of this document request your critical evaluation to assist in preparing future documentation.

The following are trademarks of Digital Equipment Corporation:

DEC, DECwindows, TURBOchannel, VAX DOCUMENT, and the DIGITAL logo.

All other trademarks and registered trademarks are the property of their respective holders.

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

S2146

This document was prepared using VAX DOCUMENT, Version 2.1.

Purpose of This Guide

This guide is for anyone who is seeking general information on the NVRAM TURBOchannel module (PMTNV-AA). This information is independent of hardware platform. For hardware installation information, see your hardware options guide.

This guide provides the following information:

- Description of the module
- Module testing procedure
- Battery specifications

Conventions in This Guide

The following conventions are used in this guide:

lowercase

Lowercase monospaced letters indicate a command that you must enter exactly as shown. For example: `ioread`.

NOTE:


Notations provide information to help you understand how your system works with the module.

Description of the Module

Description of the Module

Purpose of the Module	The NVRAM module (PMTNV-AA) is a TURBOchannel module that provides 1 megabyte of nonvolatile RAM storage for applications requiring it. The module contains a lithium battery for memory retention, and occupies one slot in the system unit or TURBOchannel expansion box.
Operating System	The NVRAM module is compatible with the DEC OSF/1 operating system.
Limitations	Only one module should be used per system.
Illustration	The NVRAM module is shown in Figure 1.

Figure 1 NVRAM Module (PMTNV-AA)

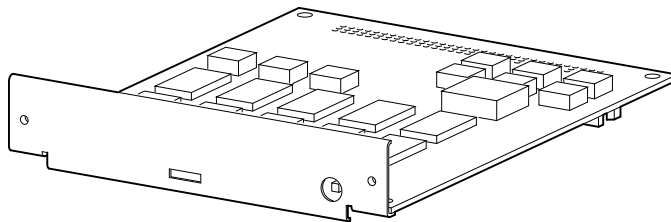


MLO-010249

Description of the Module

Indicators and Push Button

The module bulkhead contains three indicators ❶ and a battery test push button ❷, as shown in Figure 2 and explained in Table 1.

Figure 2 Indicators and Battery Test Push Button

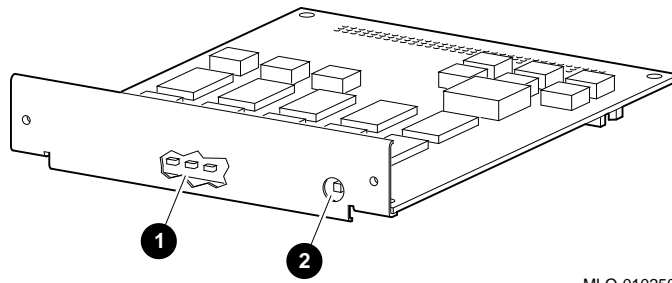

MLO-010250

Table 1 Module Indicators

Position	Color	Function
Left	Green	Indicates that battery is connected and ready. ¹
Middle	Green	When the battery test button is pushed, this indicator shows that the battery is connected and ready. This indicator is functional even when the module is not installed in a system.
Right	Red	Indicates that the battery needs replacing. ² This indicator activates when the battery voltage falls to 2.5.

¹This green indicator will be on when the system is first turned on.

²This red indicator will normally flash momentarily when the system is first turned on.

Installation of Module

See Options Guide

See the options guide that came with your workstation for installation instructions.

CAUTION: Module Damage

To avoid damage from static discharge, make sure that you wear an antistatic wrist strap. Instructions for use are on the strap envelope.

IMPORTANT: Grounding Module

When installing a module inside a system or expansion box, make sure that you use the screws that came with the system or expansion box to fasten the module to the enclosure.

Confirming Proper Installation

Procedure

To confirm that the module is installed properly, do the following:

1. Turn on the monitor and peripheral devices connected to the system unit.
2. Turn on the system unit.
3. Refer to the documentation that came with your workstation to make sure that **PMTNV** appears in the configuration display and that no errors are reported.

If the module does not appear in the configuration display, move the module to another slot. If the module still does not appear in the configuration display, contact your Digital service representative.

Startup Test

When your system is first turned on, startup testing is performed. The NVRAM module participates in that testing. Startup testing for this module is about 15 seconds.

Running Self-Tests

Self-Tests are optional tests that can be run to ensure that the module is working properly. Self-tests are run in console mode.

Command Format

The format of the command for running a test is `t tc# testname`. For example, for a module residing at TURBOchannel slot 2, to run the `csr` test, type the following at the prompt:

```
>>> t tc2 csr
```

Available Module Tests

Tests include:

- `address` - Test to insure all address lines are checked, and that none are tied together or open
- `csr` - Test of read/write capability in the CSRs
- `battery` - Test for proper connection and disconnection of the battery
- `dma` - Test of DMA burst functionality
- `ioread` - Test of read/write transactions for entire memory

NOTE: Testing Time

The `ioread` test takes approximately 45 seconds to run.

Running Self-Tests

Power Down Data Integrity Test

The power down data integrity test (pddi) tests the ability of the module battery to preserve SRAM data after system power is turned off. To run this test, do the following:

1. Type "set diag_section 3" and press `[Return]`.
2. Type `t tc# pddi`, where # is the TURBOchannel slot number, and press `[Return]`.
3. Turn the system power off.
4. Turn the system power on.
5. Type "set diag_section 3" and press `[Return]`.
6. Type `t tc# pddi read`, where # is the TURBOchannel slot number, and press `[Return]`.

Available Scripts

Scripts are groups of tests. They provide a convenient way to run related tests consecutively. They are run using the same format as the individual tests, or they can be set by the environment variable *testaction*, so that one of them runs automatically at startup.

Scripts include:

- `pst-t` - "thorough" mode, runs `cdru`¹, `csr`, `battery`, `address`, `dma`, and `ioread` tests
- `pst-q` - "quick" mode, runs `cdru`¹, `csr`, `battery`, and `dma` tests
- `pst-m` - "manufacturing" mode, runs `cdru`¹, `csr`, `battery`, `address`, `dma`, and `ioread` tests

¹ `cdru` is not a test; it serves to clear the diagnostic register.

Appendix A: Battery Information

Table 2 Battery Information

Type	200mAh lithium primary
Shelf Life	10 years (estimated)
Life with system power on and battery disconnected or connected	10 years (estimated)
Life with system power off and battery disconnected	2.7 years (estimated)
Life with system power off and battery connected	9.7 months (estimated)

Reader's Comments

NVRAM Module (PMTNV-AA)
Owner's Guide

EK-TNVRM-OG. A01

Your comments and suggestions help us improve the quality of our publications.

Please rate the manual in the following categories:

	Excellent	Good	Fair	Poor
Accuracy (product works as described)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Completeness (enough information)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Clarity (easy to understand)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Organization (structure of subject matter)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Figures (useful)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Examples (useful)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Table of contents (ability to find topic)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Index (ability to find topic)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Page design (overall appearance)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Print quality	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

What I like best about this manual: _____

What I like least about this manual: _____

Additional comments or suggestions: _____

I found the following errors in this manual:

Page	Description
_____	_____
_____	_____
_____	_____

For which tasks did you use this manual?

- | | |
|--|---|
| <input type="checkbox"/> Installation | <input type="checkbox"/> Programming |
| <input type="checkbox"/> Maintenance | <input type="checkbox"/> System Management |
| <input type="checkbox"/> Marketing | <input type="checkbox"/> Training |
| <input type="checkbox"/> Operation/Use | <input type="checkbox"/> Other (please specify) _____ |

Name/Title _____


Company _____

Address _____

Phone _____ Date _____

Do Not Tear - Fold Here and Tape

digital

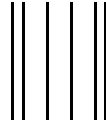


NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 33 MAYNARD MASS.

POSTAGE WILL BE PAID BY ADDRESSEE

 **DIGITAL EQUIPMENT CORPORATION
INFORMATION DESIGN AND CONSULTING
PKO3-1/D30
129 PARKER STREET
MAYNARD, MA 01754-9975**



Do Not Tear - Fold Here and Tape