

Digital Alpha VME 2100 Drawer Rackmount Front Bezel Installation Information

Introduction

The front bezel is installed on the Digital Alpha VME 2100 drawer rackmount chassis after the chassis has been installed in a RETMA or IEC cabinet.

Refer to the *Digital Alpha VME 2100 Owner's Guide* and perform the Digital Alpha VME 2100 installation procedure for a RETMA or IEC cabinet.

NOTE

If an optional removable media storage device is installed in the Digital Alpha VME 2100 chassis, remove the corresponding blank insert on the front bezel before installing the front bezel on the chassis.

Installing the Front Bezel


Use Figure 1 and the following procedure to install the front bezel on the Digital Alpha VME 2100 drawer rackmount chassis:

1. Grasp the front bezel ❷ by the flip-down pull tabs ❹ or by the sides.
2. Align the four strikes ❶ on the front bezel with the four latches ❸ on the chassis.
3. Press the front bezel onto the chassis until the four strikes snap into the four latches.

© Digital Equipment Corporation 1995. All Rights Reserved.

Digital Equipment Corporation makes no representations that the use of its products in the manner described in this publication will not infringe on existing or future patent rights, nor do the descriptions contained in this publication imply the granting of licenses to make, use, or sell equipment or software in accordance with the description.

Figure 1: Installing the Front Bezel

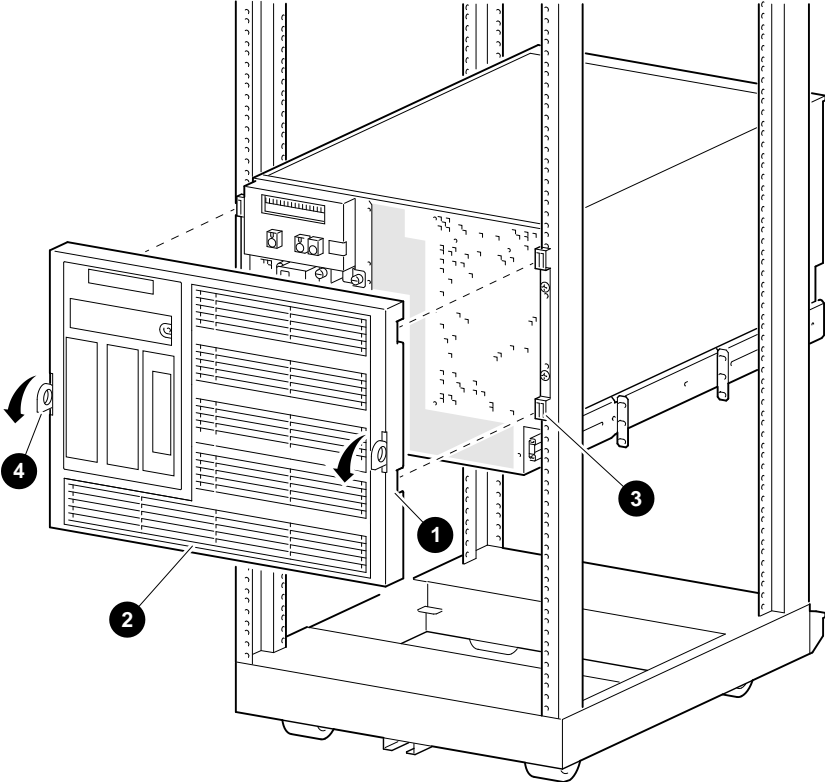

MLO-011599