

[illegible]

**X**

# **DEClaser 2100<sup>plus</sup> Printer Installation Guide**

**EK-DECLA-IN-001**

**This manual documents the following products:**

**DEClaser 2100 printer**

**DEClaser 2100 plus printer**

**Digital Equipment Corporation  
Maynard, Massachusetts**

---

**First Printing, June 1990**  
**Revised, July 1991**

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation.

Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

Any software described in this document is furnished under a license and may be used or copied only in accordance with the terms of such license. No responsibility is assumed for the use or reliability of software or equipment that is not supplied by Digital Equipment Corporation or its affiliated companies.

**Restricted Rights:** Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

© Digital Equipment Corporation 1991  
All rights reserved. Printed in U.S.A.

The Reader's Comments form at the end of this document requests your critical evaluation to assist in preparing future documentation.

The following are trademarks of Digital Equipment Corporation: BASIC Service, DECconnect, DECdirect, DECclaser, DECmailer, DECmate, DECserver, DECservice, DECstation, EDT, LN03, MicroVAX, PRO, Rainbow, VAX, VAX DOCUMENT, VAXmate, VAXstation, VAX/VMS, VMS, WPS-PLUS, VT, and the DIGITAL Logo.

The following are third-party trademarks: BITSTREAM is a registered trademark of Bitstream, Inc. Centronics is a trademark of Centronics Data Computer Corporation. CG Times is a trademark of Compugraphic Corporation. CG Triumvirate is a trademark of Compugraphic Corporation. IBM is a registered trademark of International Business Machines Corporation. IBM-PC is a trademark of International Business Machines Corporation. ITC Souvenir is a registered trademark of International Typeface Corporation. PostScript is a registered trademark of Adobe Systems, Inc.

S1697

This document was prepared using VAX DOCUMENT, Version 1.2.

**FCC NOTICE:** This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following methods.

- Reorient the receiving antenna.
- Relocate the computer or peripheral with respect to the receiver.
- Move the computer or peripheral away from the receiver.
- Plug the computer or peripheral into a different outlet so that they are on different branch circuits than the receiver.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the booklet *How to Identify and Resolve Radio/TV Interference Problems*, prepared by the Federal Communications Commission helpful. This booklet is available from the U.S. Government Printing Office, Washington DC, 20402, Stock No. 004-000-00345-4.

To meet FCC requirements, a shielded parallel cable is required to connect the device to a personal computer or other Class B device.



# Contents

---

## Preface

v

## Chapter 1 Preparing Your Site

---

1.1	Power Requirements .....	1-1
1.2	Operating Location Requirements .....	1-2
1.3	Environmental Conditions .....	1-3

## Chapter 2 Unpacking Your Printer

---

2.1	Printer Inventory .....	2-1
2.2	DEClaser 2100 Printer .....	2-2
2.3	Unpacking the Printer .....	2-3

## Chapter 3 Cleaning the Fixing Assembly Roller

---

## Chapter 4 Installing the EP-S Cartridge

---

## Chapter 5 Loading Paper

---

## Chapter 6 Connecting the Printer

---

6.1	Connecting to the Host Device .....	6-1
6.1.1	Serial Interface Connection .....	6-2
6.1.2	Parallel Interface Connection .....	6-4
6.2	Connecting to a Power Source .....	6-5

## **Chapter 7 Verifying the Installation**

---

<b>7.1</b>	<b>Checking the Printer Mechanism</b> .....	<b>7-1</b>
<b>7.1.1</b>	<b>Testing the Printer</b> .....	<b>7-3</b>
<b>7.1.2</b>	<b>Producing a Test Print</b> .....	<b>7-5</b>
<b>7.2</b>	<b>Conclusion</b> .....	<b>7-6</b>

## **Appendix A Cabling Information**

---

<b>A.1</b>	<b>Cable Combinations</b> .....	<b>A-1</b>
<b>A.2</b>	<b>Interface Programming Instructions</b> .....	<b>A-5</b>
<b>A.2.1</b>	<b>Serial Flow Control</b> .....	<b>A-5</b>
<b>A.2.2</b>	<b>Parallel Communication</b> .....	<b>A-6</b>

## **Tables**

---

<b>A-1</b>	<b>Cables and Adapters for Communication Connections</b> .....	<b>A-1</b>
------------	--	------------

# Preface

---

The DEClaser 2100 printer is a nonimpact, desktop, page printer. This guide covers the installation of the DEClaser 2100 printer up to the point where it is certified to be operating properly.

**NOTE:** *In this manual, the term DEClaser 2100 printer refers to the DEClaser 2100 plus printer as well.*

## Intended Audience

This guide is written for installers of the DEClaser 2100 printer.

## Document Structure

This guide has seven chapters and one appendix.

Chapter 1, *Preparing Your Site*, discusses site preparation items, such as power requirements, operating location, and environmental conditions.

Chapter 2, *Unpacking Your Printer*, describes how to unpack the printer and identifies its parts.

Chapter 3, *Cleaning the Fixing Assembly Roller*, shows how to do an initial cleaning of the fixing assembly roller.

Chapter 4, *Installing the EP-S Cartridge*, describes how to install the electrophotographic supplies (EP-S) cartridge.

Chapter 5, *Loading Paper*, explains how to load paper.

Chapter 6, *Connecting the Printer*, shows how to connect the printer to your computer system or video terminal.

Chapter 7, *Verifying the Installation*, explains how to run the self-test.

Appendix A, *Cabling Information*, explains how to cable your printer to different systems, such as workstations and PCs.

**NOTE:** *Perform all procedures in the order given.*

## Ordering Additional Copies of This Documentation Set

You can order additional copies of this documentation set from DECdirect as described in the ordering information section following Appendix D of the *DECclaser 2100 plus Printer Operator's Guide*. The order number for the documentation is EK-DECLA-DK.

The documentation set consists of:

- One *DECclaser 2100 plus Printer Installation Guide*
- One *DECclaser 2100 plus Printer Operator's Guide*
- One spine insert for the binder
- One 3-ring binder

**NOTE:** You cannot order the installation or operator's guide individually. You can order only the documentation set.

## Associated Documents

*DECclaser 2100 plus Printer Operator's Guide* (EK-DECLA-OG)

*Digital ANSI-Compliant Printing Protocol Level 3 Programming Reference Manual* (EK-PPLV3-PM-001)

*Digital ANSI-Compliant Printing Protocol Level 3 Programming Supplement* (EK-PPLV3-PS-001)

## Terms and Conventions

The following terms and conventions are used in this guide:

Term/Convention	Meaning
<b>NOTE</b>	Provides general information about the current topic.
<b>CAUTION</b>	Provides information to prevent damage to equipment.
<b>WARNING</b>	Provides information for preventing personal injury.
<b>On Line</b>	A key name is shown enclosed to indicate that you press that key on the operator panel. For example:  1. Press <b>On Line</b> to place the printer on line.

<b>Term/Convention</b>	<b>Meaning</b>
<b>Dash (—)</b>	<p>A statement beginning with a dash (—) describes the result of a step. For example:</p> <ol style="list-style-type: none"> <li>1. Press <b>On Line</b> to place the printer on line.</li> </ol> <p>— The On Line indicator lights.</p>
<b>Check Mark (✓)</b>	<p>A statement marked by a check mark (✓) indicates a special instruction. For example:</p> <ol style="list-style-type: none"> <li>1. Remove the fixing assembly roller cleaner from the EP-S cartridge box.</li> </ol> <p>✓ Identify the felt pad on one end of the fixing assembly roller cleaner.</p>

## **Laser Safety**

The DEClaser 2100 printer complies with laser product performance standards set by government agencies as a Class 1 Laser Product. The DEClaser 2100 printer does not emit hazardous light, since the beam is totally enclosed during all modes of customer operation and maintenance.

## **Ozone Safety**

The DEClaser 2100 printer uses an ozone filter to remove the ozone generated by the printer. The ozone filter should be replaced at the 100,000 page count. Refer to the *DEClaser 2100 plus Printer Operator's Guide* for instructions on replacing the ozone filter.

**WARNING:** *Do not operate the printer without the ozone filter installed. The filter removes ozone, which could be hazardous to your health.*



# Chapter 1

## Preparing Your Site

---

The performance of the DEClaser 2100 printer can be affected by electrical and environmental conditions surrounding its work location. This chapter lists the requirements for installing the DEClaser printer in a location where it performs best.

### 1.1 Power Requirements

The wall outlet you use should meet the following requirements:

---

Area	Voltage	Frequency	Amperage
North America	120 Volts	50-60 Hz	8 Amp circuit
All others	220-240 Volts	50 Hz	5 Amp circuit

---

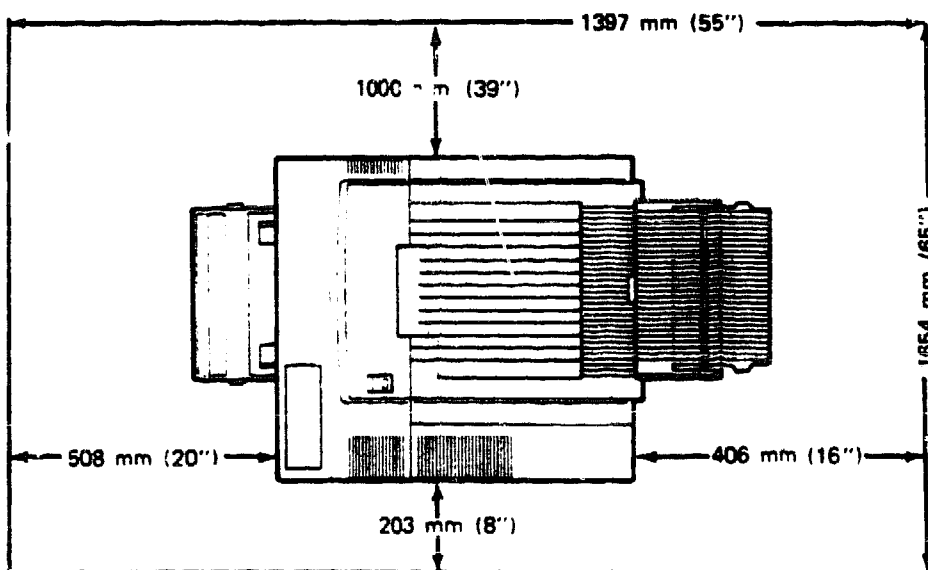
**NOTE:** *Do not plug any other equipment into the same power supply line.*

## 1.2 Operating Location Requirements

The DEClaser 2100 printer should be installed in an area that meets the following requirements:

- A flat, level surface free from vibrations.
- Enough surrounding space to allow ventilation and easy access to all sides of the printer for servicing.

The following figure illustrates the space requirements for the printer.



MLO-004346



## **1.3 Environmental Conditions**

For the proper operation of the printer, be certain the following environmental requirements are met:

- Maintain the site within a temperature range of 10°C to 32.5°C (50°F to 91°F).
- Maintain a humidity range of 20% to 80% (noncondensing). This ensures consistent image quality and prevents paper jams.
- Install the printer in a well-ventilated area to avoid heat buildup in the unit.
- Avoid installing the printer in a dusty area to protect moving parts from unnecessary wear.
- To prevent excessive ozone levels, avoid running many printers in the same area without adequate ventilation.
- To prevent condensation, avoid installing the printer in an area where it is:
  - Subjected to sudden changes in temperature or high humidity.
  - Exposed to a draft of hot or cold air from a heating system or an air conditioner or exposed to direct sunlight.



## Chapter 2

# Unpacking Your Printer

---

This chapter describes the parts and the steps necessary to unpack the DEClaser 2100 printer.

**CAUTION:** *Damage will occur if the packing and spacers are not removed before turning on the printer.*

### 2.1 Printer Inventory

Your DEClaser 2100 printer and accessories come packed in two boxes. The following lists identify what items are in each box.

The larger box contains:

- One DEClaser 2100 printer
- One power cord
- One serial interface cable (BC16E-10)
- One serial interface adapter (H8571-E) for coupling RS232 to RS423 connectors
- One 8½"-x-11" paper cassette for North American applications or one 210-mm-x-297-mm paper cassette for European or other applications
- One documentation binder


The smaller box contains:

- One EP-S cartridge (in silver bag)
- One fixing assembly roller cleaner
- One cotton swab (Refer to the *DEClaser 2100 Printer Operator's Guide* for instructions on when to use the swab.)
- One installation manual

**NOTE:** *Save the shipping cartons and the packing material. They are useful for transporting the printer.*

## 2.2 DEClaser 2100 Printer

The following illustration shows the front and rear views of the printer with the principal areas indicated.

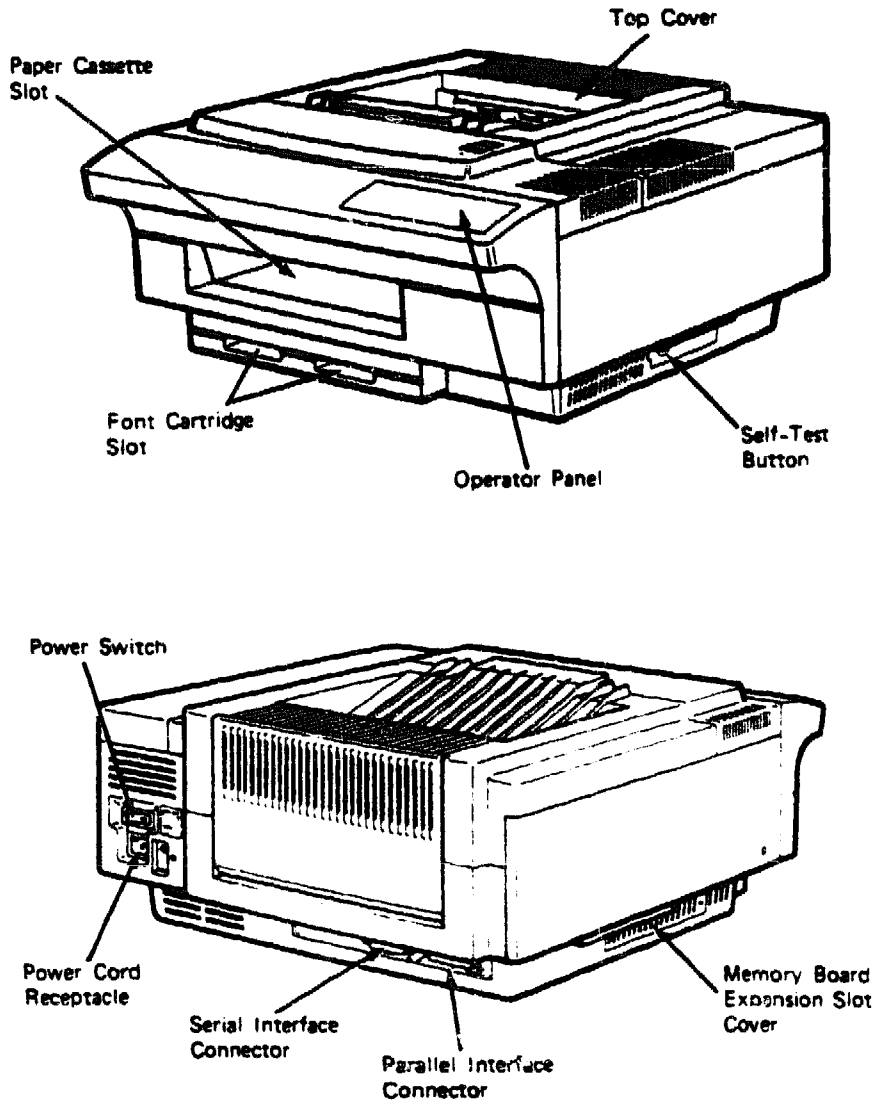


MLO-004347

## 2.3 Unpacking the Printer

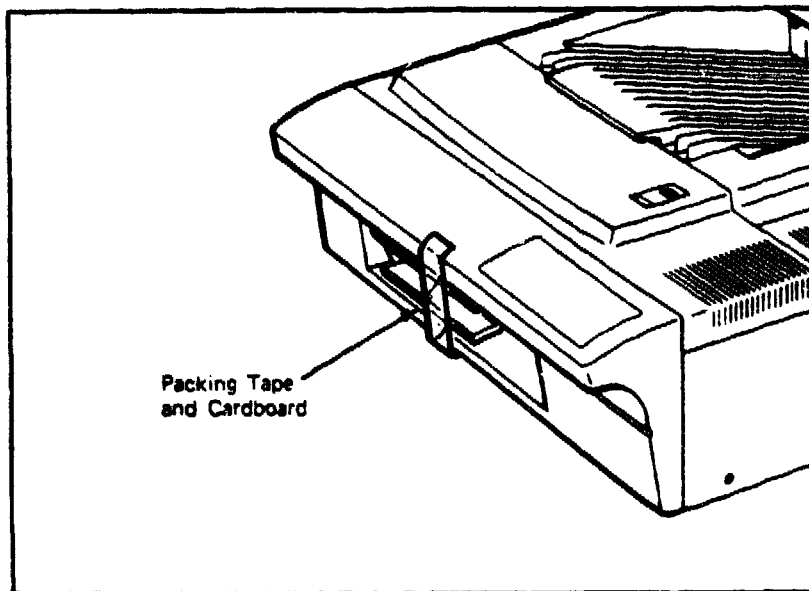
The instructions in this chapter begin at the point where the printer has been removed from the shipping box.

1. Remove the printer from the plastic bag.
2. Remove the packing tape and the packing cardboard from the paper cassette slot.




MLO-004348

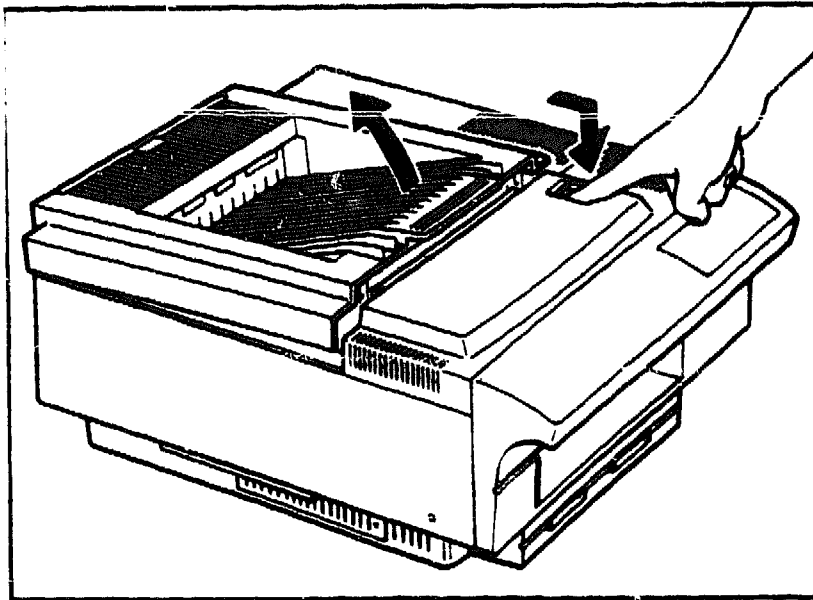3. Press the release button on the top of the printer and raise the printer cover to its most upright position.




MLO-004349

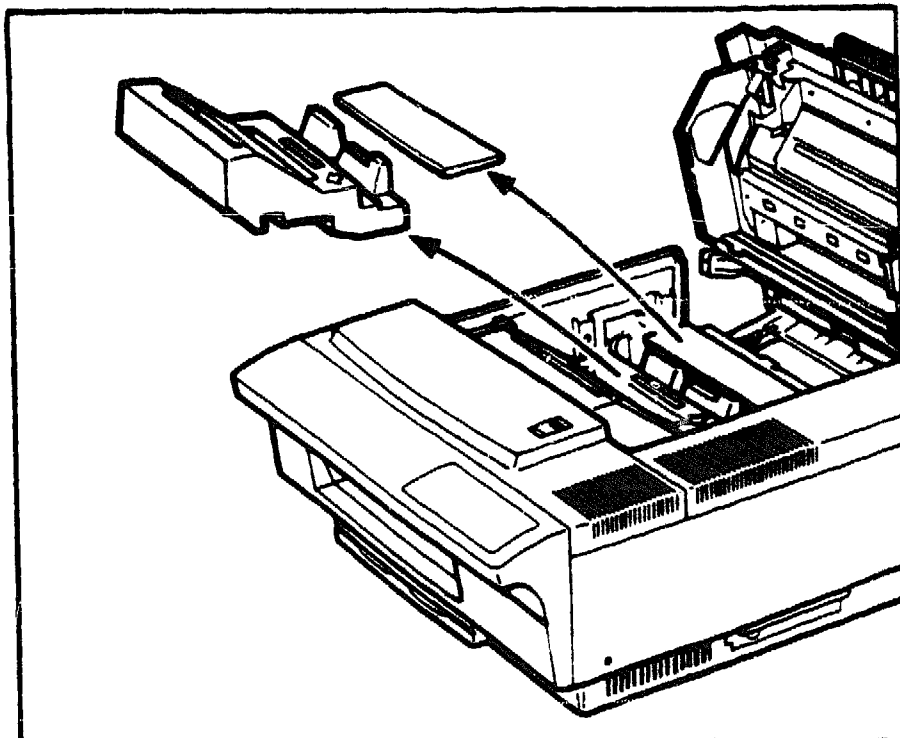4. Remove the packing foam inside the printer.




MLO-004350

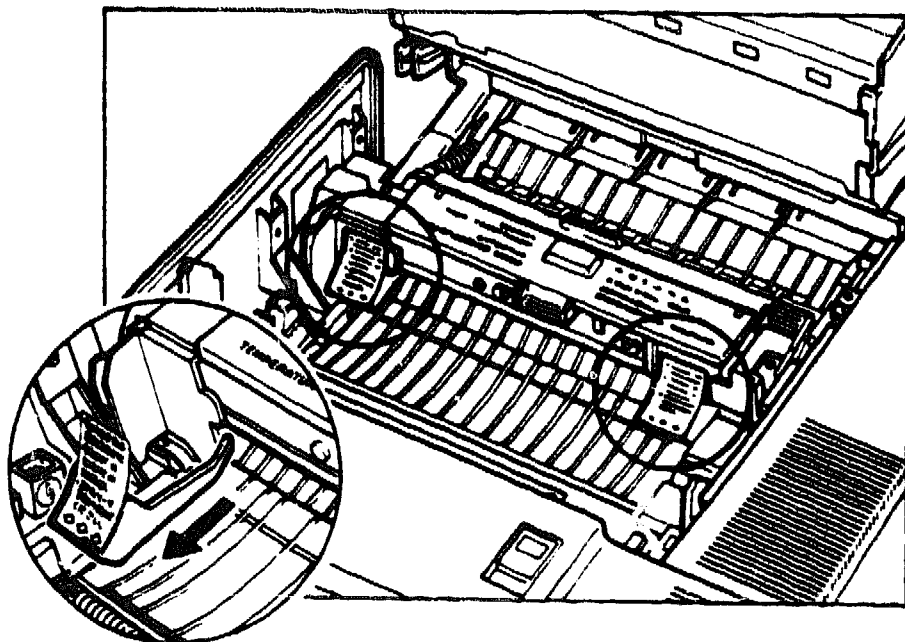5. Remove the two fixing assembly spacers.



MLO-004352

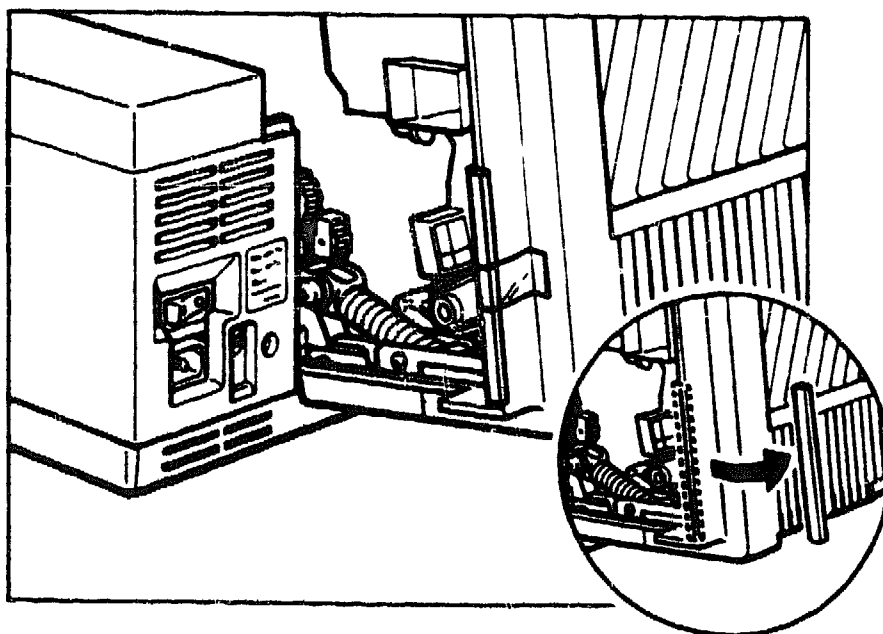6. Remove the top cover packing spacer.



MLO-004351





## Chapter 3

# Cleaning the Fixing Assembly Roller

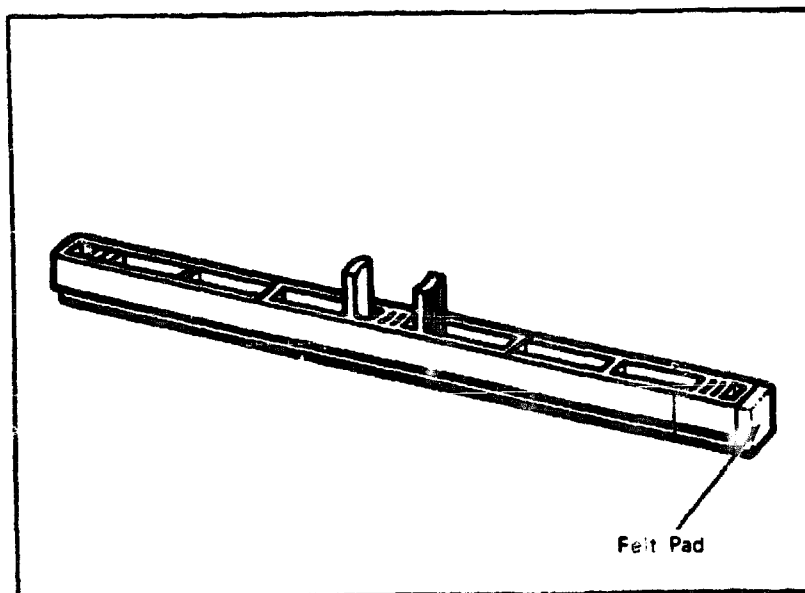
---

This chapter describes how to perform an initial cleaning of the fixing assembly roller. This initial cleaning removes any shipping dust and contaminants that may have settled on the roller.

You replace the fixing assembly roller cleaner each time you replace the EP-S cartridge. A cleaner comes with each EP-S cartridge kit. Refer to the *DEClaser 2100 Printer Operator's Guide* for instructions on how to replace the EP-S cartridge and the fixing assembly roller cleaner.


1. Remove the fixing assembly roller cleaner from the EP-S cartridge box.
  - ✓ Remove the fixing assembly roller cleaner from its packaging.
  - ✓ Identify the felt pad on one end of the fixing assembly roller cleaner.

The felt pad contains lubricating oil that stays on the roller as you clean it.




MLO-004353

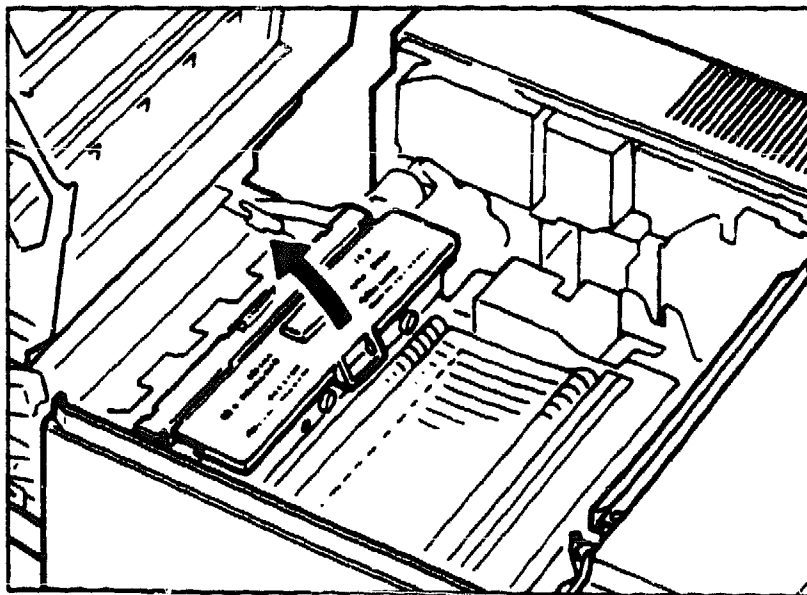2. Open the green fixing assembly cover.




MLO-004354

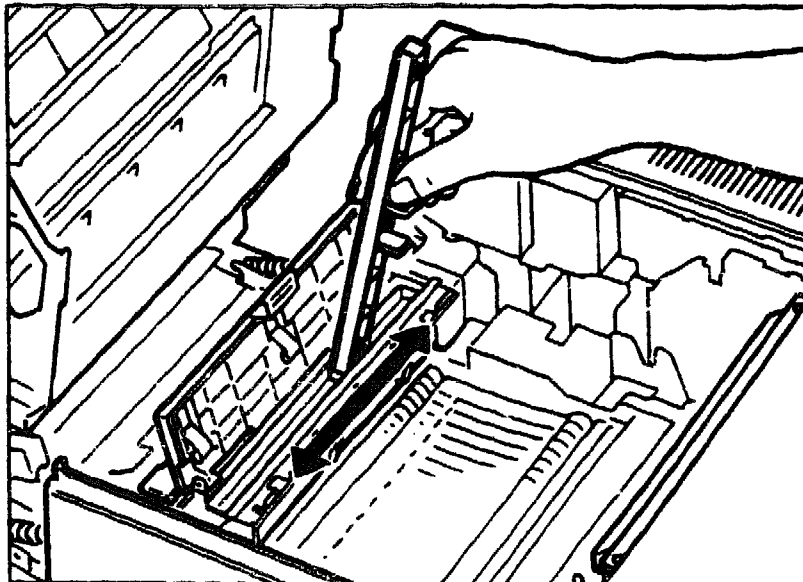3. Wipe the fixing roller with the felt pad on the end of the cleaner.




MLO-004355

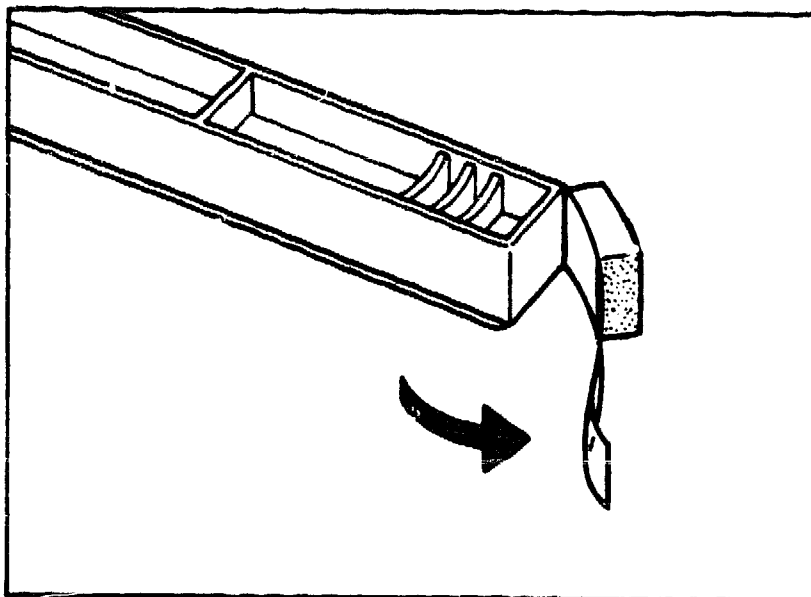4. Peel off the felt pad and discard it.



MLO-004356

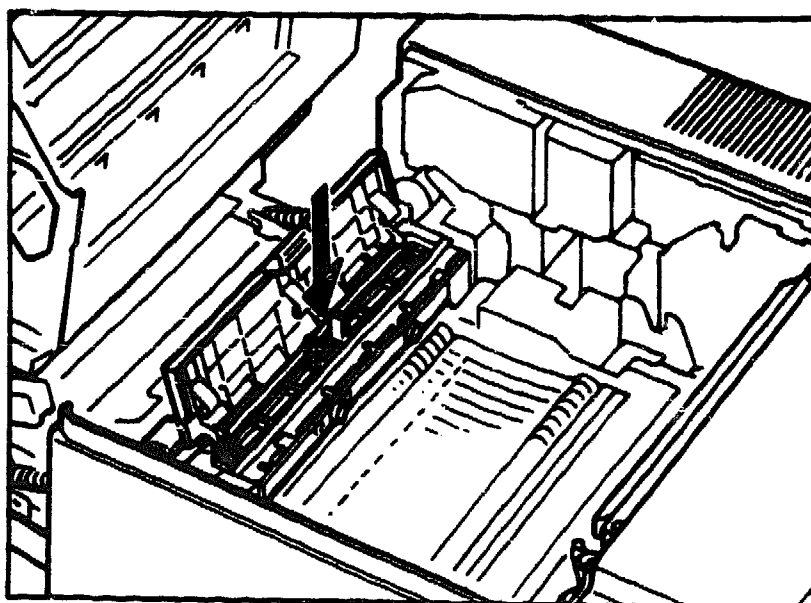
5. Insert the cleaner into the fixing assembly.



MLO-004357

6. Close the fixing assembly cover.

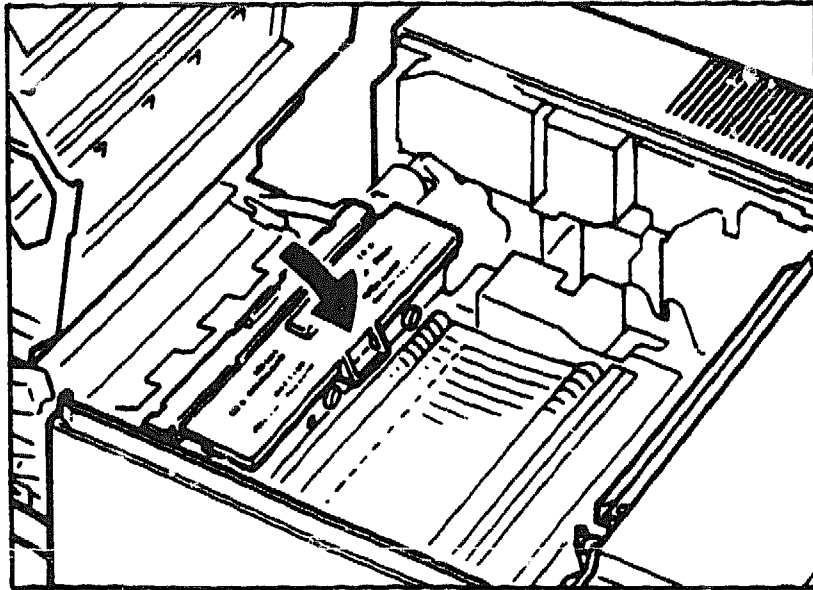**NOTE:** *The fixing assembly cover does not close tightly.*



ML0-004356



## Chapter 4

# Installing the EP-S Cartridge

---

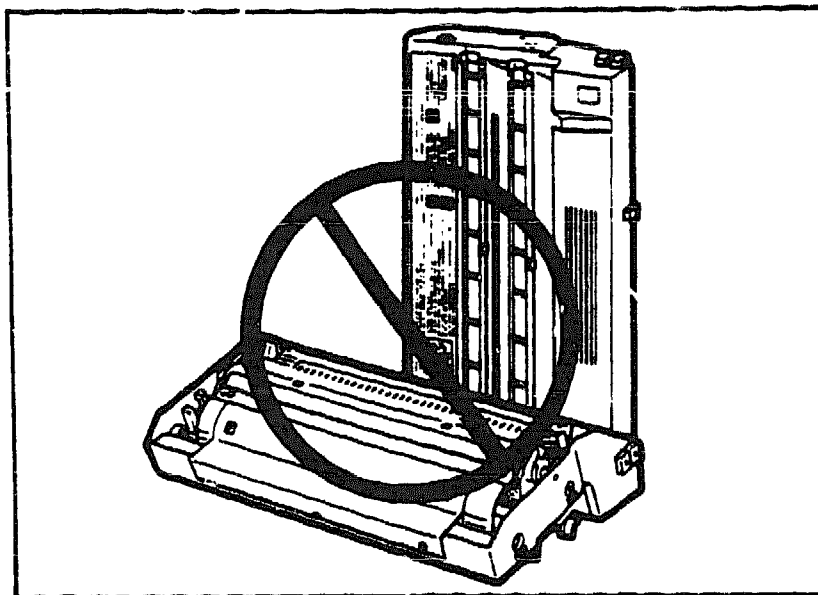
This chapter describes how to install the electrophotographic supplies (EP-S) cartridge.

It is important to handle the EP-S cartridge properly. Be aware of these cautions when handling the EP-S cartridge.

**CAUTIONS:** *Do not slide the cartridge cover open.*


*Do not stand the cartridge on end or place it upside down.*

*Do not shake the cartridge vigorously.*




MLO-004359

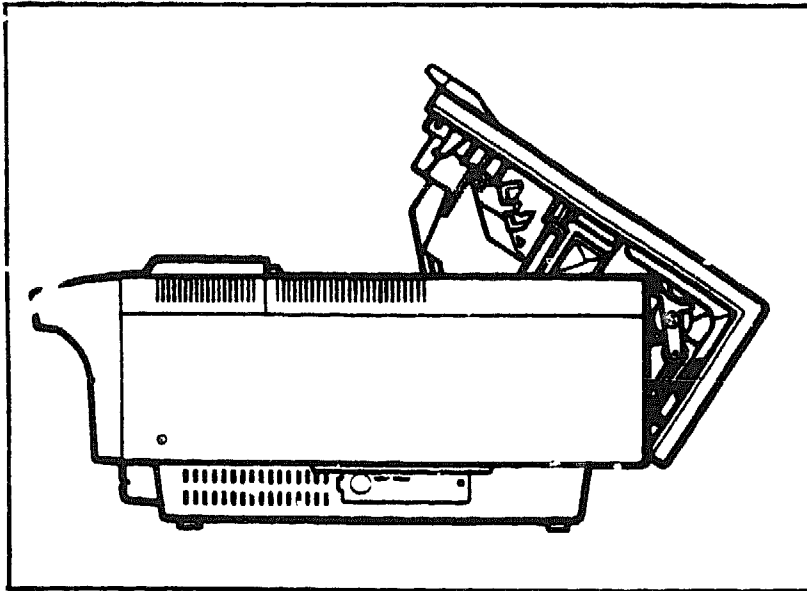1. Lower the top cover to its halfway position.




MLO-004360

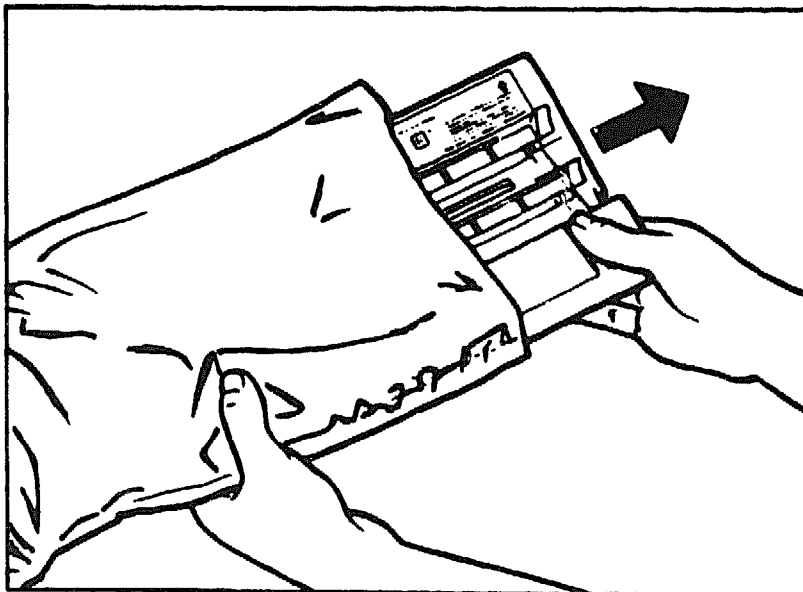2. Remove the EP-S cartridge from its protective bag.




MLO-004361

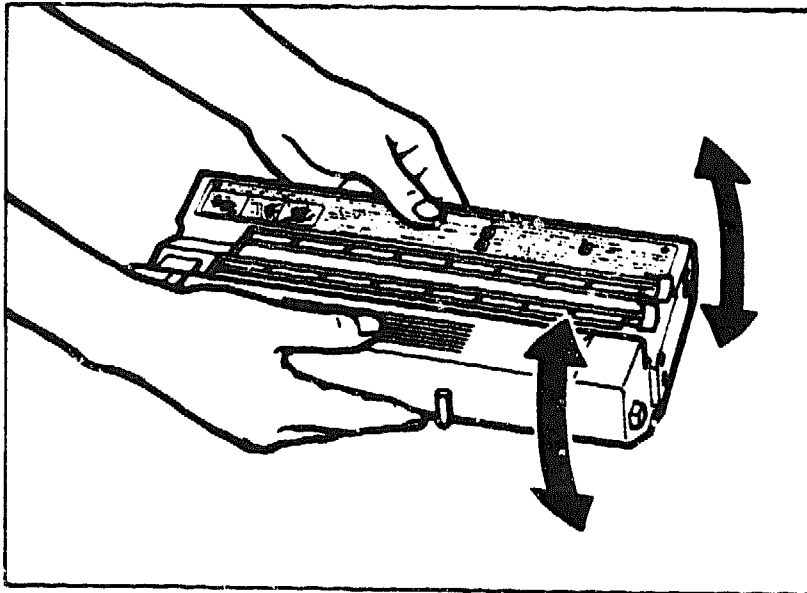3. Rock the EP-S cartridge five or six times as shown to distribute the toner evenly.



MLO-004362

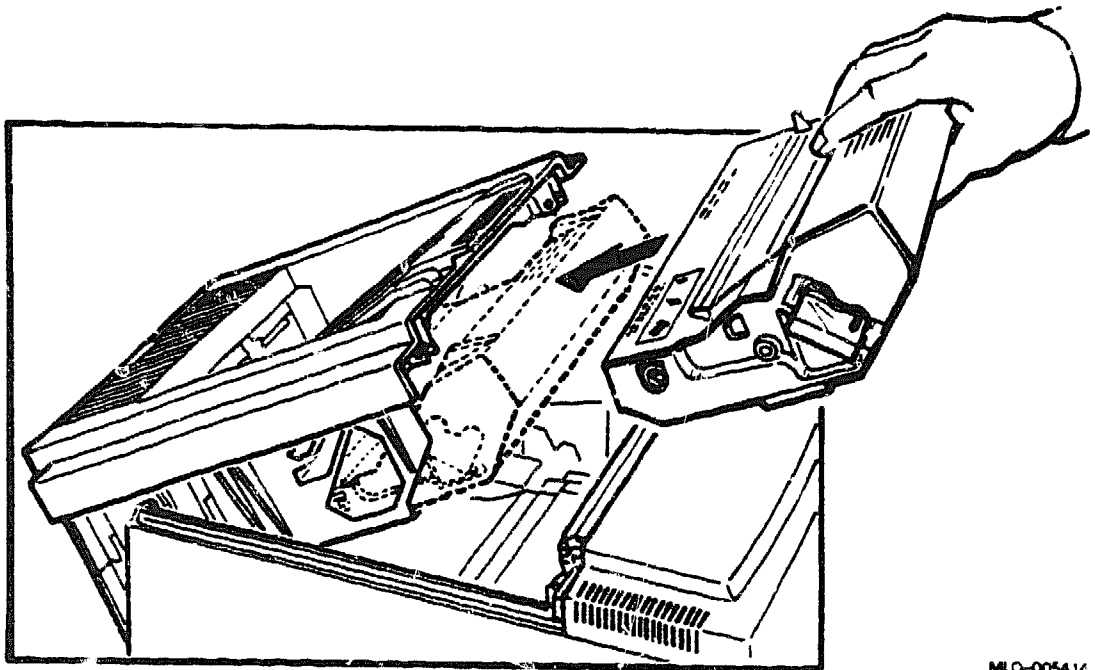
4. Install the EP-S cartridge.



MLO-005416



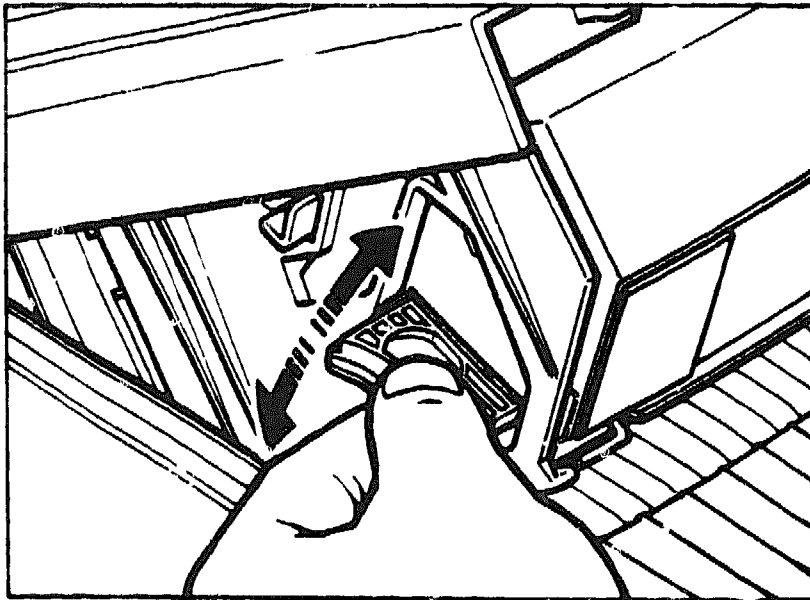
5. Snap the tab off the left side of the EP-S cartridge by moving it up and down.



MLO-004364


6. Grasp the tab and pull the sealing tape completely out of the cartridge.  
✓ Discard the sealing tape.

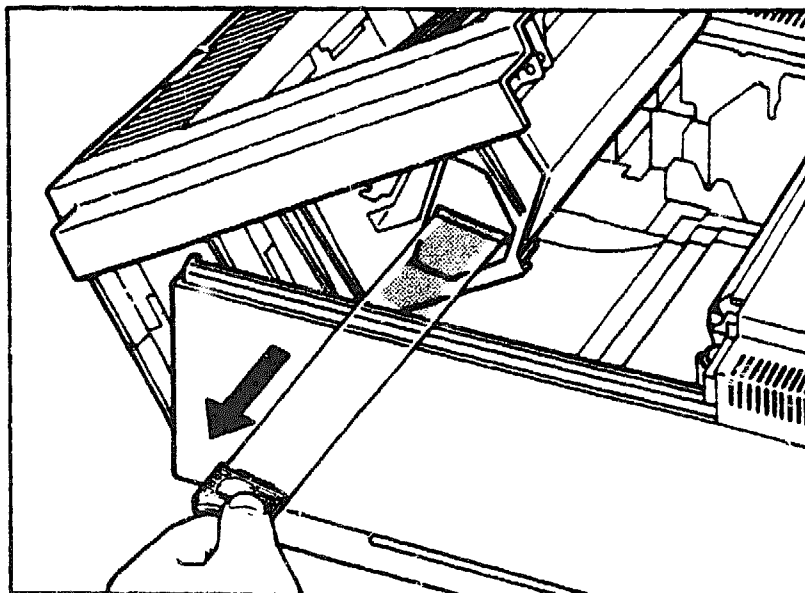**NOTE:** The sealing tape is about 55 cm (22") long and may have toner on it. If you get toner on your hands or clothing, wash with cold water and soap.



MLO-004365

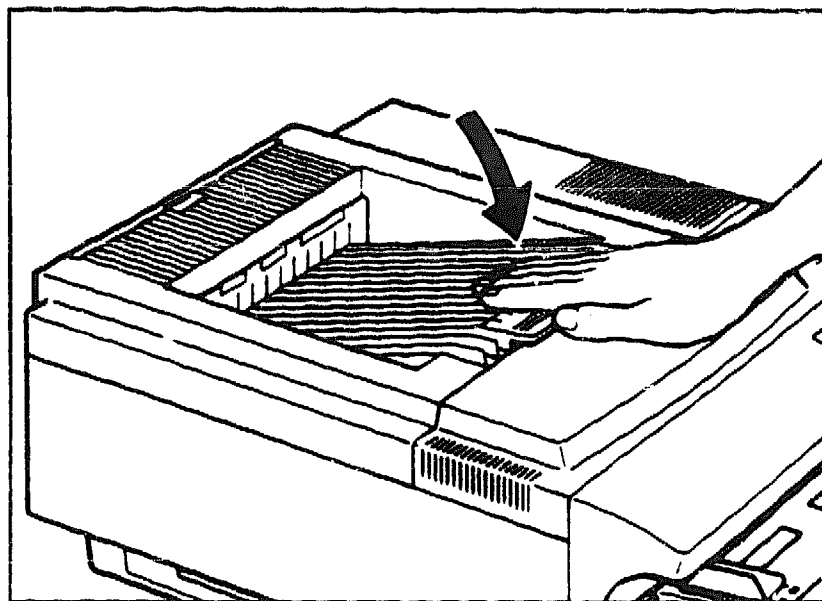7. Close the top cover by pushing down on the hand grip until the cover snaps into place.



MLO-004386



## Chapter 5

# Loading Paper

---

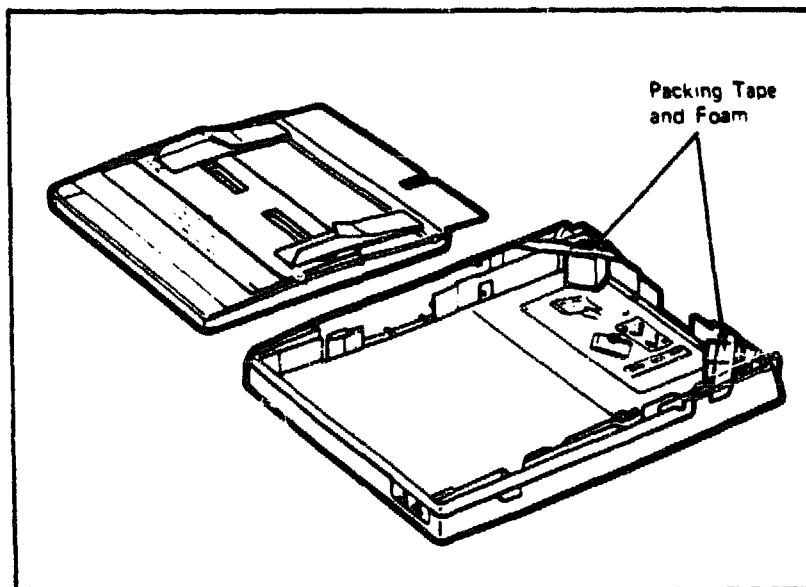
This chapter describes how to unpack the paper cassette and how to load paper into the DEClaser 2100 printer. The paper cassette holds about 200 sheets of 80 g/m<sup>2</sup> (21 lb) paper. For further information about the kind of paper to use, refer to the *DEClaser 2100 Printer Operator's Guide*.

The following instructions demonstrate how to unpack the paper cassette and how to load paper into the paper tray.

1. Remove the paper cassette from its shipping bag.


**NOTE:** *The paper cassette consists of a cover and a tray.*

2. Separate the cassette cover from the tray and remove all packing material from the tray.




MLO-004367

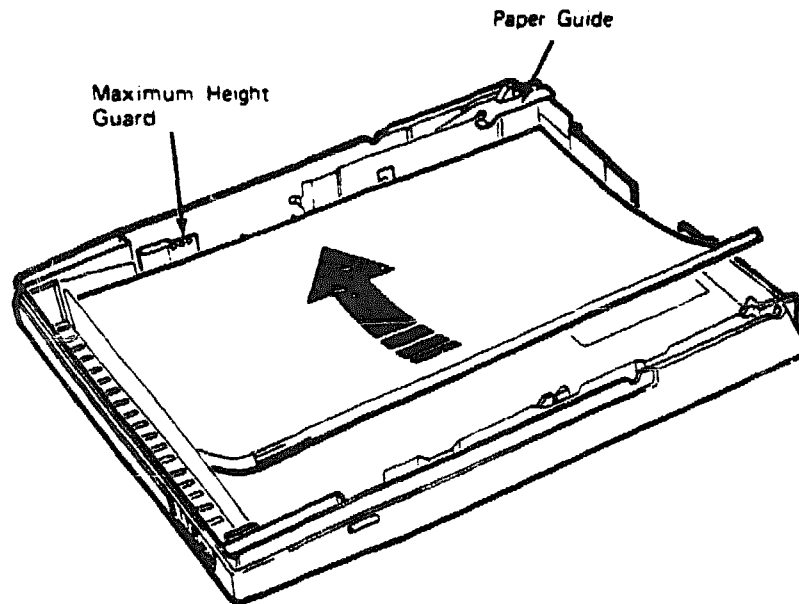3. Insert paper into the left side of the cassette being sure it is inserted below the paper guide and the maximum height guard.
- ✓ To prevent paper jams, do not place an excessive amount of paper into the tray. There should be a small amount of space between the paper and the maximum height guard.
  - ✓ Make sure the paper lies perfectly flat in the tray.




MLO-004368

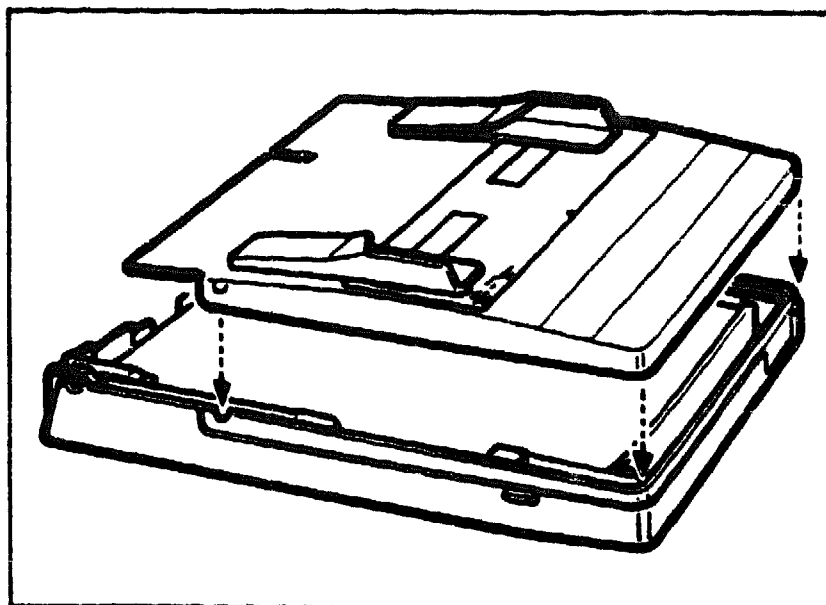

MLO-004369

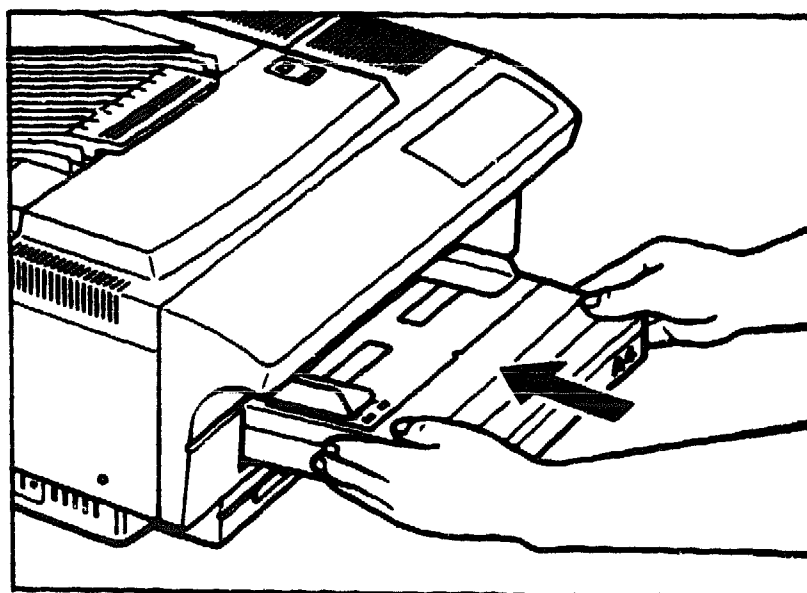5. Insert the paper cassette into the printer.



MLO-004370



## Chapter 6

# Connecting the Printer

---

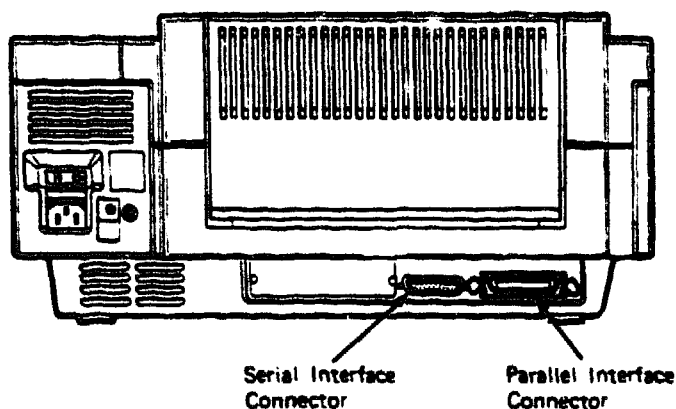
This chapter describes how to connect your printer to the host device and to a power source.

### 6.1 Connecting to the Host Device

Your printer is equipped with both a serial interface connector and a parallel interface connector.

See your system manager or computer operator to determine what interface connection to use.

**NOTE:** Refer to Appendix A for detailed information on connecting your DEClaser printer to different host devices.




MLO-004371



### 6.1.1 Serial Interface Connection

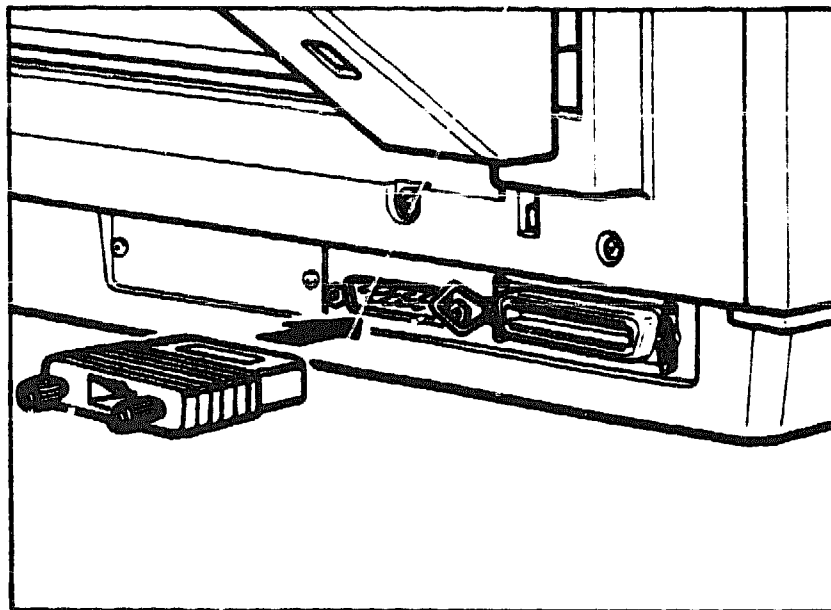
Follow these directions for the serial interface connection:

1. Plug one end of the BC16E cable into the host device with an adapter, if necessary. Appendix A lists all the necessary adapters.
2. Attach the H8571-E adapter, which came with your printer, to the serial port on the back of the printer.
  - ✓ Use a flathead screwdriver or your fingers to secure the adapter to the printer.



MLO-004372

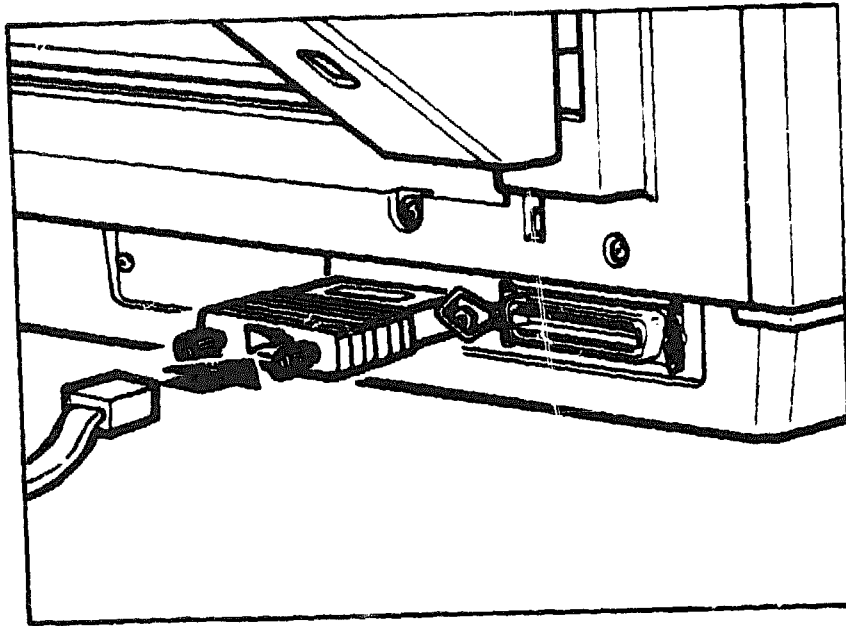3. Plug the remaining end of the BC16E cable into the H8571-E adapter.



MLO-004373

**NOTE:** *Refer to Appendix A for information on host devices that do not accept the BC16E cable.*


## 6.1.2 Parallel Interface Connection

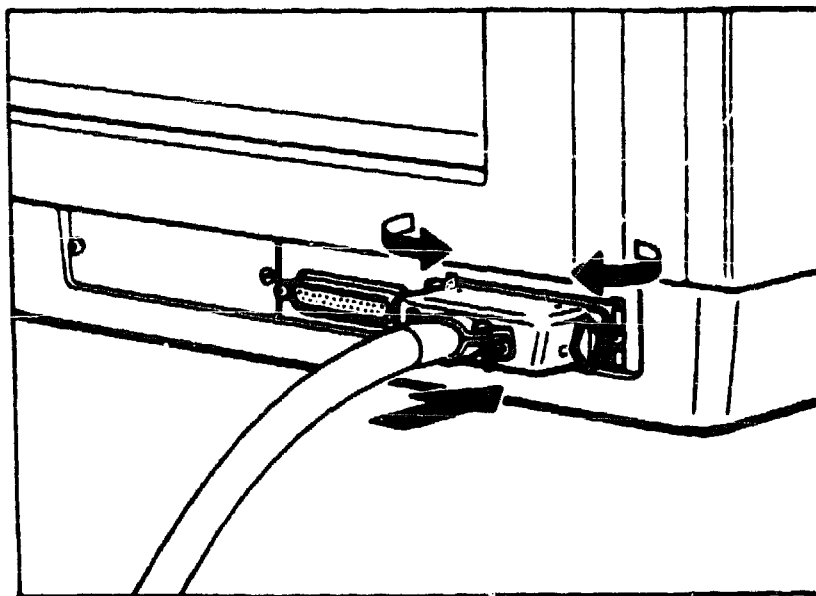The parallel interface cable (BC19M-10) is not included with your printer. To purchase it, call DECdirect at 1-800-DIGITAL.

Follow these directions for the parallel interface connection:

**CAUTION:** *Before connecting the parallel interface cable, be sure the host device you are connecting to is turned off.*

1. Plug the end of the BC19M-10 cable with the two screws attached to it firmly into the host device.
2. Tighten the two screws.
3. Plug the other end of the BC19M-10 cable into the printer.
4. Secure the cable by pressing the clips over the sides of the connector.




MLO-004374

## 6.2 Connecting to a Power Source

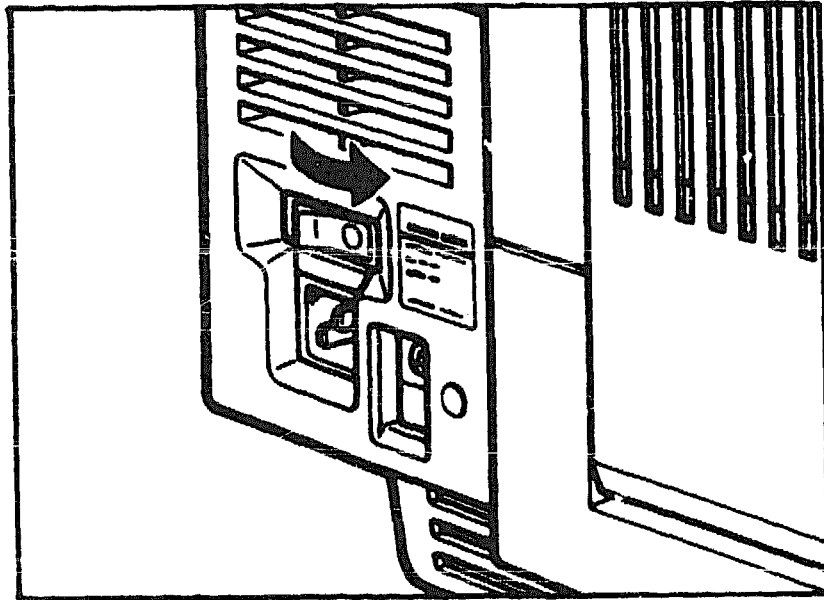**CAUTION:** *Be sure to check that the wall outlet voltage matches the voltage of your printer. Your electrician can make this determination for you if you do not know.*


The power cord receptacle and power switch are located at the rear of the printer.

1. Make sure the printer is in the OFF (O) position.



NLO-004375

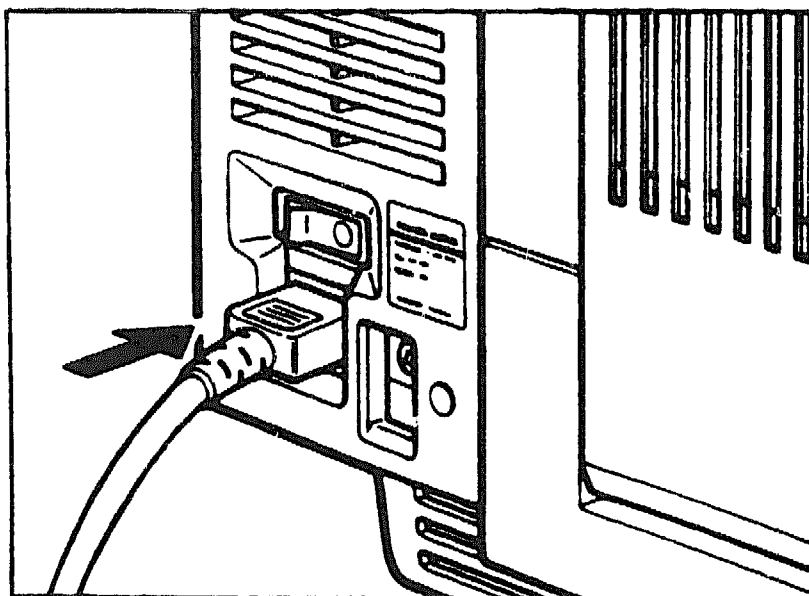2. Plug the power cord into the power cord receptacle just below the power switch.



MLO-004376

3. Insert the other end of the power cord into a power outlet.

**WARNING:** *Do not use an adapter plug on the power cord.*



## Chapter 7

# Verifying the Installation

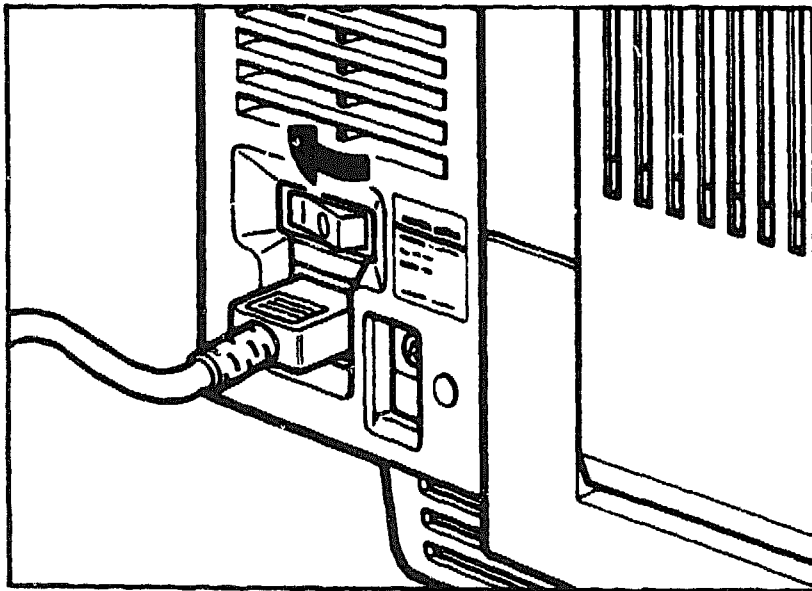
---

This chapter describes how to check the printer mechanism and how to print a test page.

### 7.1 Checking the Printer Mechanism


This section describes how to determine if the printer is running properly.

1. Press the power switch to the ON ( | ) position.



MLO-004377

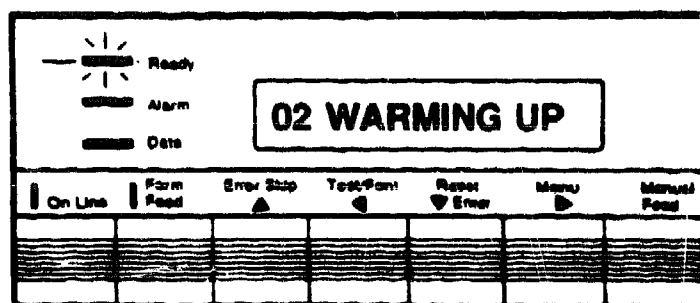- The Ready indicator on the operator panel flashes, the Alarm and the Data indicators light, and 02 WARMING UP appears on the liquid crystal display (LCD).



NLO-004378

When the printer warms up (about one minute), 00 READY DEC appears on the display, and the On Line and Ready indicators light.


You are now ready to print.



### 7.1.1 Testing the Printer

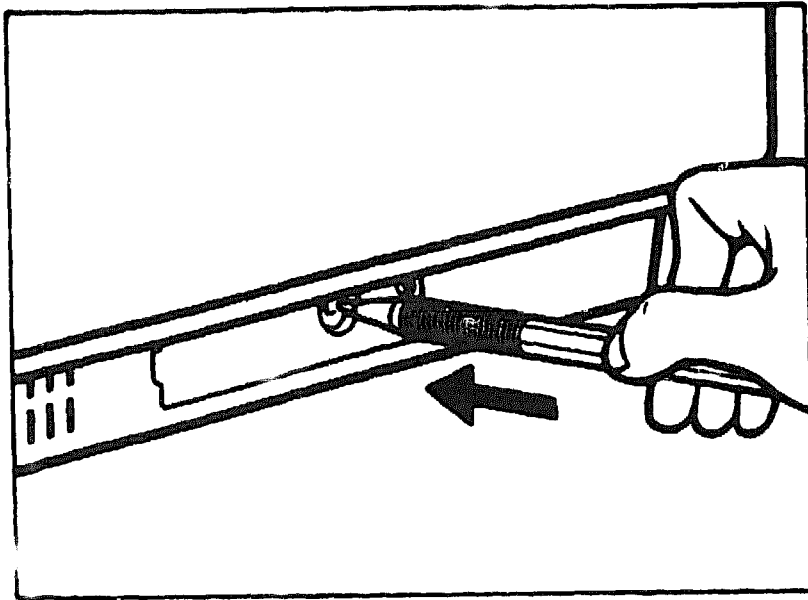
This section describes how to perform a printer self-test. The test page looks like the sample on the following page and only verifies that the printing mechanism is functioning properly.

1. Using a ballpoint pen or like instrument, press the self-test button located on the right side of the printer.



M.O.-004378

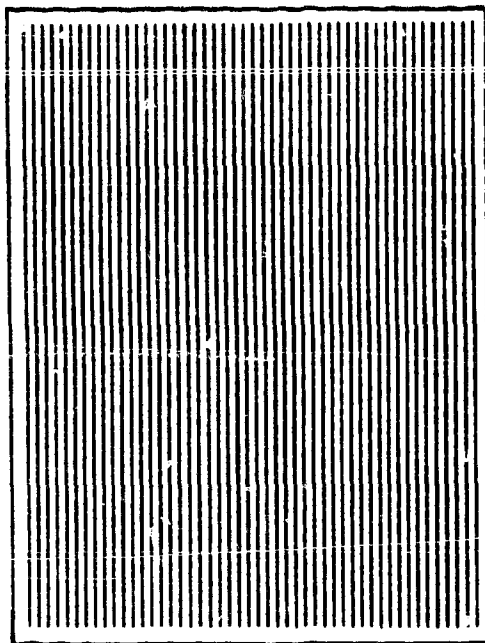- 15 **ENGINE TEST** appears on the LCD display, and a test image of vertical stripes prints.



MLO-004380

## 7.1.2 Producing a Test Print

The following test shows that the printer, with the exception of the interface unit, is working properly.

1. Press **On Line** to place the printer in the offline state.
2. Press **Test/Font** for 2 seconds.
  - 05 TEST PRINT A appears on the display, and the following test image prints.

**TEST PRINT**

Version : X0.33  
Total Ram : 2560 ( 512 + 2048 ) K byte  
Font Card : NONE

Page Count : 001588  
Free Ram : 002338 K bytes

**Current Settings**

**FEEDER**

feeder =Cass.

RAM = NVRAM

**COPY**

copy =01

RAM

**INITIAL**

macro =000  
paint =Partial  
paper =Letter

NVRAM

**LAYOUT**

offsetX ==0.0  
offsetY ==0.0  
autoNL =ON

( RAM = NVRAM )

**COMMAND**

message =English

( NVRAM )

**INTERFACE**

l/r =RS232C  
baud =4800  
rsmode =8S  
dtr =Fix-H  
xon/xoff =ON  
etx/ack =OFF

NVRAM

MLO-G04381

## **7.2 Conclusion**

**This concludes the installation of your DEClaser 2100 printer. Refer to your *DEClaser 2100 Printer Operator's Guide* for detailed instructions on features, maintenance, and troubleshooting.**



## Appendix A

# Cabling Information

---

This appendix describes the different cable combinations to use for connecting your printer to a host device. It also explains serial flow control and parallel communication.

### A.1 Cable Combinations

In the first column of Table A-1, the devices you can connect your printer to are grouped by the type of connector required. The second column lists the part numbers of the adapter and the cable required for each device. Determine what device you have and obtain the appropriate adapter. The third column describes how to connect the adapter and/or the cable to the printer.

**NOTE:** For a complete list of accessories and supplies and instructions on how to order them, refer to the *DEC Laser 2100 Printer Operator's Guide*.

**Table A-1: Cables and Adapters for Communication Connections**

Connector Type	Adapter and Cable	Instruction
<b>25-Pin Plug Devices</b>		
VAXstation 3200/3500 VT100 Series DECserver 200/MC (DSRVB-AA) CPU RS232 Ports	H8571-A and H8571-E <sup>1</sup> and BC16E <sup>1</sup>	Attach the H8571-A (25-pin-to-MMJ) adapter to these devices, then connect one end of the BC16E cable to the H8571-A. Attach the H8571-E adapter to the DEC Laser printer, then connect the other end of the BC16E cable to the H8571-E.

---

<sup>1</sup>H8571-E and BC16E (DECconnect cable) are included with the DEC Laser 2100 printer.

**Table A-1 (Cont.): Cables and Adapters for Communication Connections**

Connector Type	Adapter and Cable	Instruction
<b>9-Pin Plug Devices (DEC)</b>		
VT200 Series DECmate PRO Series VAXstation 2000	H8571-B and H8571-E <sup>1</sup> and BC16E <sup>1</sup>	Attach the H8571-B (9-pin-to-MMJ) adapter to these devices, then connect one end of the BC16E cable to the H8571-B. Attach the H8571-E adapter to the DECtaser printer, then connect the other end of the BC16E cable to the H8571-E.
<b>DEC423 (MMJ) Serial Devices</b>		
VAXmate MicroVAX 2000 DECserver 300 DECserver 200/DL (DSRVB-BA) VT300 Series CPU DEC423 Ports	H8571-E <sup>1</sup> and BC16E <sup>1</sup>	Attach one end of the BC16E cable to one of these devices. Attach the H8571-E adapter to the DECtaser printer, then connect the other end of the BC16E cable to the H8571-E.
<b>25-Pin Socket Devices</b>		
Rainbow Digital Modems	H8571-D and H8571-E <sup>1</sup> and BC16E <sup>1</sup>	Attach the H8571-D adapter to one of these devices, then connect one end of the BC16E cable to the H8571-D. Attach the H8571-E adapter to the DECtaser printer, then connect the other end of the BC16E cable to the H8571-E.

<sup>1</sup>H8571-E and BC16E (DECconnect cable) are included with the DECtaser 2100 printer.

**Table A-1 (Cont.): Cables and Adapters for Communication Connections**

Connector Type	Adapter and Cable	Instruction
<b>9-Pin Plug Devices (IBM PC/AT Type)</b>		
DECstation 210, 212 DECstation 316, 320 IBM PC/AT	H8571-J and H8571-E <sup>1</sup> and BC16E <sup>1</sup>	Attach the H8571-J adapter to one of these devices, then connect one end of the BC16E cable to the H8571-J. Attach the H8571-E adapter to the DECtaser printer, then connect the other end of the BC16E cable to the H8571-E. Use data transmit ready (DTR) flow control. Refer to the <i>DECtaser 2100 Printer Operator's Guide</i> .
<b>European DECstation Serial Port</b>		
200 Series	12-27591-01 Extender and H8571-A and H8571-E <sup>1</sup> and BC16E <sup>1</sup>	Connect the female end of the extender cable to the host device and the male end of the extender cable to the H8571-A. Attach the H8571-E adapter to the DECtaser printer, then connect one end of the BC16E to the H8571-A and the other end of the BC16E cable to the H8571-E.
300, 350 Series	H8571-A and H8571-E <sup>1</sup> and BC16E <sup>1</sup>	Attach the H8571-A adapter to one of these devices, then connect one end of the BC16E cable to the H8571-A. Attach the H8571-E adapter to the DECtaser printer, then connect the other end of the BC16E cable to the H8571-E.
<b>European DECstations Parallel Port</b>		
200, 300, 350 Series	BC19M-10	Connect the BC19M-10 to the DECtaser printer and to the host device.

<sup>1</sup>H8571-E and BC16E (DECconnect cable) are included with the DECtaser 2100 printer.



**Table A-1 (Cont.): Cables and Adapters for Communication Connections**

Connector Type	Adapter and Cable	Instruction
<b>Existing Cable</b>		
BC22D cable (already installed)	H8571-C and H8571-E <sup>1</sup> and BC16E <sup>1</sup>	Connect the H8571-C adapter plug to the socket of your printer's BC22D cable. Connect one end of the BC16E cable to the H8571-C adapter. Attach the H8571-E adapter to the DEClaser printer, then connect the other end of the BC16E cable to the H8571-E. The combination of the H8571-C adapter, the BC16E cable, and the H8571-E acts as a straight-through cable.
<sup>1</sup> H8571-E and BC16E (DECconnect cable) are included with the DEClaser 2100 printer.		

## A.2 Interface Programming Instructions

This section describes how to set up an IBM PC to interface with your printer.

### A.2.1 Serial Flow Control

If you are using an IBM PC or compatible and you want to use the optional serial port on your PC, follow these steps:

1. Edit your AUTOEXEC.BAT file by adding the following two lines:

```
mode com1:4800,n,8,1,p
```

```
mode lpt1:=com1:
```

where:

```
mode com1:4800,n,8,1,p
```

specifies that the first serial port (COM1) is used by the printer, that 4800 baud is the communication speed, that no parity is selected, that 8 data bits are selected, that 1 stop bit is used, and that the printer continuously retries on time-out errors.

```
mode lpt1:=com1:
```

reassigns the printer output to COM1, the first serial port.

**NOTE:** *On IBM personal computers and compatibles, printer output is normally directed to LPT1, the first parallel port.*

2. Connect the H8571-A adapter as described in Table A-1.
3. Refer to the *DEClaser 2100 Printer Operator's Guide* for instructions on how to select DTR flow control.

If you are using a 25-pin PC/SA with XON/XOFF, follow these steps:

1. Edit your AUTOEXEC.BAT file to contain the following two lines:

```
mode com1:4800,n,8,1,-,n
```

```
mode lpt1:=com1:
```

where:

```
mode com1:4800,n,8,1,-,n
```

specifies that the first serial port (COM1) is used by the printer, that 4800 baud is the communication speed, that no parity is selected, that 8 data bits are selected, that 1 stop bit is used, that the printer tries only once to connect, then time-out, and that the type weight is normal.

```
mode lpt1:=com1:
```

reassigns the printer output to COM1, the first serial port.

**NOTE:** On IBM personal computers and compatibles, printer output is normally directed to LPT1, the first parallel port.

2. Connect the H8571-A adapter as described in Table A-1.
3. Refer to the *DEClaser 2100 Printer Operator's Guide* for instructions on how to select XON/XOFF.

## A.2.2 Parallel Communication

If you are using an IBM PC, DECstation PC, or compatible and want to use the parallel port, follow these steps:

1. Refer to the *DEClaser 2100 Printer Operator's Guide* for instructions on how to select parallel operation.
2. Use Digital's BC19M-10 cable or the industry standard Centronics 25-pin D-shell cable to make the connection from the PC to the DEClaser 2100 printer.



# **DEClaser 2100<sup>plus</sup> Printer Operator's Guide**

**EK-DECLA-OG-001**

**Digital Equipment Corporation  
Maynard, Massachusetts**

---

**First Printing, June 1990**  
**Revised, July 1991**

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation.

Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

Any software described in this document is furnished under a license and may be used or copied only in accordance with the terms of such license. No responsibility is assumed for the use or reliability of software or equipment that is not supplied by Digital Equipment Corporation or its affiliated companies.

**Restricted Rights:** Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

© Digital Equipment Corporation 1991  
All rights reserved. Printed in U.S.A.

The Reader's Comments form at the end of this document requests your critical evaluation to assist in preparing future documentation.

The following are trademarks of Digital Equipment Corporation: BASIC Service, DECdirect, DECclear, DECmailer, DECmate, DECserver, DECservice, DECstation, EDT, LN03, MicroVAX, PRO, Rainbow, ReGIS, VAX, VAX DOCUMENT, VAXmate, VAXstation, VAX/VMS, VMS, WPS-PLUS, VT, and the DIGITAL Logo.

The following are third-party trademarks: BITSTREAM is a registered trademark of Bitstream, Inc. Centronics is a trademark of Centronics Data Computer Corporation. GC Times and CG Triunvirate are trademarks of AGFA Compugraphic Corporation. IBM and ProPrinter are registered trademarks of International Business Machines Corporation. LaserJet is a trademark of Hewlett-Packard Corporation. ITC Souvenir is a registered trademark of International Typeface Corporation. PostScript is a registered trademark of Adobe Systems, Inc. Tektronix is a registered trademark of Tektronix, Inc.

S1698

This document was prepared using VAX DOCUMENT, Version 1.2.

**FCC NOTICE:** This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following methods.

- Reorient the receiving antenna.
- Relocate the computer or peripheral with respect to the receiver.
- Move the computer or peripheral away from the receiver.
- Plug the computer or peripheral into a different outlet so that they are on different branch circuits than the receiver.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the booklet *How to Identify and Resolve Radio/TV Interference Problems*, prepared by the Federal Communications Commission helpful. This booklet is available from the U.S. Government Printing Office, Washington DC, 20402, Stock No. 004-000-00345-4.

To meet FCC requirements a shielded parallel cable is required to connect the device to a personal computer or other Class B device.

# Contents

---

## Preface

xi

## Chapter 1 Printer Components

---

1.1	Functions of the Printer Components . . . . .	1-1
1.2	Required Operating Space . . . . .	1-8

## Chapter 2 Operating Information

---

2.1	Powering the Printer On . . . . .	2-1
2.2	Powering the Printer Off . . . . .	2-3
2.3	Opening the Top Cover . . . . .	2-4
2.4	Closing the Top Cover . . . . .	2-6
2.5	Selecting the Output Tray . . . . .	2-7
2.5.1	Selecting the Top Output Tray (Facedown Print) . . . . .	2-8
2.5.2	Selecting the Rear Output Tray (Faceup Print) . . . . .	2-9
2.6	Loading Paper . . . . .	2-10
2.6.1	Adding Paper to the Cassette . . . . .	2-11
2.7	Loading Preprinted Media . . . . .	2-15
2.8	Feeding Media Manually . . . . .	2-15
2.8.1	Manually Feeding Paper, Labels, and Transparencies . . . . .	2-17
2.9	Using Duplex Printing . . . . .	2-23
2.10	Feeding Envelopes Manually . . . . .	2-29
2.10.1	Feeding Envelopes . . . . .	2-29
2.11	Adjusting the Print Density . . . . .	2-35
2.12	Printing the Engine Test Print . . . . .	2-38
2.13	Printing Test Print A . . . . .	2-41
2.14	Printing Test Print B . . . . .	2-45
2.15	Printing the Font List . . . . .	2-48
2.16	Using Control Representation Mode . . . . .	2-51



2.16.1	Entering Control Representation Mode .....	2-51
2.17	Resetting the Printer .....	2-52
2.18	Emulation Mode of Operation .....	2-53

## Chapter 3 The Control Panel

---

3.1	Using the Keypad in Keypad Mode .....	3-4
3.1.1	Entering Keypad Mode .....	3-4
3.2	Using the Keypad in Menu Mode .....	3-6

## Chapter 4 Printer Configuration

---

4.1	Entering Menu Mode .....	4-2
4.1.1	Using the Keypad in Menu Mode .....	4-3
4.2	Reading the Display in Menu Mode .....	4-4
4.2.1	Displaying Menu and Feature Selections .....	4-4
4.2.2	Displaying Menu Values .....	4-5
4.3	Printer Configuration Memory .....	4-6
4.3.1	Operating Memory .....	4-7
4.3.2	ROM (Read-Only Memory) .....	4-8
4.3.3	NVRAM (Nonvolatile Random-Access Memory) .....	4-9
4.3.4	RAM (Random-Access Memory) .....	4-10
4.4	Operational Flow in Menu Mode .....	4-10
4.4.1	Sample Procedure for Changing and Saving Values .....	4-12
4.5	Menu Descriptions .....	4-16
4.5.1	FEEDER Menu .....	4-18
4.5.2	LAYOUT Menu .....	4-19
4.5.2.1	Offset Position (offsetX, offsetY) .....	4-20
4.5.2.2	Automatic New Line (autoNL) .....	4-22
4.5.3	COPY Menu .....	4-22
4.5.4	COMMAND Menu .....	4-22
4.5.5	INITIAL Menu .....	4-23
4.5.5.1	Macro .....	4-24
4.5.5.2	Examples Using the Macro Feature .....	4-25
4.5.5.3	Paint Mode (paint) .....	4-26
4.5.5.4	Paper Size (paper) .....	4-26

<b>4.5.6</b>	<b>INTERFACE Menu</b> .....	<b>4-26</b>
<b>4.5.6.1</b>	<b>Interface Selection (i/f)</b> .....	<b>4-28</b>
<b>4.5.6.2</b>	<b>Baud Rate (baud)</b> .....	<b>4-29</b>
<b>4.5.6.3</b>	<b>RS232C Data Format (rsmode)</b> .....	<b>4-29</b>
<b>4.5.6.4</b>	<b>Data Terminal Ready (dtr)</b> .....	<b>4-29</b>
<b>4.5.6.5</b>	<b>Buffer Control (xon/xoff)</b> .....	<b>4-29</b>
<b>4.5.6.6</b>	<b>End of Text/Acknowledge (etx/ack)</b> .....	<b>4-30</b>

## **Chapter 5 Print Media**

---

<b>5.1</b>	<b>Paper Specifications</b> .....	<b>5-2</b>
<b>5.1.1</b>	<b>Special Considerations When Printing on Paper</b> .....	<b>5-3</b>
<b>5.2</b>	<b>Envelope Specifications</b> .....	<b>5-4</b>
<b>5.2.1</b>	<b>Special Considerations When Printing on Envelopes</b> .....	<b>5-7</b>
<b>5.3</b>	<b>Transparency Specifications</b> .....	<b>5-8</b>
<b>5.3.1</b>	<b>Special Considerations When Printing Transparencies</b> .....	<b>5-8</b>
<b>5.4</b>	<b>Label Specifications</b> .....	<b>5-9</b>
<b>5.4.1</b>	<b>Special Considerations When Printing on Labels</b> .....	<b>5-10</b>
<b>5.5</b>	<b>Paper Handling and Storage</b> .....	<b>5-10</b>
<b>5.5.1</b>	<b>Paper Handling</b> .....	<b>5-10</b>
<b>5.5.2</b>	<b>Paper Storage</b> .....	<b>5-11</b>

## **Chapter 6 Troubleshooting**

---

<b>6.1</b>	<b>Error Skip Procedure</b> .....	<b>6-1</b>
<b>6.2</b>	<b>Printer Status Messages</b> .....	<b>6-2</b>
<b>6.3</b>	<b>Operator Call Messages</b> .....	<b>6-4</b>
<b>6.4</b>	<b>Software Error Messages</b> .....	<b>6-5</b>
<b>6.5</b>	<b>Service Call Messages</b> .....	<b>6-8</b>
<b>6.6</b>	<b>Common Operating Problems</b> .....	<b>6-8</b>
<b>6.7</b>	<b>Paper Jams</b> .....	<b>6-12</b>
<b>6.7.1</b>	<b>Top and Output Paper Tray Paper Jams</b> .....	<b>6-13</b>
<b>6.7.2</b>	<b>Paper Feed, Transfer, and Fixing Assembly Paper Jams</b> ..	<b>6-18</b>

## **Chapter 7 Maintenance**

---

<b>7.1</b>	<b>Cleaning the Printer</b> .....	<b>7-1</b>
<b>7.1.1</b>	<b>Cleaning the Internal Surfaces</b> .....	<b>7-2</b>
<b>7.1.2</b>	<b>Cleaning the Primary Corona Wire</b> .....	<b>7-7</b>
<b>7.1.3</b>	<b>Cleaning the Transfer Corona Wires and Discharging Pins</b>	<b>7-13</b>
<b>7.2</b>	<b>Extending EP-S Cartridge Life</b> .....	<b>7-19</b>
<b>7.3</b>	<b>Replacing the EP-S Cartridge</b> .....	<b>7-20</b>
<b>7.4</b>	<b>Replacing the Ozone Filter</b> .....	<b>7-36</b>

## **Chapter 8 Service**

---

<b>8.1</b>	<b>Digital Equipment Corporation Services</b> .....	<b>8-1</b>
------------	---	------------

## **Appendix A DEClaser Printer Quick Reference Guide**

---

<b>A.1</b>	<b>Positioning Controls</b> .....	<b>A-3</b>
<b>A.2</b>	<b>Margins and Spacing</b> .....	<b>A-6</b>
<b>A.3</b>	<b>Set/Reset Modes</b> .....	<b>A-12</b>
<b>A.4</b>	<b>Fonts and Character Sets</b> .....	<b>A-14</b>
<b>A.5</b>	<b>Miscellaneous</b> .....	<b>A-20</b>

## **Appendix B Accessories and Supplies**

---

<b>B.1</b>	<b>Ordering Information</b> .....	<b>B-4</b>
------------	-----------------------------------	------------

## **Appendix C Specifications**

---

<b>C.1</b>	<b>Operating Specifications</b> .....	<b>C-1</b>
<b>C.2</b>	<b>Serial Interface Specifications</b> .....	<b>C-4</b>
<b>C.3</b>	<b>Parallel Interface Specifications</b> .....	<b>C-7</b>

## **Appendix D LN03 Compatibility**

---

<b>D.1</b>	<b>General Differences . . . . .</b>	<b>D-1</b>
<b>D.2</b>	<b>Printable Area Compatibility . . . . .</b>	<b>D-2</b>
<b>D.3</b>	<b>Protocol Compatibility . . . . .</b>	<b>D-2</b>

## **Glossary**

---

## **Index**

---

## **Figures**

---

<b>1</b>	<b>CDRH Label . . . . .</b>	<b>xvii</b>
<b>1-1</b>	<b>Components: Front/Right-Side View . . . . .</b>	<b>1-2</b>
<b>1-2</b>	<b>Components: Rear/Left-Side View . . . . .</b>	<b>1-4</b>
<b>1-3</b>	<b>Components: Inside the Printer . . . . .</b>	<b>1-6</b>
<b>1-4</b>	<b>Operating Space: Top View . . . . .</b>	<b>1-9</b>
<b>1-5</b>	<b>Operating Space: Side View . . . . .</b>	<b>1-9</b>
<b>2-1</b>	<b>Engine Test Print . . . . .</b>	<b>2-39</b>
<b>2-2</b>	<b>Test Print A . . . . .</b>	<b>2-42</b>
<b>2-3</b>	<b>Test Print B . . . . .</b>	<b>2-46</b>
<b>2-4</b>	<b>Font List . . . . .</b>	<b>2-49</b>
<b>3-1</b>	<b>Control Panel . . . . .</b>	<b>3-1</b>
<b>4-1</b>	<b>Sample of a Menu . . . . .</b>	<b>4-1</b>
<b>4-2</b>	<b>Menu Display . . . . .</b>	<b>4-5</b>
<b>4-3</b>	<b>Operating Memory . . . . .</b>	<b>4-7</b>
<b>4-4</b>	<b>Operational Flow Chart . . . . .</b>	<b>4-11</b>
<b>4-5</b>	<b>TEST PRINT A Verification . . . . .</b>	<b>4-15</b>
<b>4-6</b>	<b>Offset Positioning . . . . .</b>	<b>4-20</b>
<b>4-7</b>	<b>Offset Printout Samples . . . . .</b>	<b>4-21</b>
<b>5-1</b>	<b>Unacceptable Labels . . . . .</b>	<b>5-9</b>
<b>6-1</b>	<b>Paper Jam Areas . . . . .</b>	<b>6-13</b>
<b>7-1</b>	<b>Rocking the EP-S Cartridge . . . . .</b>	<b>7-20</b>
<b>C-1</b>	<b>RS232C Pin Assignments . . . . .</b>	<b>C-4</b>
<b>C-2</b>	<b>Serial Connections to Modem . . . . .</b>	<b>C-5</b>

C-3	Serial Connections Without Modem .....	C-6
C-4	Parallel Pin Assignment .....	C-9
C-5	Parallel Connections .....	C-9

## Tables

1-1	Printer Components: Front/Right-Side View .....	1-3
1-2	Printer Components: Rear/Left-Side View .....	1-5
1-3	Printer Components: Internal View .....	1-7
2-1	Legal-Size Coding Example .....	2-16
2-2	Test Print A .....	2-43
2-3	Printing Test Print A .....	2-44
2-4	Printing Test Print B .....	2-47
2-5	Printing the Font List .....	2-50
2-6	Entering Control Representation Mode .....	2-51
2-7	Resetting the Printer .....	2-52
2-8	Selecting Emulation Mode .....	2-53
3-1	Control Panel Functions .....	3-2
3-2	Entering Keypad Mode .....	3-4
3-3	Keypad Functions: Keypad Mode .....	3-4
4-1	Entering Menu Mode .....	4-2
4-2	Keypad Functions: Menu Mode .....	4-3
4-3	Recalling Factory Default Values from ROM .....	4-8
4-4	Saving Values in NVRAM .....	4-9
4-5	Saving Values in RAM .....	4-10
4-6	Changing and Saving Values .....	4-12
4-7	Menu Mode Features and Values .....	4-16
4-8	FEEDER Menu Features and Values .....	4-18
4-9	LAYOUT Menu Features and Values .....	4-19
4-10	COPY Menu Features and Values .....	4-22
4-11	COMMAND Menu Features and Values .....	4-22
4-12	INITIAL Menu Features and Values .....	4-23
4-13	User Preference Character Set .....	4-24
4-14	Initialization Message .....	4-25
4-15	Device Identification .....	4-25
4-16	Macro Feature Examples .....	4-25
4-17	INTERFACE Menu Features and Values .....	4-27

5-1	Cassette Feed Paper Sizes .....	5-2
5-2	Paper Specifications .....	5-3
5-3	Transparency Sizes .....	5-8
5-4	Transparency Specifications .....	5-8
6-1	Error Skip Procedure .....	6-2
6-2	Printer Status Messages .....	6-2
6-3	Operator Call Messages .....	6-4
6-4	Software Error Messages .....	6-6
6-5	Common Operating Problems .....	6-9
8-1	Questions to Consider Before You Call .....	8-2
A-1	DECVPFS Numeric Parameters .....	A-9
A-2	Character Set Identification .....	A-17
B-1	DEClaser 2100 plus Printer Accessories and Supplies .....	B-1
B-2	Ordering Within the U.S.A. ....	B-4
B-3	Outside the U.S.A. ....	B-4
C-1	Serial Interface Pin Assignment .....	C-4
C-2	Parallel Interface Pin Assignments .....	C-8

**PAGE x INTENTIONALLY LEFT BLANK**

## Preface

---

The DEClaser 2100 plus printer uses electrophotographic laser technology to print text and graphics at speeds up to 8 pages/minute with a density of 300 x 300 dots/inch. The printer consists of an engine (print mechanism) and a controller (formatter) that are driven from host-based software to provide shared printer access from the Digital network. The printer can serve as a personal desktop printer or as a shared group printer, and is designed to print from 3,000 to 10,000 prints per month.

Some of the features of the DEClaser 2100 plus printer include:

- Capacity for two (optional) external Digital ANSI-compliant font cartridges, emulation cartridges, or PostScript cartridges
- Font downline loading capability
- Support for both serial and parallel interfaces
- Convenient user maintenance (one replaceable supply cartridge)
- Ability to print on envelopes
- Manual feeding capability

The following options are available for the DEClaser 2100 plus printer:

- User-installable memory expansion (up to 3 MB)
- User-installable emulation cartridges
- Digital's ANSI-compliant font cartridges
- User-installable PostScript upgrade capability

## Software Requirements

Some features of the DEClaser 2100 plus printer may or may not be available depending on the operating software used by the host computer system and the application software that you are using. For information about the printer features you can use with your application program, consult your application program documentation.

For help choosing the right software package for your application needs, contact your Digital sales representative.



## Document Structure

This guide focuses mainly on the operational aspects of the DEClaser 2100 plus and explains how to use and maintain the printer hardware. For printer installation instructions, refer to the *DEClaser 2100 plus Printer Installation Guide* in this binder.

This guide describes the printer components and their functions, such as loading paper, changing the supply cartridge, and using the operator panel. It also covers the proper maintenance procedures to keep your printer operating efficiently, and basic troubleshooting techniques for correcting common operating problems. The appendices describe accessories and supplies, operating specifications, programming information, and contain a glossary of terms.

This guide is organized as follows:

- Chapter 1, Printer Components, describes the components and features of the DEClaser 2100 plus printer.
- Chapter 2, Operating Information, covers operating procedures such as powering the printer on, loading paper, and adjusting print density. It also describes how to manually feed print media.
- Chapter 3, The Control Panel, covers the use of the printer's control panel. It describes operational information about the indicators, keys, and message display.
- Chapter 4, Printer Configuration, explains how to configure the printer so that it can communicate with your computer system. You configure the printer by selecting features and their associated values from the various set-up menus. This chapter also describes how to save values in memory.
- Chapter 5, Print Media, describes the various printing media that can be used with the DEClaser 2100 plus, including paper, envelopes, transparencies, and labels. It also addresses the proper way to store and handle paper.
- Chapter 6, Troubleshooting, contains basic testing and troubleshooting techniques that allow you to correct common operating problems such as poor printing or paper jams.
- Chapter 7, Maintenance, explains how to care for and maintain the printer. It describes how to replace the electrophotographic supply (EP-S) cartridge and ozone filter, and how to clean the printer.
- Chapter 8, Service, explains how to obtain service if the printer needs repair.

- Appendix A, DEClaser Printer Quick Reference Guide, lists the DEClaser escape sequences used to program the printer. It is intended as a reference for the experienced programmer.
- Appendix E, Accessories and Supplies, describes the accessories and supplies available for the DEClaser 2100 plus printer and explains how to order them.
- Appendix C, Specifications, lists the power, environmental, and physical specifications of the DEClaser 2100 plus printer.
- Appendix D, LN03 Compatibility, highlights the major differences between the LN03 and DEClaser 2100 plus printers.
- The Glossary contains definitions of printer-related terms.

### **Ordering Additional Copies of This Documentation Set**

You can order additional copies of this documentation set from DECdirect as described in the ordering information section at the end of this guide. The ordering number for the documentation is EK-DECLA-DK.

The documentation set consists of one of each of the following:

- *DEClaser 2100 plus Printer Installation Guide*
- *DEClaser 2100 plus Printer Operator's Guide*
- Spine insert for the binder
- Three-ring binder

**NOTE:** *You cannot order the installation or operator's guide individually. You can only order the documentation set.*

### **Associated Documents**

Several other related manuals are available for use with the DEClaser 2100 plus printer. You can order these optional manuals from DECdirect as described in the ordering information section at the end of this guide.

Those optional manuals are:

- *Digital ANSI-Compliant Printing Protocol Level 3 Programming Reference Manual (EK-PPLV3-PM-001)*  
This manual is for application programmers who create software that produces Digital ANSI-compliant level 3 output. It describes printer protocol character processing and printer control functions.

- ***Digital ANSI-Compliant Printing Protocol Level 3 Programming Supplement (EK-PPLV3-PS-001)***  
Contains device specific information for programmers who create applications for Digital's ANSI-compliant level 3 devices. It is also for programmers who write applications with ANSI output that requires conversion to the PostScript page description language for printing on Digital printers.
- ***PostScript Translators Reference Manual for ReGIS and Tektronix 4010/4014 (AA-PBWFA-TE)***  
This manual is for programmers who need to convert ReGIS or Tektronix 4010/4014 documents to PostScript for printing on PostScript printers. The DEClaser 2100 plus has a PostScript option and can print Tektronix 4010/4014 and ReGIS files using the Common Print Symbiont (CPS).
- ***Digital Laser Printers Guide to Paper and Other Media (EK-LASER-GD)***  
This manual is for general users and contains detailed information about buying and storing print media (paper, envelopes, labels, and transparencies) that can be used with Digital laser printers.

## Conventions Used in This Guide

The following terms and conventions are used in this guide:

Convention	Meaning
NOTE	Notes provide important additional information.
CAUTION	Cautions provide information required to prevent damage to equipment.
WARNING	Warnings provide information to prevent personal injury.
Dash (—)	<p>A statement preceded by a dash describes the result of a procedural step. For example:</p> <ol style="list-style-type: none"><li>1. Insert the paper cassette by sliding it straight into the cassette slot.</li></ol> <p>— The Alarm indicator shuts off.</p> <p>— The display reads 00 READY.</p>
Check Mark (✓)	<p>A statement marked by a check mark indicates a special instruction related to a procedural step. For example:</p> <ol style="list-style-type: none"><li>1. Add paper to the cassette by placing it into the left side first, being sure the paper is inserted below the paper guide and maximum height guard.</li></ol> <p>✓ To prevent paper jams, do not load too much paper into the cassette. Leave a small amount of space between the paper and the maximum height guard.</p> <p>✓ Make sure the paper lies perfectly flat in the cassette.</p>
<div>Key</div>	<p>A key name is shown enclosed in a box to indicate that you press that key on the control panel. Key names are always shown in initial capital letters. For example:</p> <ol style="list-style-type: none"><li>1. Press <div>Menu</div> to access the printer menu selections.</li></ol>
UPPERCASE	<p>Printer status messages and operator call messages are shown in uppercase. For example:</p> <p>— The display reads 00 READY.</p> <p>— The display reads 11 PAPER OUT.</p>

Convention	Meaning
<b>Bold</b>	Items from the scrolling menus appear as they do on the display (uppercase, lowercase, or initial capital letters) with the menu item shown in bold type. For example:  1. Press <b>Menu</b> to enter Menu Mode.  — The menu display reads <b>FONT/FEED LAYOUT</b> .

## Safety Information

The DEClaser 2100 plus printer complies with all United States government safety regulations applicable to ozone gas emissions and laser beam light exposure. Read the following information to become familiar with ozone and laser safety.

### Ozone Safety

Ozone is a colorless gas (O<sub>3</sub>) that is a by-product of the electrophotographic process. The DEClaser printers use an ozone filter to remove the ozone generated by the printer. The ozone filter is replaced at 100,000 page intervals. See Appendix B for ordering information.

**WARNING:** *Be sure to replace the ozone filter every 100,000 pages and never operate the printer without the ozone filter in place. The filter removes ozone that could be hazardous to your health.*

## Laser Safety


The DEClaser 2100 plus printer complies with 21 CFR Chapter 1, Subchapter J, as a Class 1 laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. The printer does not emit hazardous light since the laser beam is totally enclosed during all modes of customer operation and maintenance.

**WARNING:** *Use of controls or adjustment procedures other than those specified in this manual may result in hazardous laser light exposure.*

## CDRH Regulations

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration implemented regulations for laser products on August 2, 1976. These regulations apply to laser products manufactured beginning August 1, 1976. Compliance is mandatory for products marketed in the United States. The label shown in Figure 1 indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

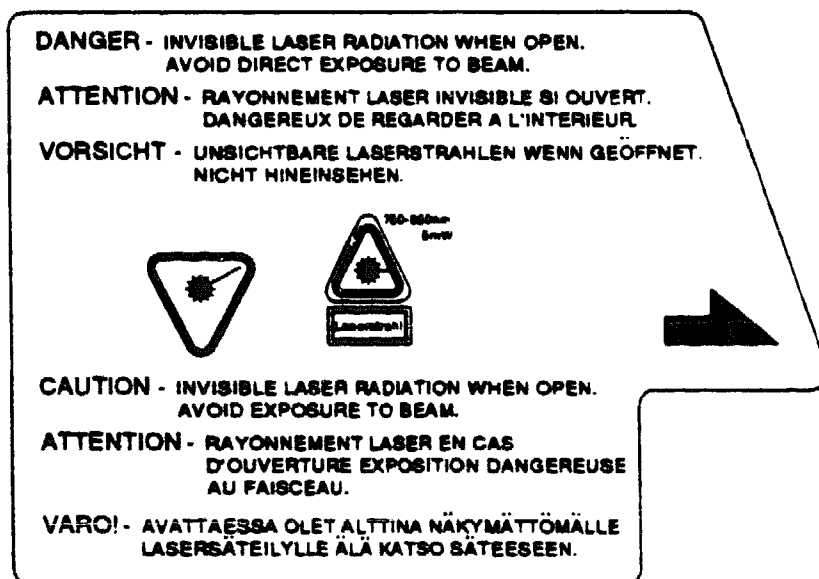**Figure 1: CDRH Label**



MLO-004945

**NOTE:** *This label is attached to the laser scanner unit inside the printer.*



# Chapter 1

## Printer Components

---


This chapter describes the components of the DEClaser 2100 plus printer and their functions. This chapter also provides information about the operating space required to perform day-to-day printing operations.

### 1.1 Functions of the Printer Components

Figures 1-1 through 1-3 show the printer components. Tables 1-1 through 1-3 explain the printer components and their functions.



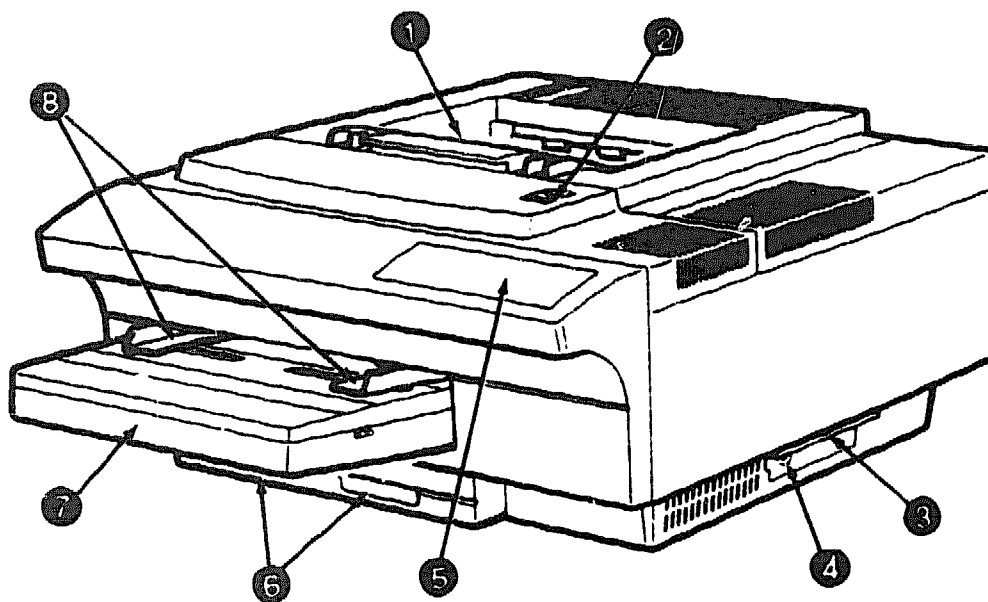**Figure 1-1: Components: Front/Right-Side View**



MLO-004826

**Table 1-1: Printer Components: Front/Right-Side View**


Component	Function
1. Top Output Tray	Printed sheets are automatically collated and stacked (facedown) here.
2. Top Cover Release Button	Pressing this button unlocks the top cover so it can be opened. The top cover is opened to perform certain printer functions such as adding a new EP-S <sup>1</sup> cartridge or clearing a paper jam. See Section 2.3 for more information about opening the top cover.
3. Carrying Grip Plate	The carrying grip plates are located on the right and left sides of the printer. These plates are grooved to provide a better nonslip surface when you are lifting the printer. Always place your hands under the carrying grip plates when lifting the printer.
4. Test Print Button	This button is used to print the Engine Test Print. The button is recessed. To depress it use a ballpoint pen or similar instrument. See Section 2.12 for more information about printing the Engine Test Print.
5. Control Panel	The control panel consists of a message display, indicator lights, and a keypad. The control panel provides information on printer status and can be used to perform certain printer functions such as resetting the printer or configuring the printer menus. See Chapter 8 for additional information about using the control panel while printing. Chapter 5 has information about using the control panel to change the various printer menus.
6. Font Cartridge Slots	These two slots accept the optional font, PostScript, and emulation program cartridges available for the printer.
7. Paper Cassette	The paper cassette automatically feeds paper to the printer. It can hold up to 200 sheets of 20 lb. (75 g/m <sup>2</sup> basis weight) paper. See Section 2.6 for more information about loading paper in the cassette.
8. Manual Feed Guide	The manual feed guide is part of the paper cassette cover. The feed guide allows you to manually feed paper, envelopes, transparencies, and labels into the printer. For more information about feeding print media manually, see Section 2.8.

---

<sup>1</sup>EP-S stands for electrophotographic supply.

---

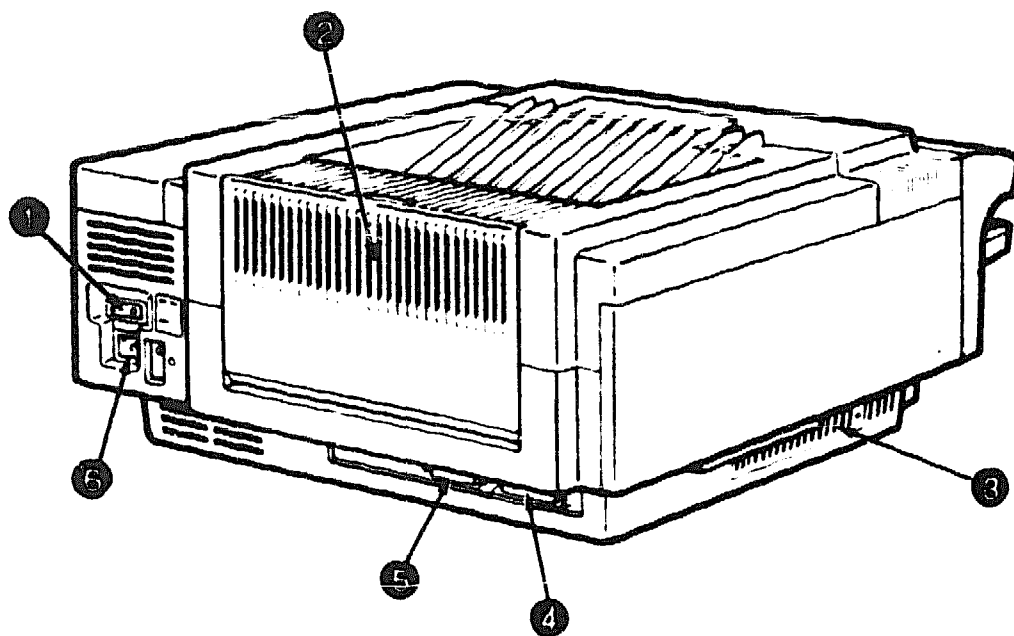**Figure 1-2: Components: Rear/Left-Side View**




MLO-004827

**Table 1-2: Printer Components: Rear/Left-Side View**

<b>Component</b>	<b>Function</b>
1. Power Switch	Powers the printer on or off. Pressing "I" turns power on; pressing "O" turns power off. To ensure that data is not lost, always be sure the display reads 00 READY and the Data indicator is off, before you power off the printer. See Section 2.1 and Section 2.2 for additional information about powering the printer on and off.
2. Rear Output Tray (shown closed)	The rear output tray is selected when you are using certain types of print media such as transparencies, labels, and envelopes. It can also be used when you want printed output to be stacked faceup. Refer to Section 2.5 for information about choosing the different output trays. See Section 2.5.2 for information about opening and using the rear output tray.
3. Memory Board Access Cover	Additional RAM (random-access memory) can be added to the printer in 1, 2, or 3 MB capacities. This access cover allows you to easily install the extra memory board. Refer to the documentation that comes with the optional memory board for installation instructions.
4. Parallel (Centronics) Interface Cable Connector	This connector is used when the interface cable from the host computer is a parallel cable. Refer to the <i>DEClaser 2100 plus Printer Installation Guide</i> for more information about connecting the printer to your computer.
5. Serial (RS232C) Interface Cable Connector	This connector is used when the interface cable from the host computer is a serial cable. Refer to the <i>DEClaser 2100 plus Printer Installation Guide</i> for more information about connecting your computer to the printer.
6. Power Cord Receptacle	This is where the power cord is connected to the printer.

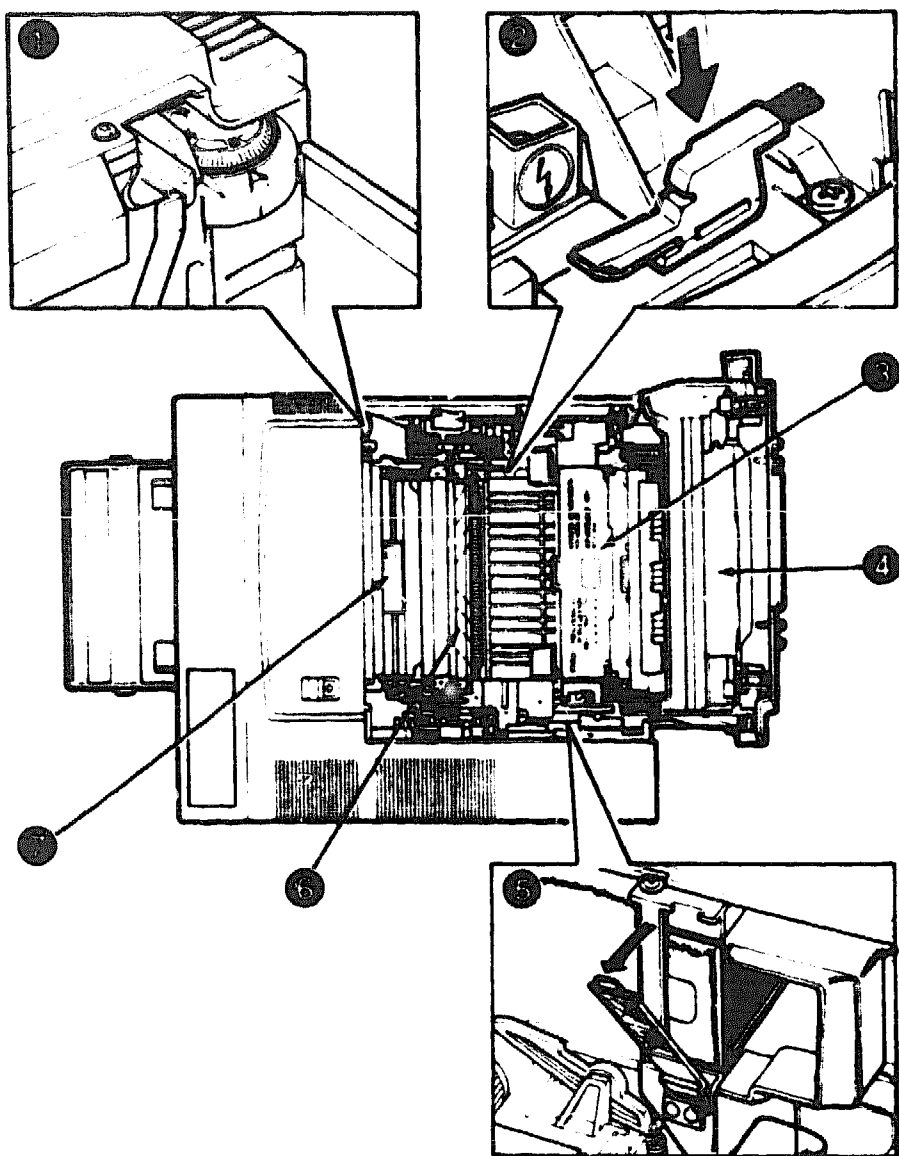**Figure 1-3: Components: Inside the Printer**



ML O-004878

**Table 1-3: Printer Components: Internal View**

Component	Function
1. Print Density Dial	Has a range of 1-9 to adjust the print density. Selecting the lower numbers results in heavier or darker print density. For most printing applications the dial can be set to 7. See Section 2.11 for additional information about setting the print density.
2. Cleaning Brush	The (green) cleaning brush has two cleaning surfaces: The brush end, which is used to clean the discharging pins on the transfer corona assembly; and the fabric end, which is used to clean the primary corona wire in the EP-S cartridge. See Chapter 7 for more information about using the cleaning brush.
3. Fixing Assembly	The fixing assembly consists of a heat roller, a pressure roller, and a roller cleaner. Toner is bonded to the paper as it passes between the heat and pressure rollers. The roller cleaner removes excess toner that may accumulate on the heat roller. The roller cleaner is replaced each time a new EP-S cartridge is installed. Each EP-S cartridge comes with replacement instructions, or you can refer to Section 7.3 for more information about replacing the roller cleaner.
4. EP-S Cartridge	The EP-S cartridge contains a photo-sensitive drum, the primary charge corona wire, a drum cleaning blade, toner, and a toner application roller. When the 1C TONER LOW message first appears, it could mean that the toner is not being distributed evenly. Rock the cartridge to redistribute the toner (see Section 7.3). If the 16 TONER LOW message continues to be displayed after you rock the cartridge, it means the EP-S cartridge has run out of toner and you should replace it. Each EP-S cartridge comes with replacement instructions, or see Section 7.3 for instructions if necessary.
5. Ozone Filter	Removes ozone generated by the printer. The ozone filter is replaced every 100,000 pages. The page count is shown on Test Print A (see Section 2.13). See Section 7.4 for replacement instructions.  <b>WARNING:</b> Do not operate the printer without the ozone filter in place. The filter removes ozone that could be hazardous to your health.


**Table 1-3 (Cont.): Printer Components: Internal View**

<b>Component</b>	<b>Function</b>
6. Transfer Corona Assembly	Contains a corona wire that places a negative charge on the paper as it passes over the wire. This negative charge attracts the (positively charged) toner from the photo-sensitive drum in the EP-S cartridge to the paper. Keep the transfer corona wire clean at all times to ensure optimum print quality. See Section 7.1.3 for information about cleaning the transfer corona wire.
7. Paper Transfer Guide	Ensures that paper is properly routed from the cassette to the transfer corona assembly. You can also open the paper transfer guide to access paper jams that occur in that area. Lift its green handle to remove the jammed paper.

## **1.2 Required Operating Space**


Always allow ample space around the printer to perform day-to-day printing operations. Figure 1-4 and Figure 1-5 show the minimum amount of space required to perform these operations. See the *DEClaser 2100 plus Printer Installation Guide* for additional information about location requirements and environmental conditions.

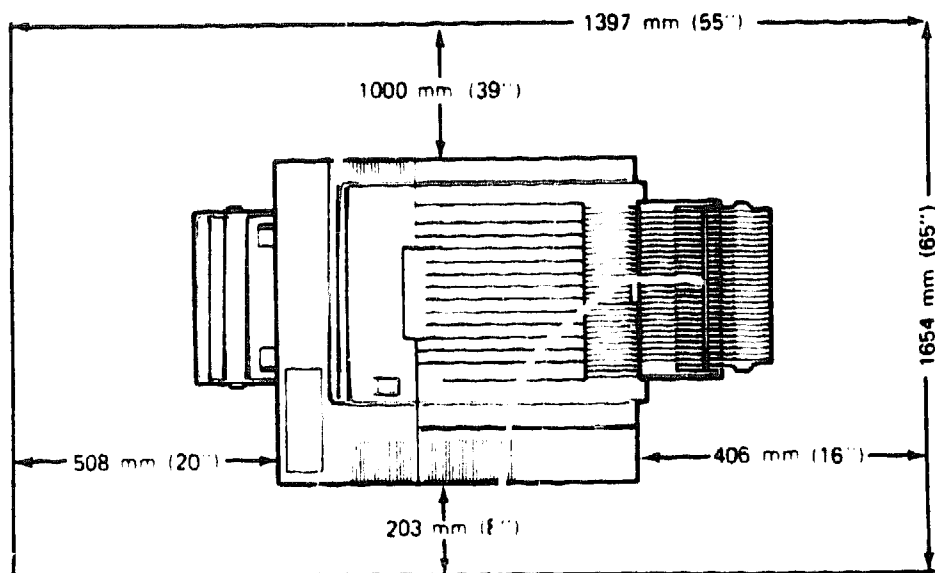**Figure 1-4: Operating Space: Top View**



MLO-004346

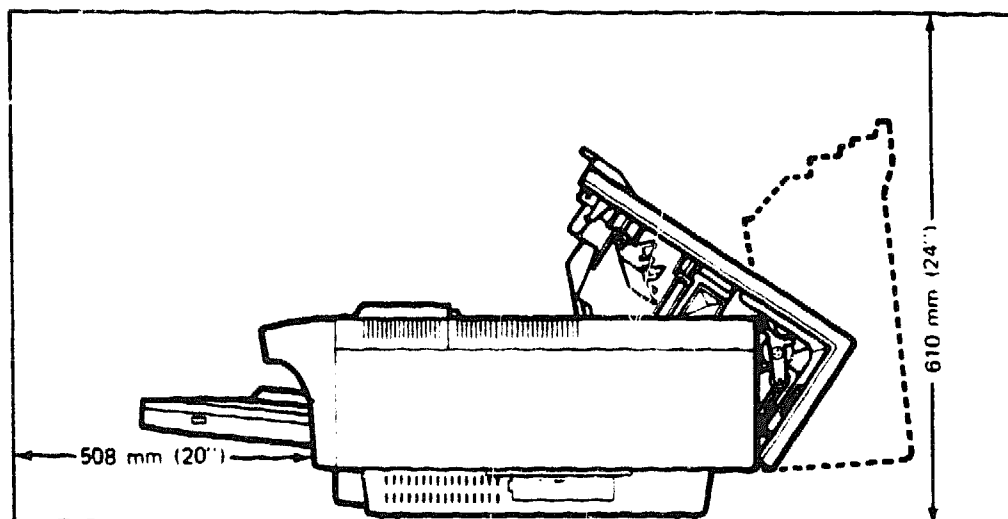**Figure 1-5: Operating Space. Side View**



MLO-004844





## Chapter 2

# Operating Information

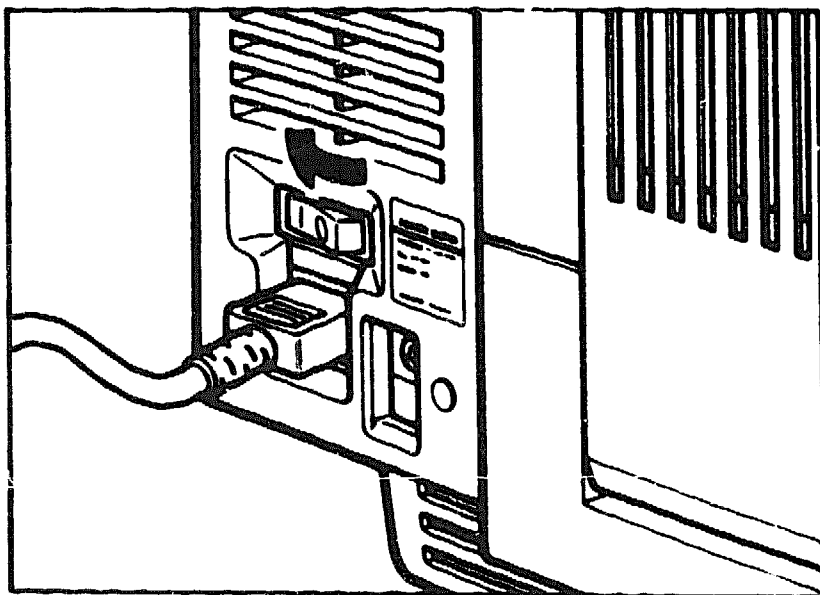
---

This chapter provides the operating information necessary to perform day-to-day printer operations. It covers typical tasks such as adding paper, selecting an output tray, or powering the printer on and off. This chapter also covers manual feed operation for all print media.

### 2.1 Powering the Printer On

Power the printer on using the following procedure.

1. Press the power switch on the back of the printer to the I (ON) position.



1A, 0-0043 11

**You should observe the following when you power on the printer:**

- All control panel indicators light for a moment.**
- The Ready indicator flashes and the display reads 02 WARMING UP (assuming that the printer has cooled below operating temperature before it is powered on).**
- The Online and Ready indicators remain on and the display reads 00 READY DEC.**

**NOTE:** *The display reads 00 READY DEC only if you are using Digital's ANSI-Compliant Printing Protocol level 3 (PPL3), which is the factory default setting. If you are using an optional protocol such as PostScript or CaPSL, the display shows the protocol being used. For instance, if you are using PostScript protocol, the display reads PS READY/IDLE. Since several protocols can be used with the DEC Laser 2100 plus printer, the remainder of this manual shows the ready message as 00 READY.*

**If the printer does not power on correctly, refer to Chapter 6 for troubleshooting information.**

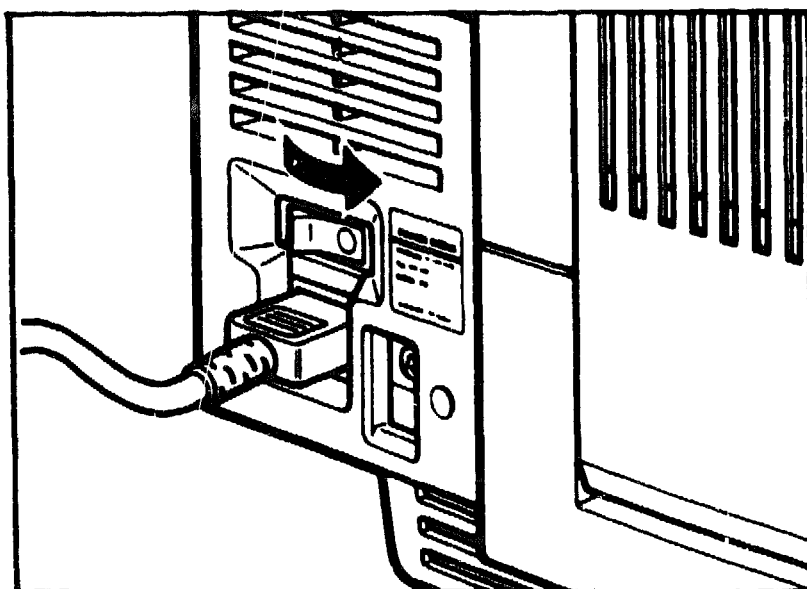
## 2.2 Powering the Printer Off

Power the printer off using the following procedure.

1. Be sure the printer is not printing and that the Data indicator is not on.

**CAUTION:** *Do not power the printer off while it is printing. Powering the printer off during printing causes paper jams and loss of data. Powering the printer off while the Data indicator is on causes the data in the print buffer to be lost.*

2. Press the power switch on the back of the printer to the O (OFF) position.




MLO-U04529

**NOTE:** *After powering the printer off, always wait at least two seconds before you power the printer back on. This waiting period ensures that the printer will initialize (cycle) properly when it is powered back on.*

## 2.3 Opening the Top Cover

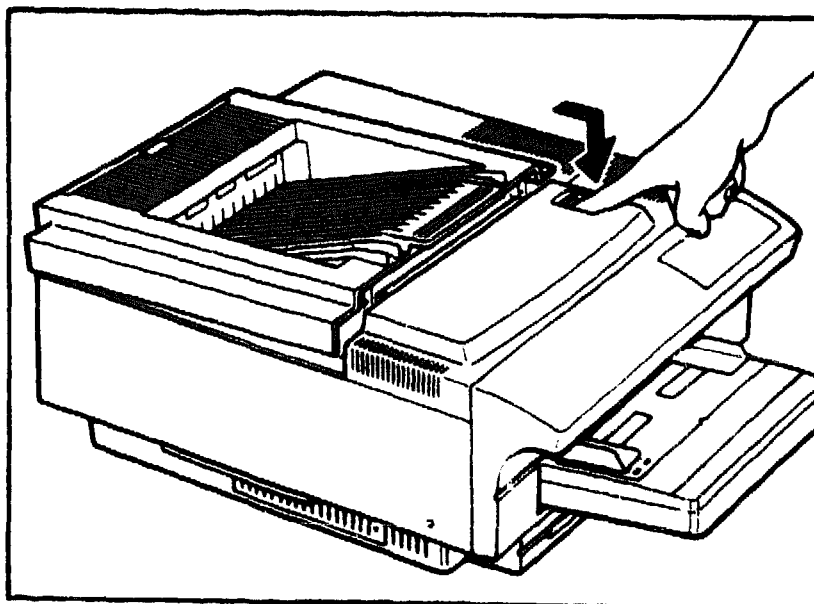
Open the top cover using the following procedure.

1. Press the release button forward and then down.
  - The top cover releases and opens slightly.



MLO-004830

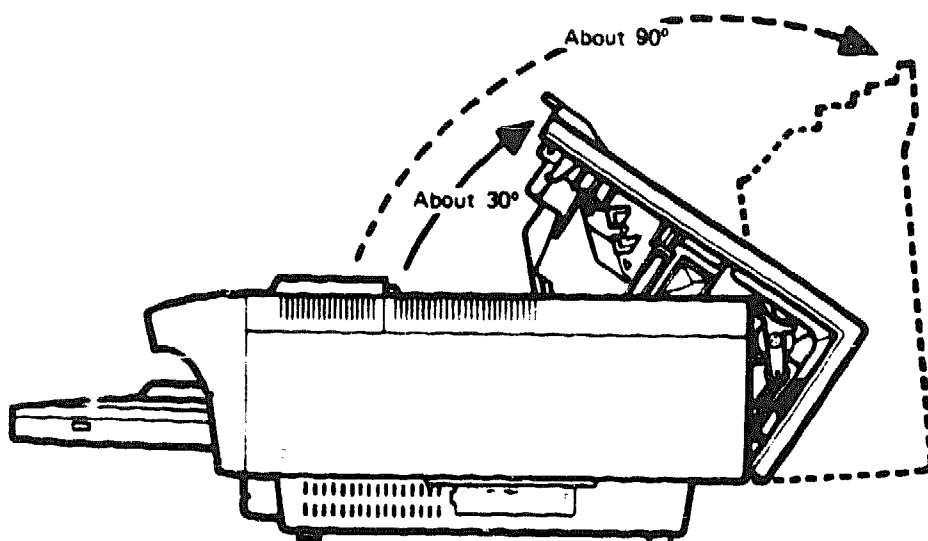2. Lift the top cover open to the halfway position (about 30°) or to the upright position (about 90°).




MLO-004831

- ✓ The halfway position is intended for:
  - Replacing the EP-S cartridge
  - Adjusting the print density dial
- ✓ The upright position is intended for:
  - Replacing the fixing roller cleaner
  - Replacing the ozone filter
  - Clearing paper jams
  - Cleaning the inside of the printer

## 2.4 Closing the Top Cover

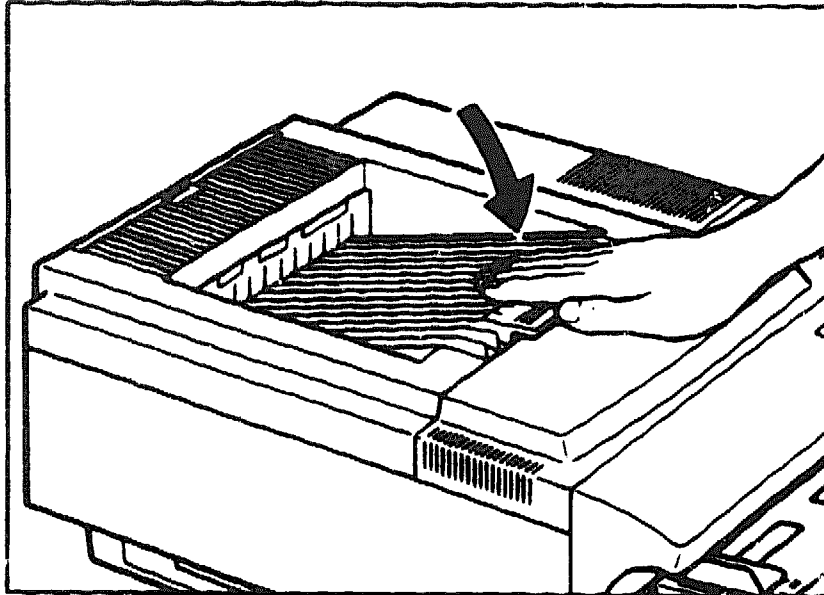Close the top cover using the following procedure.

1. Gently lower the cover and push down on the hand grip until the cover latches securely in place.




MLO-004388


## 2.5 Selecting the Output Tray

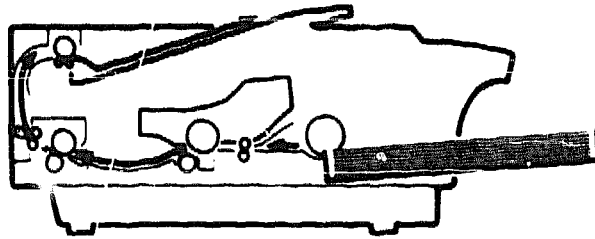To select the paper output tray, you position the rear output tray to the open or closed position.

**NOTE:** *You cannot select the output paper tray through a command from the host computer; opening or closing the rear output tray is the only way to select the output tray.*



Facedown Print

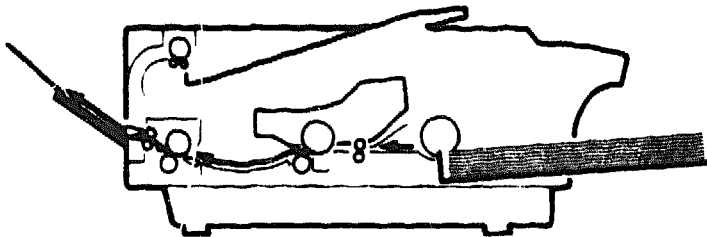

Faceup Print

MLO-004832

Printed paper is stacked either facedown or faceup depending on the output tray selected. When the rear output tray is closed, printed paper is delivered facedown to the top output tray. This allows your print job to be collated in the correct page order.

When the rear output tray is opened, printed paper is delivered faceup to that tray. Although the rear output tray can be used to stack paper faceup from the cassette, it is used primarily to stack manually fed envelopes, transparencies, labels, or heavier weight (thicker) papers. See Section 2.8 for information about manually feeding print media.


**CAUTION:** *Do not try to change the output tray while the printer is printing. Changing the output tray while printing causes paper jams.*



### 2.5.1 Selecting the Top Output Tray (Facedown Print)

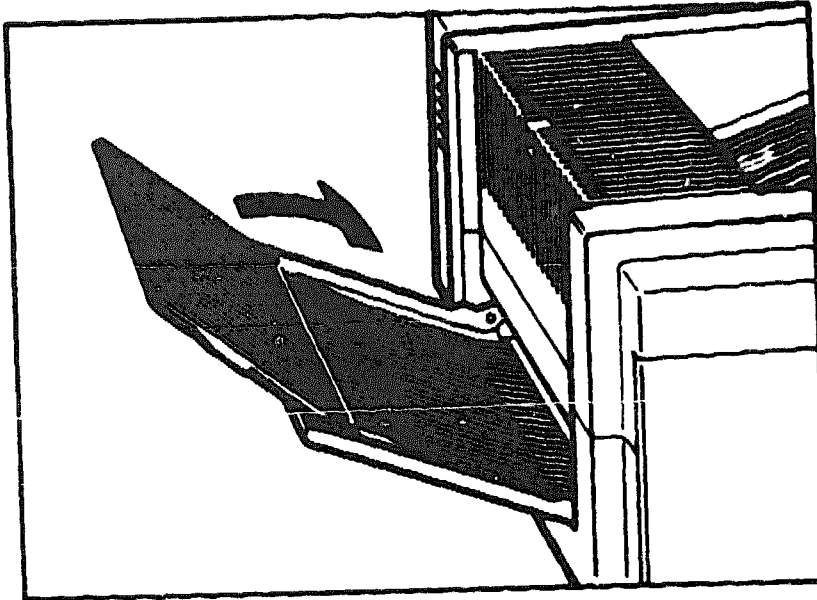
If the rear output tray is not open, the printer sends printed paper facedown to the top paper tray. If the rear output tray is open, use the following procedure to select the top output tray.

1. Fold in the extension tray.



MLC-004833

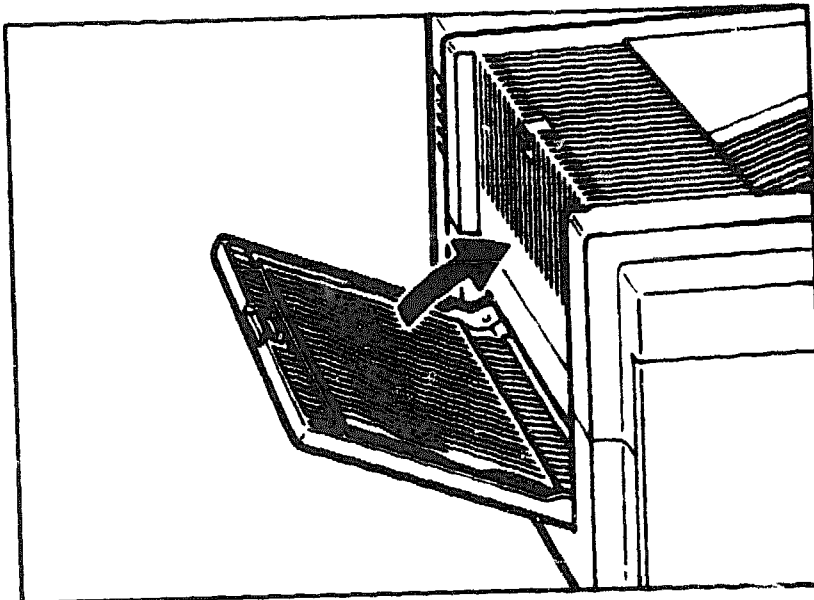2. Close the rear output tray.




MLC-004834

## 2.5.2 Selecting the Rear Output Tray (Faceup Print)

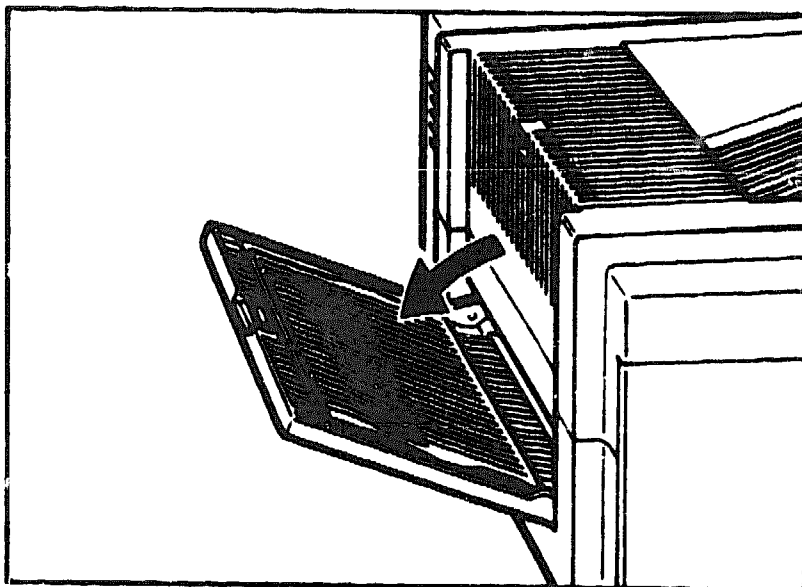
Use the following procedure to select the rear output tray.

1. Open the rear output tray.



MLO-004835

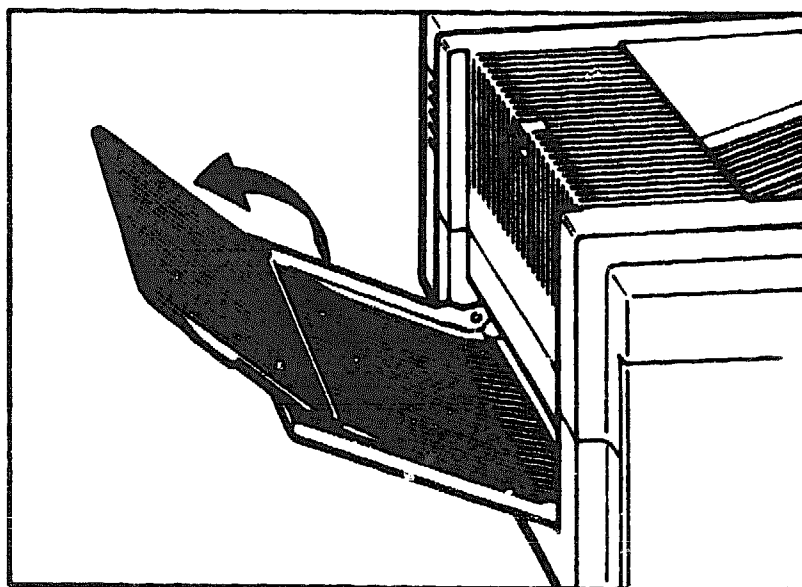2. Fold out the extension tray.



MLO-004836

## 2.6 Loading Paper

The printer comes standard with either an A4-size (210 mm x 297 mm) or letter-size (8 ½ in. x 11 in.) paper cassette, depending on the country it is shipped to. Optional paper cassettes are available that can accommodate the following print media:

- Legal-size paper (8 ½ in. x 14 in.)
- Executive-size paper (7 ¼ in. x 10 ½ in.)
- Envelopes

For ordering information about optional paper cassettes, see Appendix B.

The paper cassette can hold up to 200 sheets of 75 g/m<sup>2</sup> basis weight (20 lb.) paper. It also incorporates a convenient paper feed guide on its cover that can be used to manually feed paper, envelopes, transparencies, and labels. See Section 2.8 for information about feeding print media manually.

Here are some general guidelines to follow about the paper used in the printer.

- Use only high-quality paper such as the papers listed in Appendix C.
- Avoid using any paper that is creased, folded, punched, clipped, stapled, or damaged.
- To prevent paper curl (a curved bend in the paper), stack the paper on a flat surface for storage.
- Prevent changes to the moisture content of the paper by storing it properly and rewrapping unused portions. Do not store paper directly on the floor.

Complete specifications for print media are in Chapter 5. For more detailed information, consult the *Digital Laser Printers Guide to Paper and Other Media* (see Appendix B for ordering information).

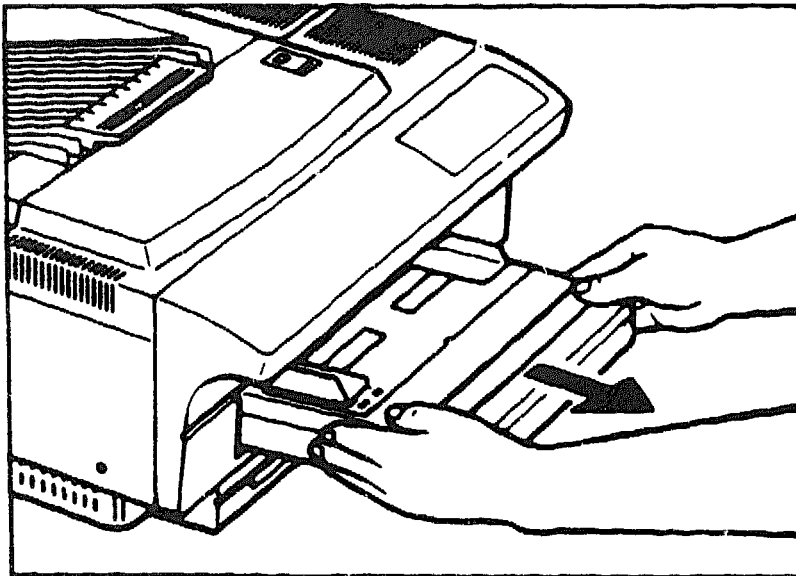
## 2.6.1 Adding Paper to the Cassette

Add paper to the cassette using the following procedure.

1. Check to see that the printer is not printing and that the display reads 00 READY (or 11 PAPER OUT) before removing the paper cassette.


**CAUTION:** *Do not remove the paper cassette while the printer is printing. Removing the paper cassette during printing can damage the printer.*

2. Remove the empty cassette by pulling it straight out from the printer.
  - The display reads 11 PAPER OUT.
  - The Alarm indicator lights.




MLO-004837

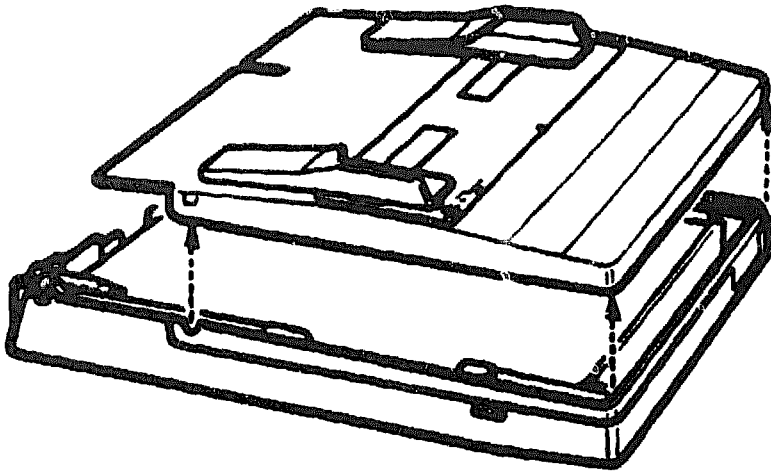3. Remove the cassette cover by lifting it off.




MLO-004838

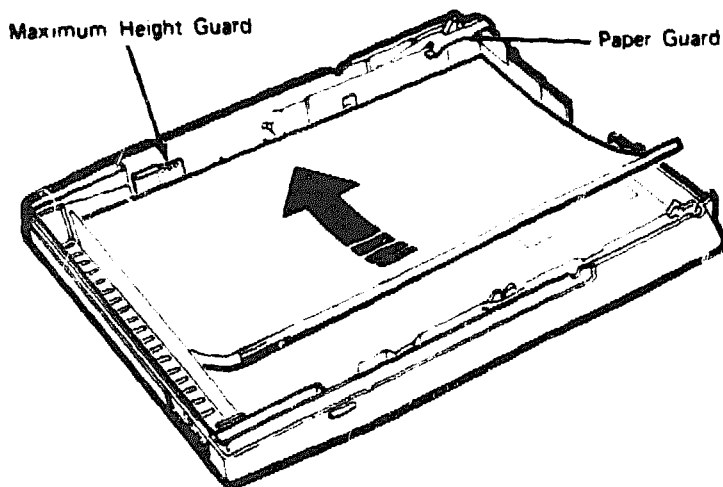4. Insert paper into the left side of the cassette first, being sure it is inserted below the paper guide and maximum height guard.
- ✓ To prevent paper jams, do not load too much paper into the cassette. Leave a small amount of space between the paper and the maximum height guard.
  - ✓ Make sure the paper lies perfectly flat in the cassette.



MLO-004839

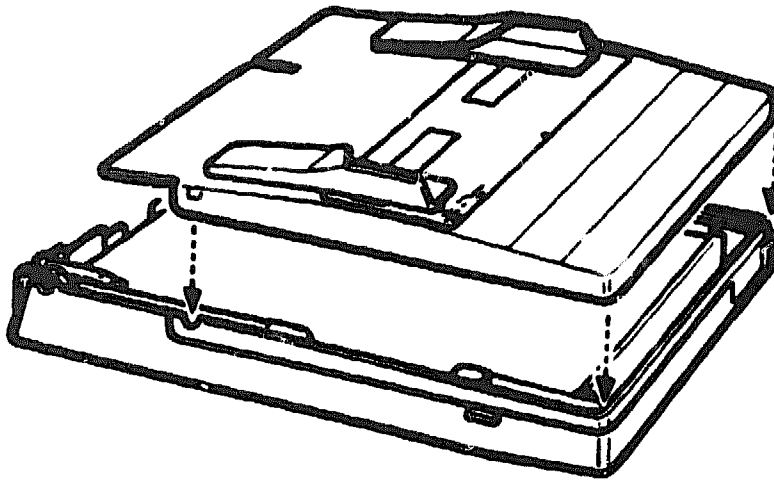
5. Replace the cover on the cassette.



MLO-004840

6. Insert the paper cassette into the printer.

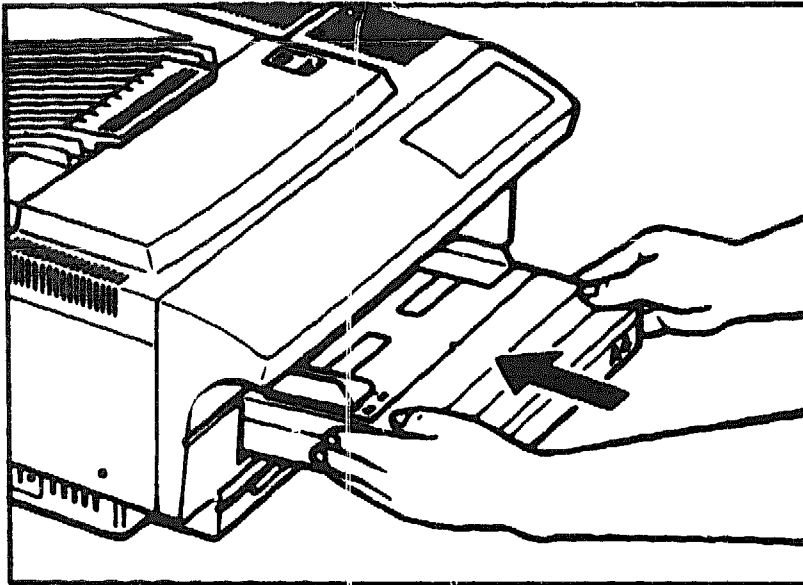- The Alarm indicator shuts off.
- The display reads 00 READY.



MLD-004370

## 2.7 Loading Preprinted Media

To print forms, letterhead paper, or punched paper in simplex mode, load the media faceup, with the top edge of the paper nearest to the printer.

## 2.8 Feeding Media Manually

The paper feed guide on the cover of the cassette enables you to manually feed paper, labels, transparencies, and envelopes into the printer. The paper feed guide also allows you to print on odd-size paper that cannot be used in the cassette. Duplex (two-sided) printing is also possible through manual feed operation (see Section 2.9).

Although labels and transparencies are usually fed manually, high-quality labels and transparencies, such as those sold through DECdirect, can also be fed automatically from the cassette. Check the media specifications in Chapter 5 for additional information about labels and transparencies.

Not all media can be fed automatically from the cassette. You must feed the following print media into the printer manually:

- Nonstandard-sized papers from 100 mm x 190 mm (3.9 in. x 7 ½ in.) to 216 mm x 356 mm (8 ½ in. x 14 in.) that do not fit in the cassette).
- Thicker papers whose basis weight is from 84 g/m<sup>2</sup> to 135 g/m<sup>2</sup> (22 lb. to 36 lb.)
- Envelopes (unless you are using the special envelope cassette)

You can invoke manual feed operation in three ways:

- Using the **Manual Feed** key on the control panel.
- Selecting the Manual value in the FEEDER menu.
- Sending a command from the host computer.

When feeding paper manually, you need to tell the printer the paper size you are using so that printing occurs in the proper area on the page. For A4-size and letter-size paper, set the paper (size) feature in the INITIAL menu (Table 4-12) and press Reset. The paper feature sets up the printing coordinates for manual feed operation according to the value selected: either A4 or letter. This allows the printer to print within the correct boundaries on the sheet of paper.



For paper sizes other than A4 or letter, you must use commands from the host computer that tell the printer the paper size you are using. These commands tell the printer where to print on the page. An example of this would be printing on legal-size paper. Since the printer does not recognize the larger legal-size paper, you must send it the proper commands (escape sequences) to print correctly on the page. These commands should precede the data in the file to be printed.

The following command line contains instructions to print on legal-size paper in manual feed mode. This example is set up to print a file on an 8 1/2 in. x 14 in. sheet of paper in portrait mode using manual feed. Table 2-1 describes each escape sequence in the example.

```
<ESC>[7<SP>I<ESC>[99;2;2550;4200<SP>(<ESC>[8<SP>J<ESC>[99!v
```

**Table 2-1: Legal-Size Coding Example**

Escape Sequence	Name of Command	Description
<ESC>[7<SP>I	SSU (Size Select Unit)	Units can be pixels, deci-points, or centipoints. This example uses pixels.
<ESC>[99;2;2550;4200<SP>(<	DECSSS (Set Sheet Size)	Defines manual feed input and the width (2550 pixels = 8 1/2 in.) and length (4200 pixels = 14 in.) of the paper.
<ESC>[8<SP>J	PFS (Page Format Select)	Selects portrait mode of printing and sets the margins for the larger size paper.
<ESC>[99!v	DECASFC (Automatic Sheet Feeder Control)	Selects the manual feed mode of operation.  <b>NOTE:</b> Manual feed mode can also be selected from the FEEDER Menu, or from the control panel using <span style="border: 1px solid black; padding: 0 2px;">Manual Feed</span> .

**NOTE:** If you are using full or dual paint mode, send the appropriate DECMM command.

See Appendix A for additional programming information. For detailed information about sending commands from the host computer, consult the *Digital ANSI-Compliant Printing Protocol Level 3 Programming*

*Reference Manual and Digital ANSI-Compliant Printing Protocol Level 3 Programming Supplement.*


Section 2.8.1 describes how to feed media using **Manual Feed** on the control panel to invoke the manual feed mode. See Chapter 4 for information about setting the manual feed value from the FEEDER menu.

## **2.8.1 Manually Feeding Paper, Labels, and Transparencies**

Use the following procedure to manually feed paper, labels, and transparencies. Refer to Chapter 5 for the specifications required for print media. Be sure the printer is set up to print on the media size you are using—either through the paper (size) feature in the INITIAL menu, or by using commands from the host computer—before feeding media (see Section 2.8).


**NOTE:** *You can use the rear output tray or the top output tray when manually feeding paper. You must use the rear output tray when feeding labels or transparencies to prevent excessive curl.*

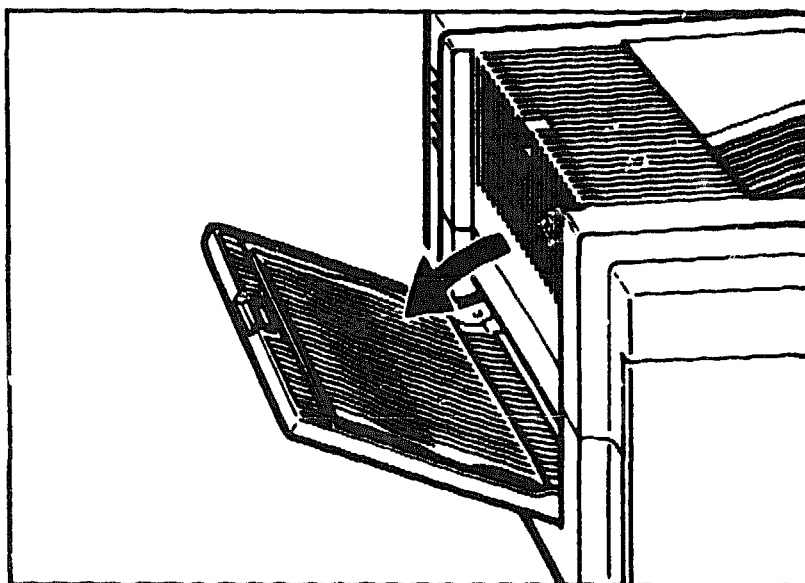1. Open the rear output tray.




MLO-004835

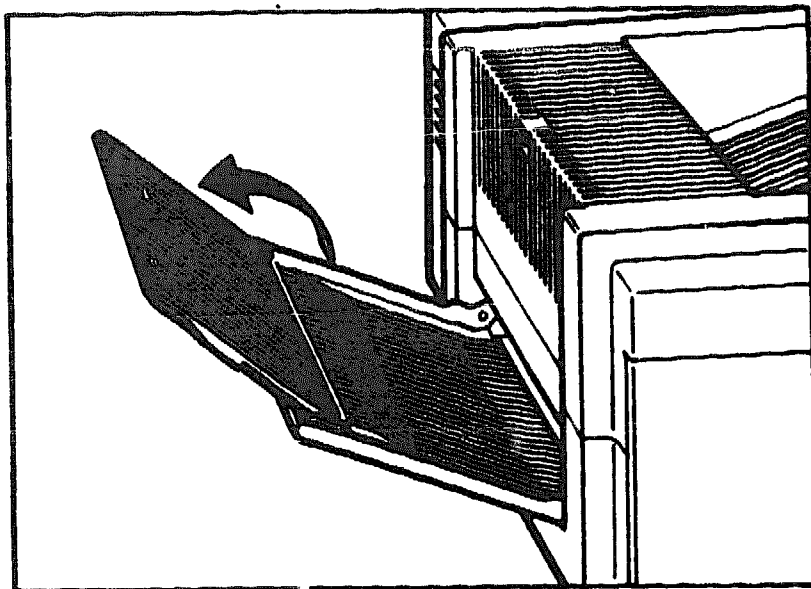2. Fold out the extension tray.



MLO-004836

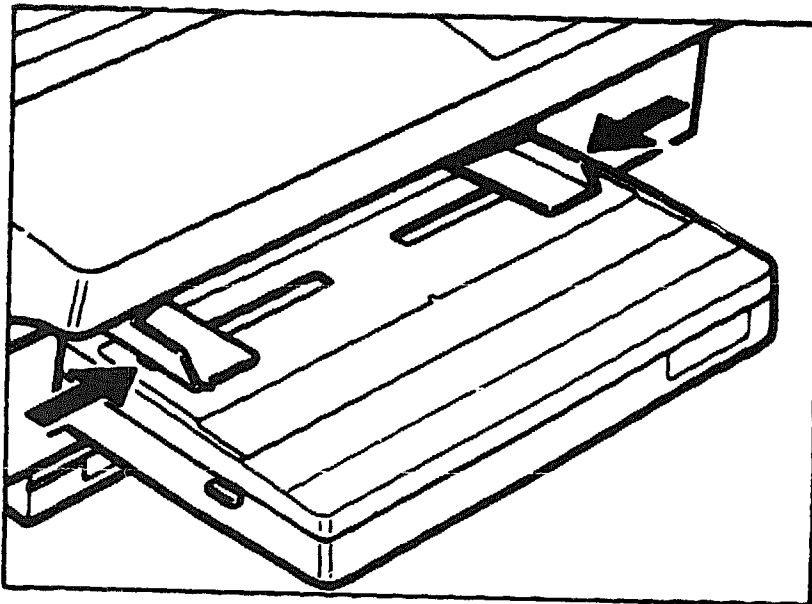3. Press **On Line** to place the printer off line.
  - The On Line indicator shuts off.
4. Press **Manual Feed** (once or twice) until the display reads **FEEDER = Manual**.
  - After about 3 seconds the display will read 00 READY.
  - The manual feed mode selection is now stored in operating memory.
5. Press **On Line** to place the printer back on line.
  - The On Line indicator lights.
6. Send data from the host computer to the printer.
  - The Data indicator lights and the display reads **PF FEED xxx** (where **xxx** = paper size).
7. Adjust the manual feed guides to accept the width of the paper.




MLO-004841

8. Insert a single sheet of paper, labels, or a transparency into the printer until it stops.

- The paper is automatically fed into the printer.
- The printed paper is sent to the preselected output paper tray.

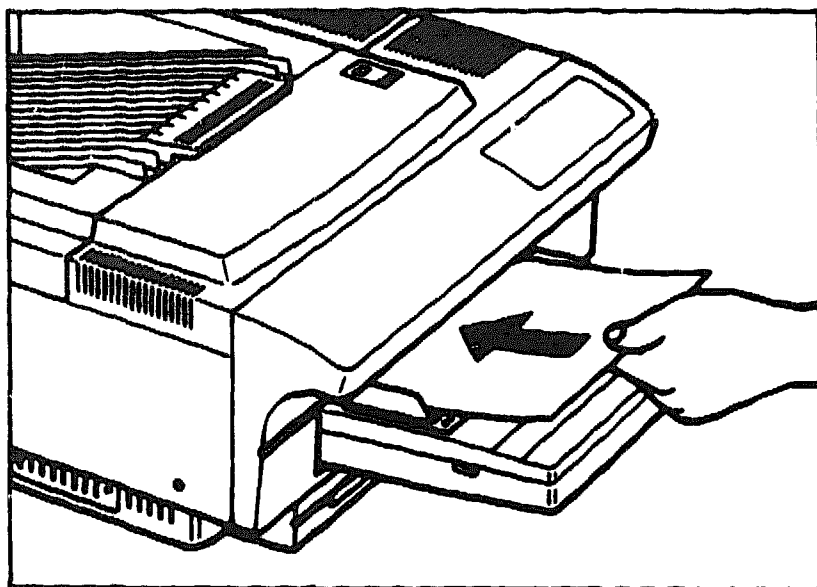**NOTE:** *It is advisable to remove transparencies from the rear output tray as each one is printed. This prevents them from sticking together.*




MLO-004842

9. Wait until PF FEED ~~xxx~~ is displayed and repeat step 8.


- ✓ Continue feeding paper until the Data indicator light shuts off and the display reads 00 READY.
- ✓ If you want to continue feeding paper manually after the display reads 00 READY, go to step 6. If you have finished feeding paper manually, go to step 10.

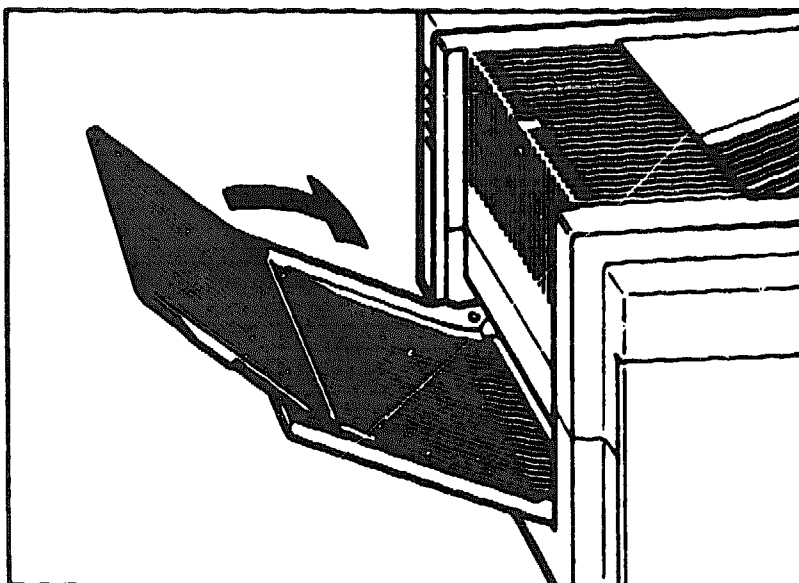10. Press **On Line** to place the printer off line.
  - The On Line indicator shuts off.
11. Press **Manual Feed** twice until the display reads **FEEDER = Cass.**
  - After about 3 seconds the display will read **00 READY**.
  - The cassette feed mode selection is now stored in operating memory.
12. Press **On Line** to place the printer back on line.
  - The On Line indicator lights.
13. Fold in the extension tray.



MLO-004833

**14. Close the rear output tray.**

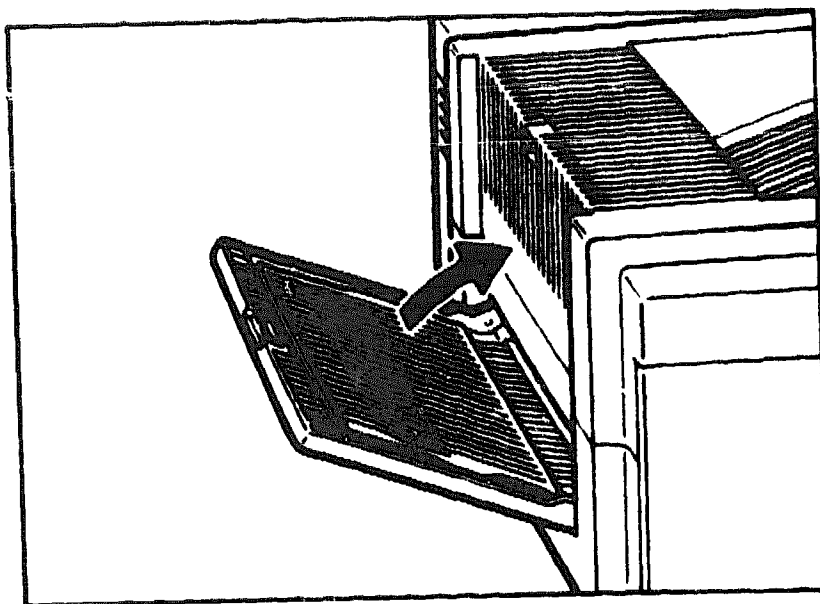

MLO-004834

## 2.9 Using Duplex Printing

The manual feed functionality of the DEClaser 2100 plus printer allows you to do duplex (two-sided) printing. Since the paper must pass through the printer twice to perform two-sided printing, consider these additional cautions when making duplex prints.

- Do not use transparencies, labels, or envelopes when making duplex prints; use paper only.
- A curl in the leading edge of the paper may cause the paper to wrinkle, misprint, or jam. Flatten out any curl on the paper before making a duplex print. If the curl cannot be flattened completely, place the paper so the curl faces up in the feeding direction, as shown below. The paper, however, should not curl more than 5 mm (0.2 in.).

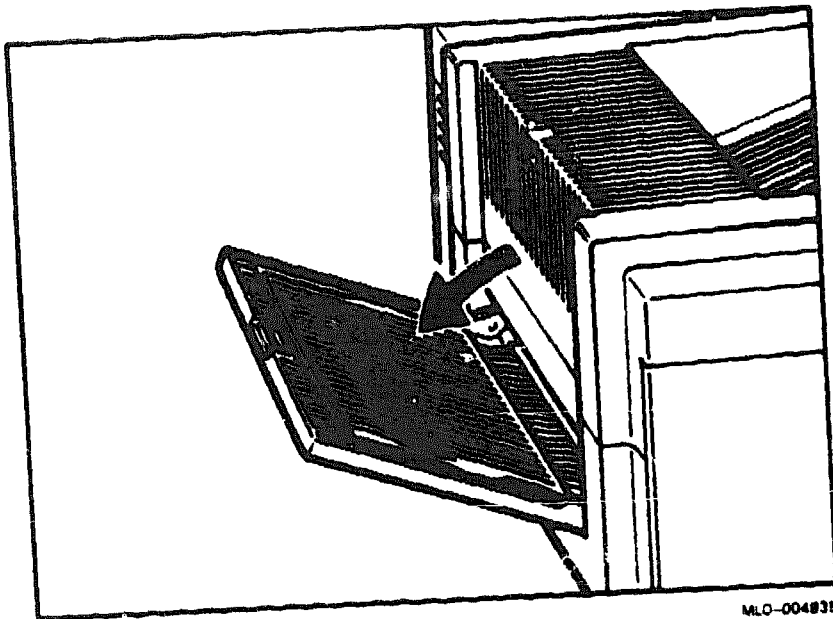


MLC-004843


- If you have made numerous duplex prints, you should make several test prints before continuing to use the printer (see Section 2.14). Running the test prints removes any excess toner clinging to the fixing assembly rollers.



1. Open the rear output tray.




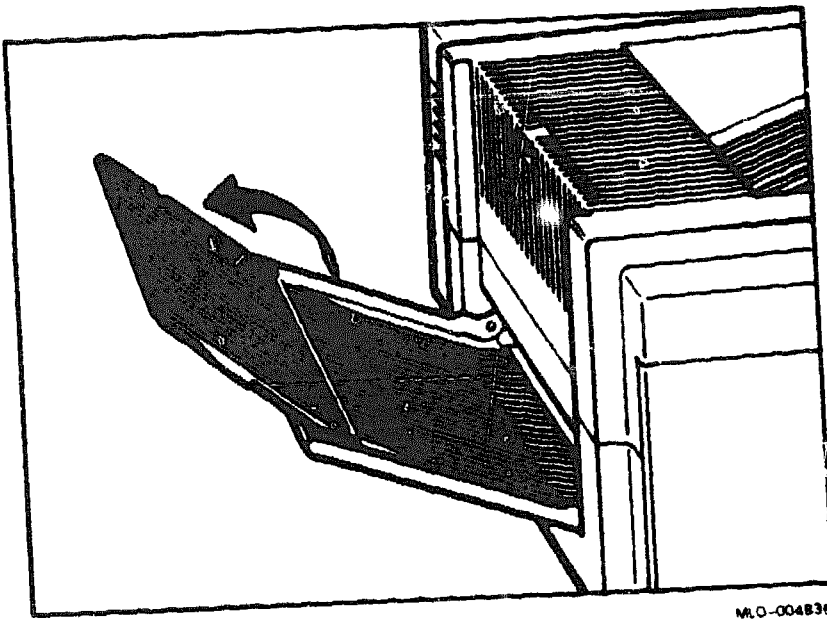2. Fold out the extension tray.



3. Press **[On Line]** to place the printer off line.
  - The On Line indicator shuts off.
4. Press **[Manual Feed]** (once or twice) until the display reads **FEEDER = Manual**.
  - After about 3 seconds the display will read 00 READY.
  - The manual feed mode selection is now stored in operating memory.
5. Press **[On Line]** to place the printer back on line.
  - The On Line indicator lights.
6. Send data from the host computer to the printer.
  - The Data indicator lights and the display reads **PF FEED xxx** (where **xxx** = paper size).

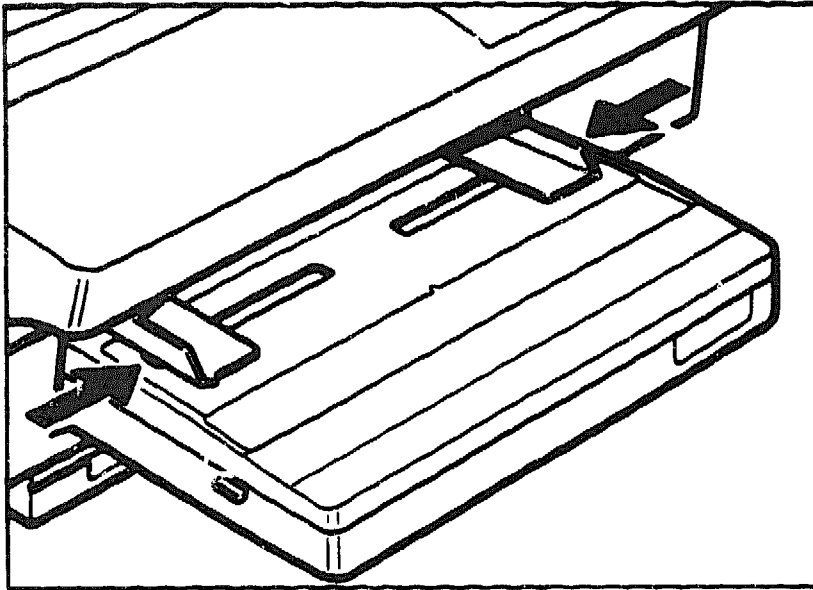
7. Adjust the manual feed guides to accept the width of the paper.



M.O-004841


8. Insert a single sheet of paper into the printer until it stops.

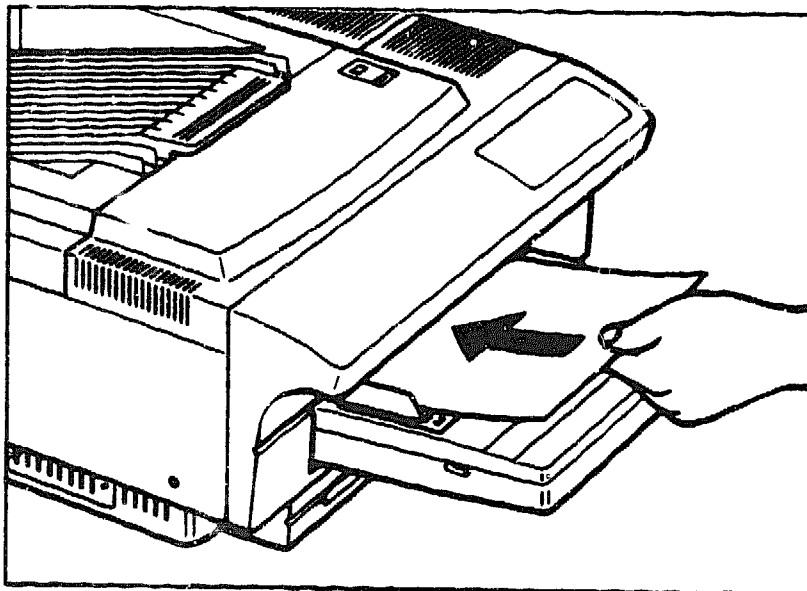- The paper is automatically fed into the printer.
- The printed paper is sent to the rear output paper tray.



M.O-004842

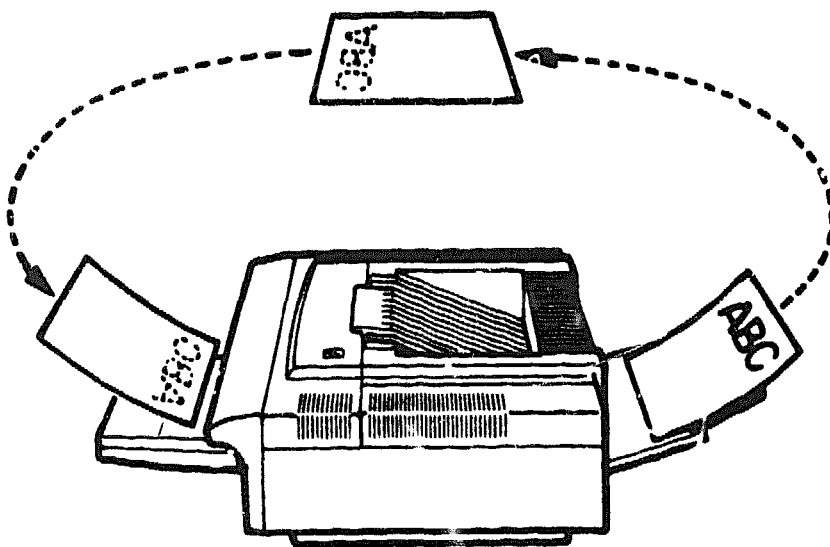9. Take the printed paper from the rear output tray and insert it into the printer printed side down when PF FEED ~~xxx~~ is displayed.



MLO-004845

10. Continue feeding paper until the Data indicator light shuts off and the display reads 00 READY.

✓ If you want to continue duplex printing, go to step 6 after the display reads 00 READY. If you have finished duplex printing, go to step 11.

11. Press **On Line** to place the printer off line.

— The On Line indicator shuts off.

12. Press **Manual Feed** twice until the display reads FEEDER = Cass.

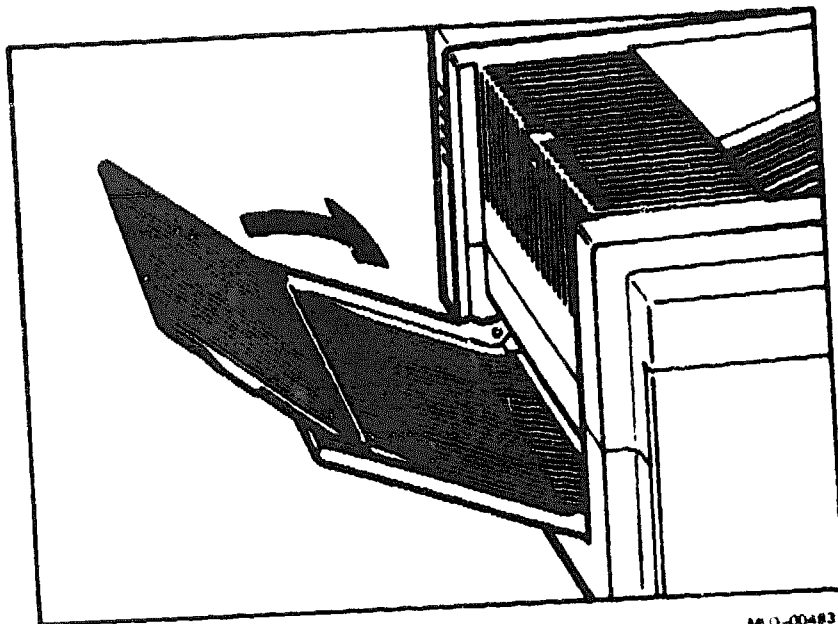
— After about 3 seconds the display will read 00 READY.

— The cassette feed mode selection is now stored in operating memory.


13. Press **On Line** to place the printer back on line.

— The On Line indicator lights.

14. Fold in the extension tray.



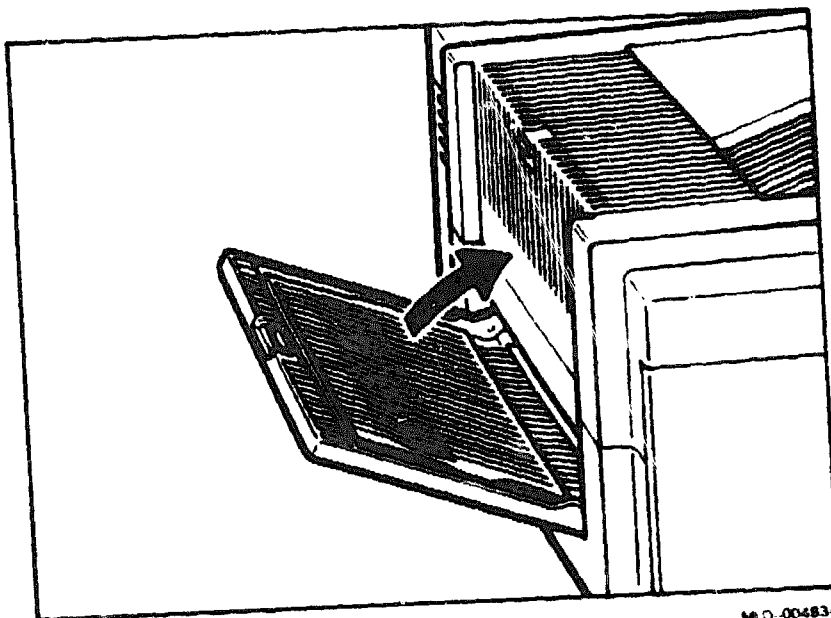15. Close the rear output tray.



## 2.10 Feeding Envelopes Manually

Envelopes have the same setup requirements as all other media that is fed manually (see Section 2.8). Since you need to print addresses in a particular area on envelopes, you must give the printer the proper print coordinates to print the addresses. Normally the setup requirements for printing envelopes are defined by the application program you are using. Consult your application program documentation for details about its envelope printing feature.

If your application program does not have an envelope printing feature, you need to set up your address files using commands (escape sequences) that instruct the printer to print in the right location on the envelope. Section 2.8 contains an example using escape sequences to set up your files to print in a particular area. Appendix A contains a listing of DEC Laser 2100 plus commands and programming information for the experienced programmer. For detailed programming information necessary to set up your address files see *Digital ANSI-Compliant Printing Protocol Level 3 Programming Reference Manual* and *Digital ANSI-Compliant Printing Protocol Level 3 Programming Supplement*.

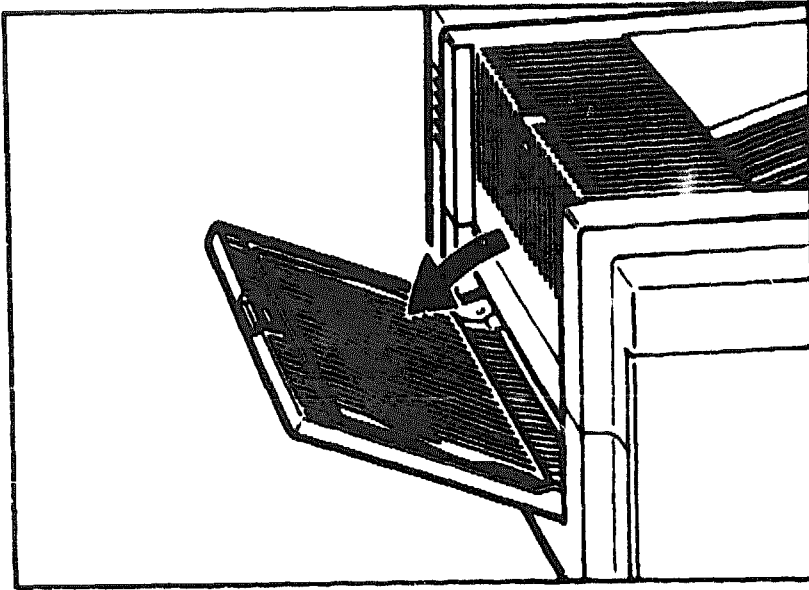
### 2.10.1 Feeding Envelopes

You should observe some special cautions before feeding envelopes into the printer. Make the following checks before you manually feed envelopes:

- The sealing flap should run along the length of the envelope, not at the leading or trailing edges.
- Be sure the sealing flap is folded properly with none of the glue exposed.
- The leading and trailing edges should not be more than two layers thick.
- The envelope should be folded without any wrinkles or creases.


Specifications for printing envelopes are listed in Section 5.2.

1. Open the rear output tray.



MLO-004835

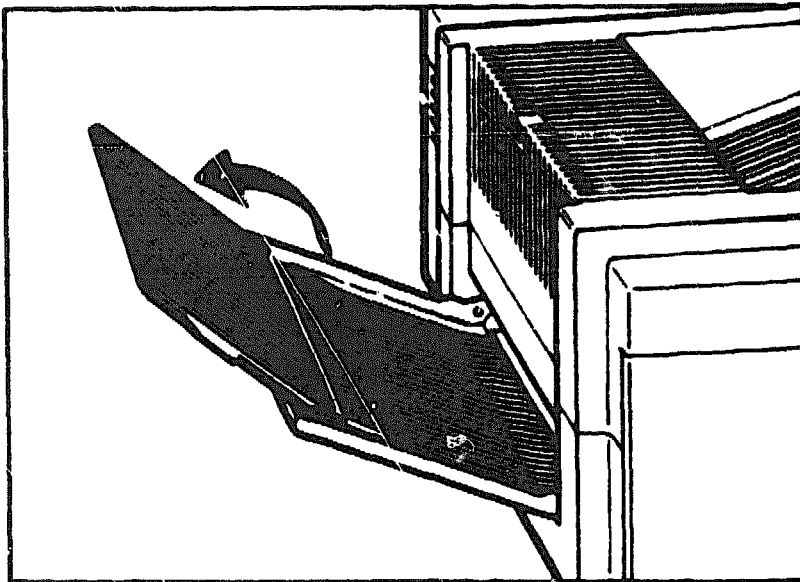2. Fold out the extension tray.




MLO 004836

3. Press **On Line** to place the printer off line.
  - The On Line indicator shuts off.
4. Press **Manual Feed** (once or twice) until the display reads **FEEDER = Manual**.
  - After about 3 seconds the display will read 00 READY.
  - The manual feed mode selection is now stored in operating memory.
5. Press **On Line** to place the printer back on line.
  - The On Line indicator lights.
6. Send data from the host computer to the printer.
  - The Data indicator lights and the display reads **PF FEED xxx** (where **xxx** = paper size).




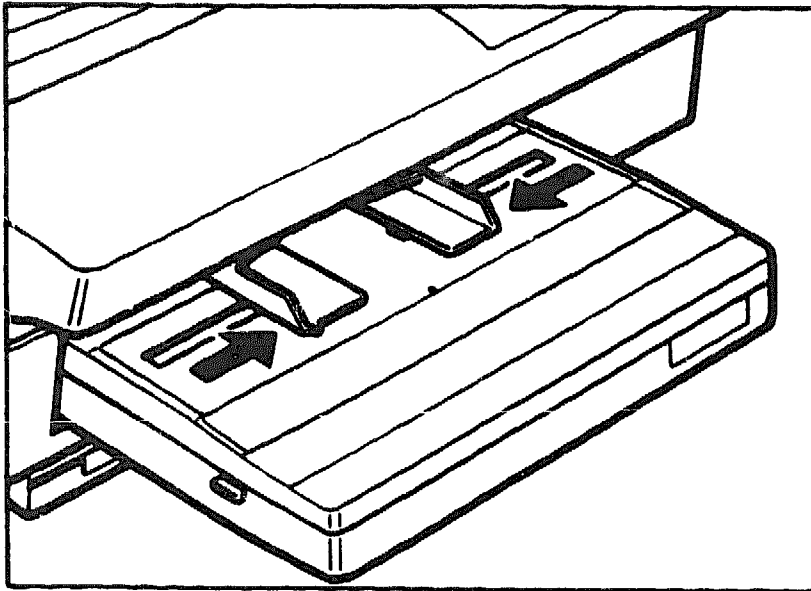7. Adjust the manual feed guides to accept the width of the envelope.



MLO-004846

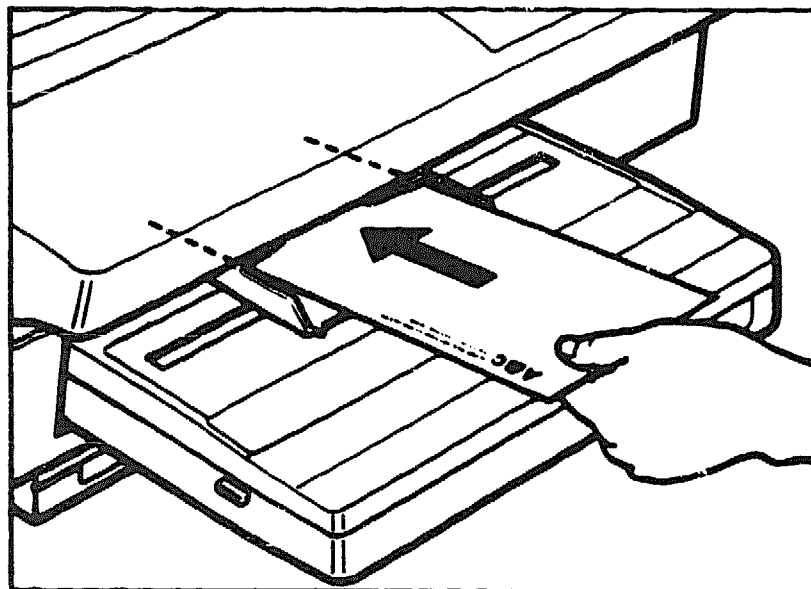8. Insert a single envelope into the printer until it stops.
- The envelope is automatically fed into the printer.
  - The printed envelope is sent to the rear output tray.




MLO-004847

9. Wait until PF FEED ~~xxx~~ is displayed and insert another envelope.
10. Continue feeding envelopes until the Data indicator light shuts off and the display reads 00 READY.
  - ✓ If you want to continue to manually feed envelopes after the display reads 00 READY, go to step 6. If you have finished feeding envelopes, go to step 11.

**NOTE:** *If the background of a printed envelope is fogged lightly with toner, the print density dial can be reset to increase the density (lower number on the dial) to correct the fogging problem. See Section 2.11 for information about setting the print density dial.*


11. Press **On Line** to place the printer off line.
  - The On Line indicator shuts off.
12. Press **Manual Feed** twice until the display reads FEEDER = Cass.
  - After about 3 seconds the display will read 00 READY.
  - The cassette feed mode selection is now stored in operating memory.
13. Press **On Line** to place the printer back on line.
  - The On Line indicator lights.

**14. Fold in the extension tray.**

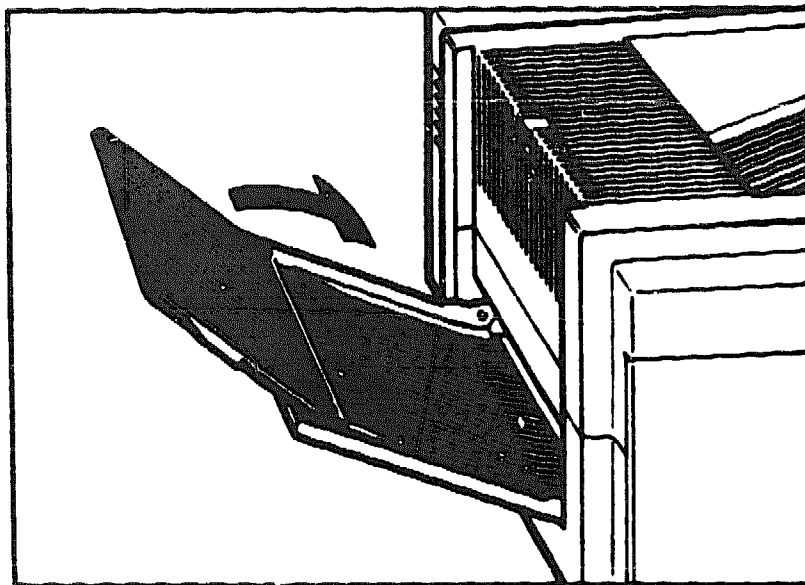

MLO-004833

**15. Close the rear output tray.**

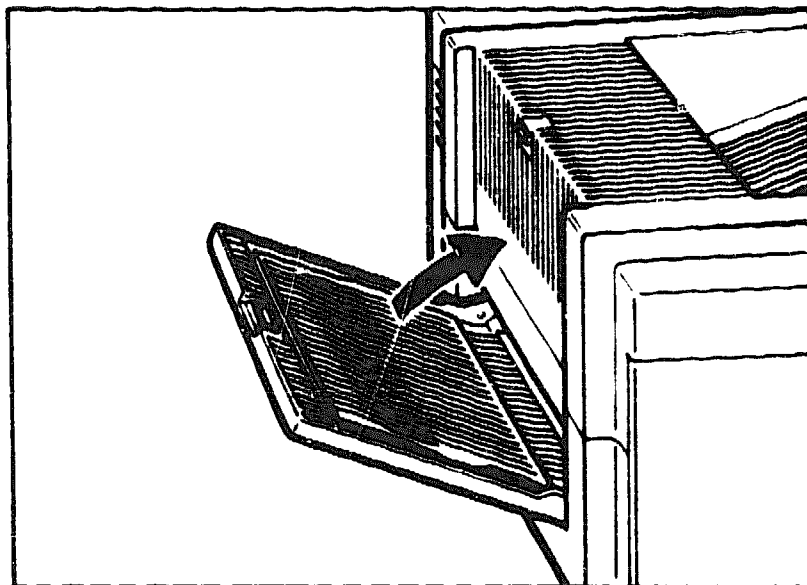

MLO-004834

## 2.11 Adjusting the Print Density

Print density is the term used to describe the relative thickness of the line used to print characters. The thickness of a line is known as the line weight. The print density adjustment controls the amount of toner applied to the paper to make the line weight thinner or thicker.

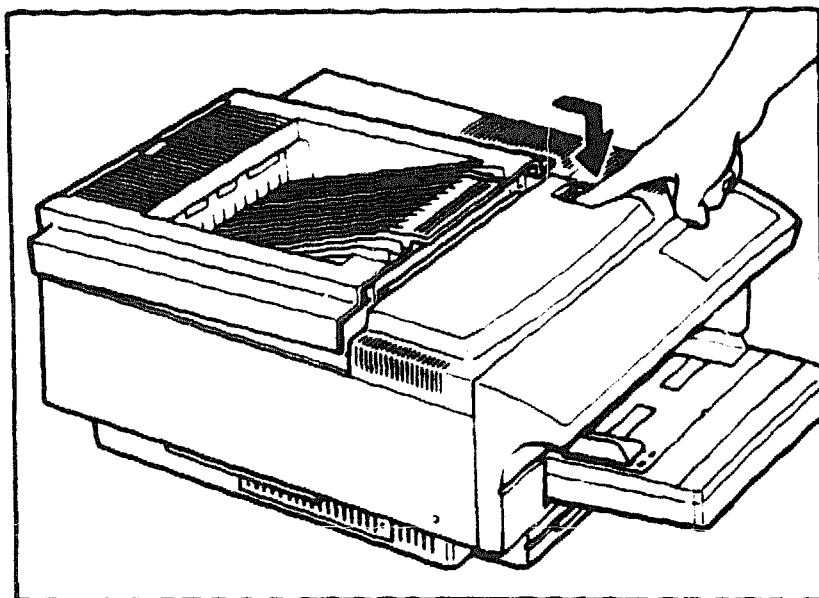
You can significantly extend the life of an Electrophotographic Supply (EP-S) cartridge by setting the print density adjustment dial to the highest possible number (lightest setting) that gives you acceptable print quality. For most applications a print density setting of 7 can be used to produce high-quality print, and extend the life of the cartridge.

**NOTE:** *The EP-S cartridge life can be up to 4,000 A4 or letter-size pages. This specification is based on 4% toner coverage with the print density set at 7.*

You can check the line weight thickness by printing the Engine Test Print after performing the adjustment (see Section 2.12).


Use the following procedure to adjust print density.

1. Press the release button forward and then down.
  - The top cover releases and opens slightly.




MLG-004830

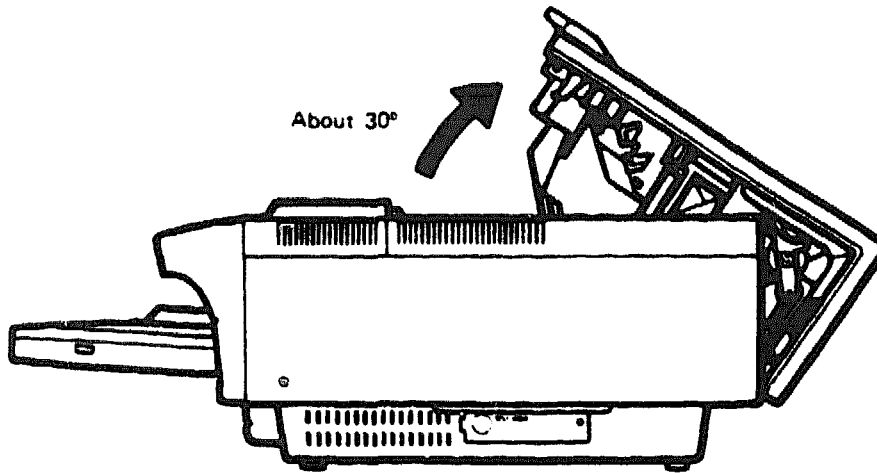2. Lift the top cover open to the halfway position.




MLO-004848

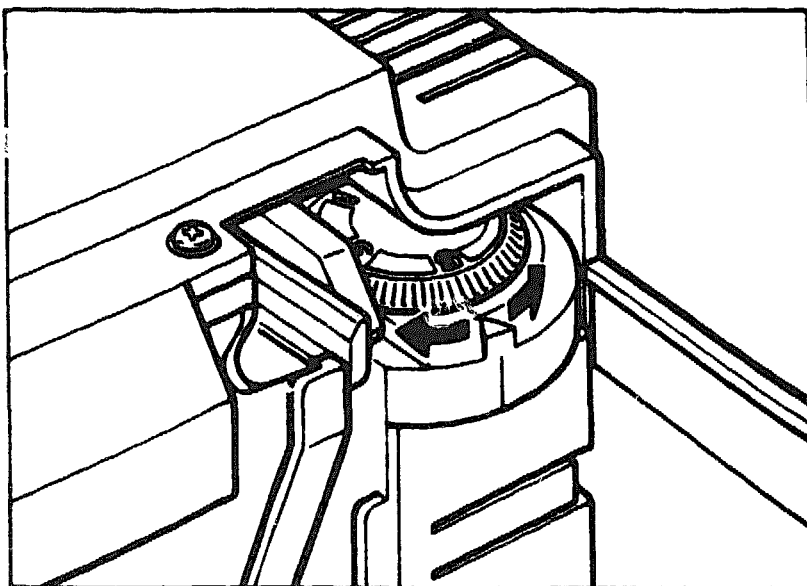3. Rotate the print density adjustment dial so that the desired density number is opposite the index triangle.
  - ✓ Numbers on the dial are displayed in increments of 2.
  - ✓ Number 1 is the darkest setting; number 9 is the lightest setting.
  - ✓ Although the printer is shipped with the dial set to number 5, you can typically obtain acceptable print quality, prolong the cartridge life, and reduce toner consumption by setting the dial to 7.



MLO-004849

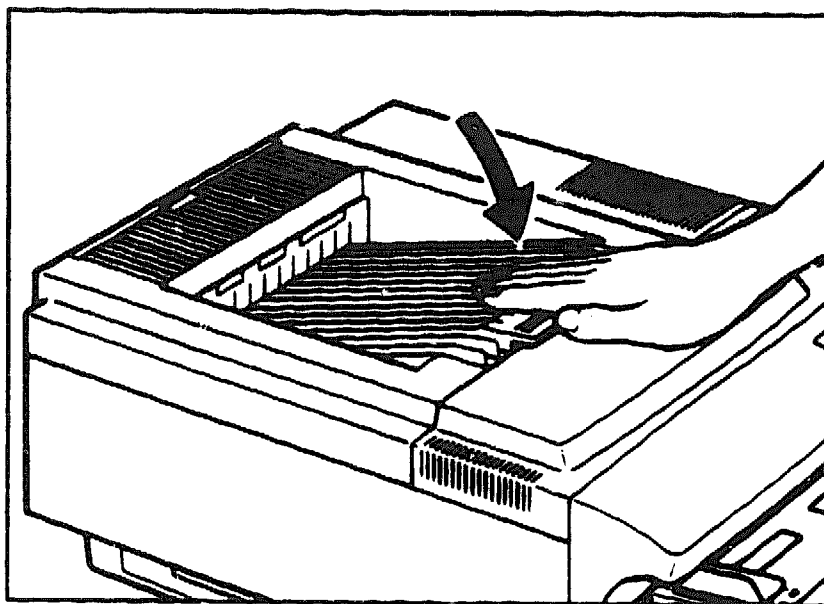4. Close the top cover by gently lowering the cover and pushing down on the hand grip until the cover latches securely in place.



MLO-004386

## **2.12 Printing the Engine Test Print**


The Engine Test Print (Figure 2-1) is used to check the printer's paper feed mechanism for proper operation, and to check toner dispersion and line weight.

The area between the lines on the Engine Test Print should be free of excess toner or smudges, and the lines should print cleanly across the entire page with no faded areas. If the print quality is poor, see Section 6.6 for help to correct the problem.

If the Engine Test Print will not print, there may be a problem with the printer. Refer to Section 6.6 for help to correct the problem. If you cannot correct the problem call Digital Services to repair the printer (see Chapter 8 for service information).

You can check line weight by looking at the thickness of the line after performing a print density adjustment (Section 2.11).

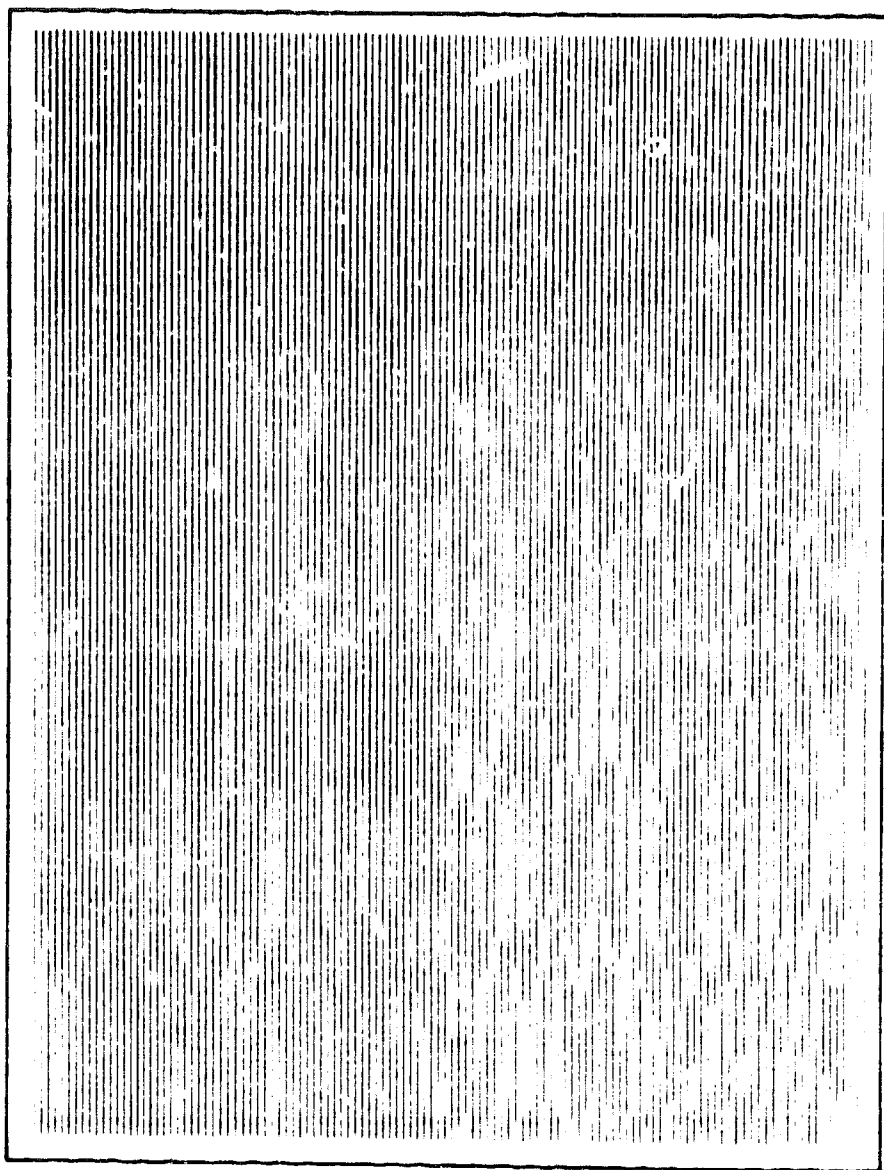
**Figure 2-1: Engine Test Print**



ML 0-004625



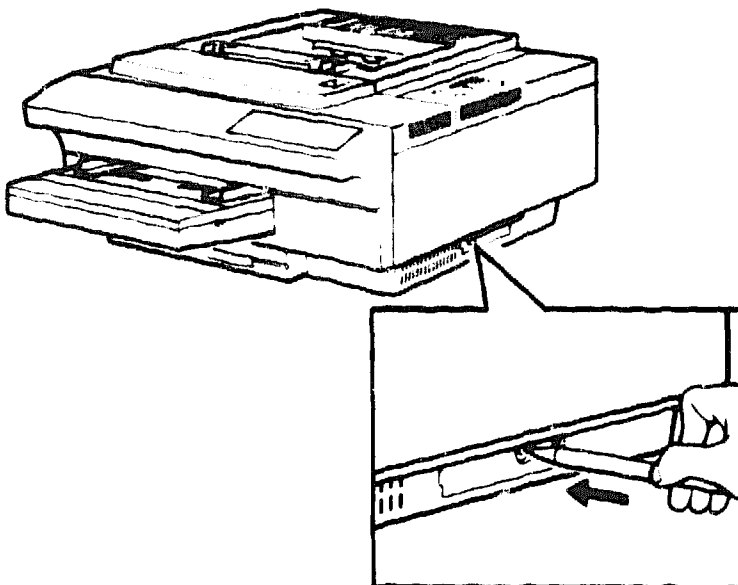1. Check to be sure the printer has stopped printing and the message display reads 00 READY.
2. Press the test button on the right side of the printer with a ballpoint pen.
  - The printer enters the offline state.
  - The Alarm indicator lights while the page is printing.
  - The display reads 15 ENGINE TEST while the page is printing.
  - The printer remains in the offline state and the display reads 00 READY.



M10-004850

3. Press **On Line** to place the printer back on line.

## **2.13 Printing Test Print A**

Test Print A (Figure 2-2) lists the current printer settings along with information such as total page count and the amount of free memory available.

Figure 2-2: Test Print A

TEST PRINT	
Version	: v1.0
Total Ram	: 1536 ( 512 + 1024 ) K byte
Font Card	: NONE
Page Count	007596
Free Ram	001315 K bytes

Current Settings	
<b>FEEDER</b>	
feeder	=Cass.
RAM + NVRAM	
<b>LAYOUT</b>	
offsetx	=+0.0
offsety	=+0.0
autoNL	=OFF
RAM + NVRAM	
<b>COPY</b>	
copy	=01
RAM	
<b>COMMAND</b>	
message	=English
NVRAM	
<b>INITIAL</b>	
macro	=000
paint	=Partial
paper	=Letter
NVRAM	
<b>INTERFACE</b>	
lrf	=RS232C
baud	=9600
rsmode	=85
dtr	=Pin-H
xon xoff	=ON
ets ack	=OFF
NVRAM	

MLO-004851

You can print Test Print A to check the current printer settings before making changes in Menu Mode (see Chapter 4). Table 2-2 describes the items on Test Print A, and Table 2-3 describes how to print the test print.

**Table 2-2: Test Print A**

Item	Description
Version	This is the version of firmware the printer is using. The firmware version number aids the Digital Services engineer if there is a problem with the printer.
Total RAM	This is the total amount of random-access memory available in the printer. RAM is shown in kilobytes.
Font Card	Lists the name of installed emulation cartridges, PostScript cartridges, or font cartridges and their location (left or right font cartridge slot).
Page Count	Indicates the total number of pages printed to date.
Free RAM	Indicates the total amount of RAM available. This memory space can be used to downline load fonts from the host computer, be reserved as bitmap pages, or used to support options such as PostScript.
Current Settings	Shows all of the setup menus and the current values in operational memory. Each menu also shows what kind of memory the values can be stored in: RAM only, NVRAM only, or in either type of memory (RAM + NVRAM).  See Table 4-7 and Section 4.5 for a complete listing and description of all the menu features.

Use the following procedure to print a copy of Test Print A.

**Table 2-3: Printing Test Print A**

Operation	Display Reads
1. Press <b>On Line</b> to place the printer off line. — The On Line indicator shuts off.	00 READY
2. Press <b>Test/Font</b> once. — Test Print A prints.	05 TEST PRINT A 00 READY
3. Press <b>On Line</b> to place the printer back on line. — The On Line indicator lights.	00 READY

## **2.14 Printing Test Print B**

Test Print B (Figure 2-3) contains sample printouts of the character sets that can be examined for print quality.

### Figure 2-3: Test Print B

[illegible]

Test Print B is printed continuously (until instructed to stop) so it can also be used to test paper feed, paper delivery, and other mechanical functions of the printer.

Use the procedure in Table 2-4 to print a copy of Test Print B.

**Table 2-4: Printing Test Print B**

Operation	Display Reads
1. Press <b>On Line</b> to place the printer off line.  — The On Line indicator shuts off.	00 READY
2. Press and hold down <b>Test/Font</b> for about 3 seconds.  — The test page prints continuously.	01 TEST PRINT B
3. Press <b>Test/Font</b> to stop printing Test Print B.  <i>NOTE: You can also press <b>On Line</b> to stop printing Test Print B.</i>	04 TEST STOP 00 READY
4. Press <b>On Line</b> to place the printer back on line.  — The On Line indicator lights.	00 READY



## **2.15 Printing the Font List**

**Figure 2-4 shows the Font List, which contains a listing of all the available character sets in the printer, along with a sample of the available fonts.**

### Figure 2-4: Font List

Page 1

**FONT LIST**

Type	Family	Font File ID	Sample
[ INTERNAL FONT ]			
RCOURIR	DBULTN1	J02SK00GG0001UZZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
DBULTN1	DBULTN1	J02SK00GG0001UZZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
RCOURIR	RCOURIR	J02SK00GG000245ZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
DBULTN1	DBULTN1	J02SK00GG000245ZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
RCOURIR	RCOURIR	J02SK00GG0006DDZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
DBULTN1	DBULTN1	J02SK00GG0006DDZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
RCOURIR	RCOURIR	J02SK00GG0001QZZZZZ02F000	=000Ty=100AA=F00Ex(√)ff}
D000000	D000000	J02SK00GG0001QZZZZZ02F000	=000Ty=100AA=F00Ex(√)ff}
RCOURIR	RCOURIR	J02SK00GG0001CZZZZZ02F000	AFF*GzI~J~L~H~O~S_1234567890
D000000	D000000	J02SK00GG0001CZZZZZ02F000	AFF*GzI~J~L~H~O~S_1234567890
RCOURIR	RCOURIR	J02SK00GG00024DZZZZ02F000	A3FIcGnI~J~L~MD001S91234567890
DBULTN1	DBULTN1	J02SK00GG00024DZZZZ02F000	A3FIcGnI~J~L~MD001S91234567890
RCOURIR	RCOURIR	J02SK00GG000244ZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
DBULTN1	DBULTN1	J02SK00GG000244ZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
RCOURIR	RCOURIR	J02SK00GG0001TGZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~
DBULTN1	DBULTN1	J02SK00GG0001TGZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~
RCOURIR	RCOURIR	J02SK00GG0006DKZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~
DBULTN1	DBULTN1	J02SK00GG0006DKZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~
RCOURIR	RCOURIR	R202SK00GG0001UZZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
DBULTN1	DBULTN1	R202SK00GG0001UZZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
RCOURIR	RCOURIR	R202SK00GG000245ZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
DBULTN1	DBULTN1	R202SK00GG000245ZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
RCOURIR	RCOURIR	R202SK00GG0006DDZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
DBULTN1	DBULTN1	R202SK00GG0006DDZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
RCOURIR	RCOURIR	R202SK00GG0001QZZZZZ02F000	=000Ty=100AA=F00Ex(√)ff}
D000000	D000000	R202SK00GG0001QZZZZZ02F000	=000Ty=100AA=F00Ex(√)ff}
RCOURIR	RCOURIR	R202SK00GG0001CZZZZZ02F000	AFF*GzI~J~L~H~O~S_1234567890
D000000	D000000	R202SK00GG0001CZZZZZ02F000	AFF*GzI~J~L~H~O~S_1234567890
RCOURIR	RCOURIR	R202SK00GG00024DZZZZ02F000	A3FIcGnI~J~L~MD001S91234567890
DBULTN1	DBULTN1	R202SK00GG00024DZZZZ02F000	A3FIcGnI~J~L~MD001S91234567890
RCOURIR	RCOURIR	R202SK00GG000244ZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
DBULTN1	DBULTN1	R202SK00GG000244ZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
RCOURIR	RCOURIR	R202SK00GG0006DKZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~
DBULTN1	DBULTN1	R202SK00GG0006DKZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~
RELITE0	RELITE0	L02SK00GG0001UZZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
DBULTN1	DBULTN1	L02SK00GG0001UZZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
RELITE0	RELITE0	L02SK00GG000245ZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
DBULTN1	DBULTN1	L02SK00GG000245ZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
RELITE0	RELITE0	L02SK00GG0006DDZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
DBULTN1	DBULTN1	L02SK00GG0006DDZZZZ02F000	AAmmCcEeEeiIiIiI000::1µµ··
RELITE0	RELITE0	L02SK00GG0001QZZZZZ02F000	=000Ty=100AA=F00Ex(√)ff}
D000000	D000000	L02SK00GG0001QZZZZZ02F000	=000Ty=100AA=F00Ex(√)ff}
RELITE0	RELITE0	L02SK00GG0001CZZZZZ02F000	AFF*GzI~J~L~H~O~S_1234567890
D000000	D000000	L02SK00GG0001CZZZZZ02F000	AFF*GzI~J~L~H~O~S_1234567890
RELITE0	RELITE0	L02SK00GG00024DZZZZ02F000	A3FIcGnI~J~L~MD001S91234567890
DBULTN1	DBULTN1	L02SK00GG00024DZZZZ02F000	A3FIcGnI~J~L~MD001S91234567890
RELITE0	RELITE0	L02SK00GG000244ZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
DBULTN1	DBULTN1	L02SK00GG000244ZZZZ02F000	AaFfGgIjJjLlMmOoSs1234567890
RELITE0	RELITE0	L02SK00GG0006DKZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~
DBULTN1	DBULTN1	L02SK00GG0006DKZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~
RELITE0	RELITE0	L02SK00GG0001TGZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~
DBULTN1	DBULTN1	L02SK00GG0001TGZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~
RELITE0	RELITE0	L02SK00GG0006DKZZZZ02F000	f~v~t~nf~f~v~t~of~f~v~t~

The Font List includes internal fonts, cartridge fonts, and fonts that have been downline loaded into memory. You can select fonts only by using commands from the host computer; you cannot select them from the control panel. For information about selecting fonts, refer to the *Digital ANSI-Compliant Printing Protocol Level 3 Programming Reference Manual* and the *Digital ANSI-Compliant Printing Protocol Level 3 Programming Supplement*.

Use the procedure in Table 2-5 to print the font list.

**Table 2-5: Printing the Font List**

Operation	Display Reads
1. Press <b>On Line</b> to place the printer off line. — The On Line indicator shuts off.	00 READY
2. Press <b>Test/Font</b> twice. — The font list prints.	06 FONT LIST ↓ 00 READY
3. Press <b>On Line</b> to place the printer back on line. — The On Line indicator lights.	00 READY

## 2.16 Using Control Representation Mode

The Control Representation Mode is used to print out unprocessed data or commands sent from the host computer. This procedure is sometimes referred to as "dumping." The printing of unprocessed data (in the form of characters and symbols) is convenient for debugging programs. If a specified character is undefined, a hexadecimal representation is printed in its place.

This section explains how to print the character listing. For additional information about Control Representation Mode, consult the *Digital ANSI-Compliant Printing Protocol Level 3 Programming Reference Manual*.

**NOTE:** *If the file does not fill the page buffer completely, the remaining data can be printed by pressing **On Line** to place the printer off line, and then pressing **Form Feed** to print the partial page.*

### 2.16.1 Entering Control Representation Mode

Use the procedure in Table 2-6 to place the printer in the Control Representation Mode.

**Table 2-6: Entering Control Representation Mode**

Operation	Display Reads
1. Press <b>On Line</b> to place the printer off line.  — The On Line indicator shuts off.	00 READY
2. Press and hold <b>Reset</b> for about 10 seconds.	03 RESET ↓ 03 DUMP ↓ 03 RESET ↓ 00 READY    DUMP

The printer is now in the Control Representation Mode and ready to accept data or commands from the printer. To exit the Control Representation Mode, perform a soft reset (see Section 2.17).

## 2.17 Resetting the Printer

There are two methods of resetting the printer:

- You can perform a hard reset by powering the printer off and then back on.
- You can perform a soft reset by pressing **Reset**.

Perform a soft reset of the printer under the following circumstances:

- When changing paper cassette sizes
- To clear data in the print buffer
- To invoke features in the INITIAL menu
- To enter and exit Control Representation Mode

Use the procedure in Table 2-7 to perform a soft reset.

**Table 2-7: Resetting the Printer**

Operation	Display Reads
1. Press <b>On Line</b> to place the printer off line.  — The On Line indicator shuts off.	00 READY
2. Press and hold <b>Reset</b> for about 3 seconds.	03 RESET ↓ 00 READY
3. Press <b>On Line</b> to place the printer back on line.  — The On Line indicator lights.	00 READY

## 2.18 Emulation Mode of Operation

The DEClaser 2100 plus operates using DEC PPL3 mode. If you have an optional emulation cartridge installed, select Emulation Mode to invoke a protocol from the cartridge.

Use the procedure in Table 2-8 to select Emulation Mode.

**Table 2-8: Selecting Emulation Mode**

Operation	Display Reads
1. Press <b>On Line</b> to place the printer off line.  — The On Line indicator goes off.	00 READY
2. Press and hold <b>Menu</b> for about 4 seconds.	MODE = DEC 00
3. Press <b>◀</b> or <b>▶</b> to select Emulation Mode.	MODE "EMULATION NAME" <b>xx</b>
4. Press <b>▼ Enter</b> to select and save the mode.  — The mode is automatically saved in NVRAM.	00 READY "EMULATION NAME"  or READY




## Chapter 3

# The Control Panel

The control panel consists of a liquid crystal display (LCD), indicator lights, and a keypad. The keypad allows you to perform certain printer functions such as printing test pages or configuring the printer menus. This chapter explains the features and uses of the control panel.

The layout of the control panel is shown in Figure 3-1 and described in Table 3-1.



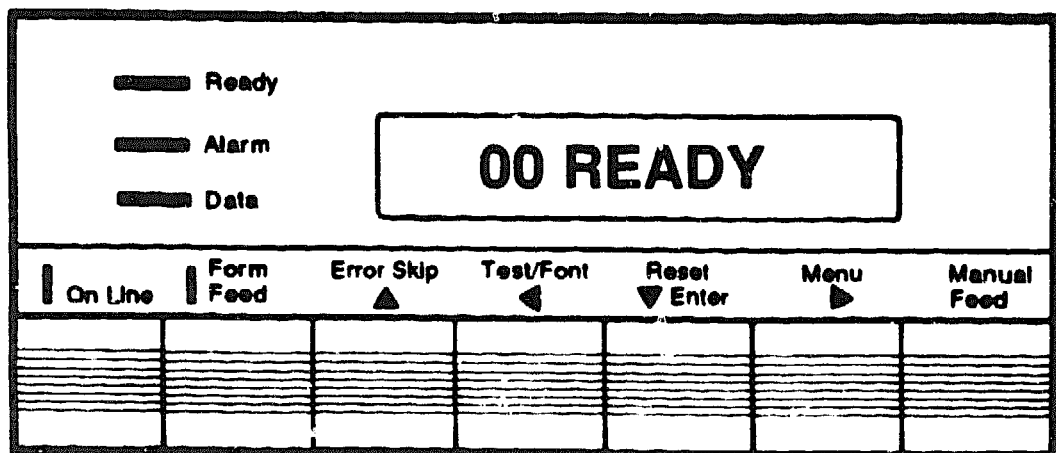




Figure 3-1: Control Panel



MLO-004855



**Table 3-1: Control Panel Functions**

Item	Function
Keypad	<p>Some keys on the keypad perform a dual function depending on whether the printer is in Keypad Mode or Menu Mode. In Keypad Mode, the keys perform the primary function labeled on the key such as Test/Font or Manual Feed. When the printer is in Menu Mode, the keys perform the secondary function labeled with the gray colored symbols and text such as  or .</p> <p><b>NOTE:</b> All keys and related functions (with the exception of ) work only when the printer is off line. This is true whether the printer is in Keypad Mode or Menu Mode.</p> <p>See Section 3.1 for information about using the keypad in Keypad Mode.</p> <p>See Section 4.1 for information about using the keypad in Menu Mode.</p>
On Line indicator (green)	<p>Works in conjunction with  to indicate when the printer is on line or off line (see  in Table 3-3).</p> <p><b>On:</b> The printer is on line and controlled by the host computer. The host computer can send data to print and commands to control the printer.</p> <p><b>Off:</b> The printer is off line and cannot receive any data or commands from the host computer. It can only be controlled using the keys on the control panel.</p>
Form Feed indicator (green)	<p>Works in conjunction with  to indicate when data in the print buffer is being printed or when the command to print is canceled (see  in Table 3-3).</p> <p><b>On:</b> Data in the print buffer is being printed.</p> <p><b>Off:</b> Data is not being printed.</p> <p><b>Flashing:</b> Command to print is canceled.</p>

**Table 3-1 (Cont.): Control Panel Functions**

<b>Item</b>	<b>Function</b>
<b>Data indicator (green)</b>	<p>Indicates the status of the data sent to the printer.</p> <p><b>On:</b> Data is being printed or is still in the print buffer. If the indicator is on and the printer is not printing, the last page needs to be printed. Press <b>On Line</b> and then press <b>Form Feed</b> to print the last page.</p> <p><b>Off:</b> All data has been printed.</p> <p><b>Flashing:</b> Data is being received from the host computer.</p> <p><b>NOTE:</b> Data is lost if you power off or reset the printer when the Data indicator is on or is flashing.</p>
<b>Alarm indicator (orange)</b>	<p>Indicates that an error condition exists. A "beep" sounds when the printer first senses an alarm condition. The message display works in conjunction with the Alarm indicator by showing the type of error condition.</p> <p><b>For example:</b> 12 PRINTER OPEN</p> <p>The Alarm indicator shuts off when the error condition is cleared.</p> <p>See Chapter 6 for information on correcting printer errors.</p>
<b>Ready indicator (green)</b>	<p>Indicates when the printer is ready to print.</p> <p><b>On:</b> The printer is ready to print.</p> <p><b>Off:</b> The printer is powered off or an error condition exists (the Alarm indicator is on).</p> <p><b>Flashing:</b> The printer is warming up.</p>
<b>Message Display</b>	<p>The message display shows the current status of the printer.</p> <p><b>For example:</b> 00 READY</p> <p>When the printer is in the Menu Mode, the display shows the selected menu, feature, or value.</p> <p><b>For example:</b> <u>COMMAND</u> INITIAL</p>

## 3.1 Using the Keypad in Keypad Mode

Some keys on the keypad perform a dual function, depending on whether the printer is in Keypad Mode or Menu Mode. In Keypad Mode, the keys perform the primary function labeled on the key, such as Test/Font or Manual Feed.

**NOTE:** With the exception of **On Line**, all keys operate only when the printer is off line. A "beep" sounds if any of these keys are pressed when the printer is on line.

### 3.1.1 Entering Keypad Mode

Use the procedure in Table 3-2 to enter Keypad Mode.

**Table 3-2: Entering Keypad Mode**

Operation	Display Reads
1. Press <b>On Line</b> to place the printer off line.  — The On Line indicator goes off.  — The keypad is now in Keypad Mode.	00 READY

Table 3-3 describes the keypad functions in Keypad Mode.

**Table 3-3: Keypad Functions: Keypad Mode**

Key	Function
<b>On Line</b>	<p>Pressing <b>On Line</b> alternates the printer between the online mode and offline mode. The mode is indicated by the green light on the key.</p> <p>On: The printer is on line and controlled by the host computer. The host computer can send data to print and commands to control the printer.</p> <p>Off: The printer is off line and cannot receive any data or commands from the host computer. It can only be controlled using the keys on the control panel.</p>

**Table 3-3 (Cont.): Keypad Functions: Keypad Mode**

Key	Function
<b>Form Feed</b>	<p><b>Form Feed</b> works in conjunction with the Data indicator. If the Data indicator is on after a file stops printing, it means there is still data in the print buffer. Pressing <b>Form Feed</b> prints the remaining pages in the print buffer.</p> <p>When you press <b>Form Feed</b>, the indicator on the key lights to show that the data is being printed. If you press <b>Form Feed</b> again while the data is printing, it stops printing the remaining pages and the indicator flashes until the current page exits the printer. Once the page exits the printer, the indicator light remains off. <b>Form Feed</b> can be pressed again to resume printing.</p>
<b>Error Skip</b>	<p>The DEClasser 2100 plus printer alerts you to certain error conditions by stopping the printer and displaying the type of error on the control panel. When this happens you may elect to note the problem and then continue printing by pressing <b>Error Skip</b>. Pressing <b>Error Skip</b> bypasses these errors so that printing continues. After you press <b>Error Skip</b> the printer remains off line. You must press <b>On Line</b> to place the printer back on line and continue printing.</p> <p>Some errors can repeat, such as communications errors or print formatting errors when the printer is receiving additional communication data. When this happens you may need to repeat the Error Skip procedure several times. Refer to Chapter 6 for additional information about errors and corrective actions.</p>
<b>Test/Font</b>	<p><b>Test/Font</b> performs several functions in Keypad Mode:</p> <ul style="list-style-type: none"><li>• Pressing the key once prints Test Print A (see Section 2.13).</li><li>• Pressing and holding the key down for at least three seconds prints Test Print B (see Section 2.14).</li><li>• Pressing the key twice prints the Font List (see Section 2.15).</li></ul>

**Table 3-3 (Cont.): Keypad Functions: Keypad Mode**

Key	Function
<b>Reset</b>	<p>Pressing <b>Reset</b> for about 3 seconds performs a soft reset by clearing the data in the print buffer and returning the printer to the ready state. The printer operates with the values in operating memory and any values currently stored in RAM, which are loaded into operating memory when a reset is performed.</p> <p>Other primary functions of <b>Reset</b> are:</p> <ul style="list-style-type: none"><li>• When changing paper cassette sizes</li><li>• To invoke INITIAL menu values</li><li>• To exit Control Representation Mode (see Section 2.16)</li></ul>
<b>Menu</b>	<p>Places the printer in Menu Mode and displays the first menu: <b>FONT/FEED LAYOUT</b>.</p> <p>Refer to Section 4.1 for more information about the Menu Mode.</p> <p>Pressing <b>Menu</b> for about 4 seconds activates Emulation Mode when an optional emulation cartridge is installed. See Section 2.18 for information about selecting Emulation mode.</p>
<b>Manual Feed</b>	<p>Pressing <b>Manual Feed</b> alternates between the manual feeding and cassette feeding modes. See Section 2.8 for more information about feeding print media manually.</p>

## 3.2 Using the Keypad in Menu Mode

You configure the printer by selecting certain parameters (features and values) while in the Menu Mode. You select these parameters using keypad keys that function differently when the printer is in Menu Mode. Chapter 4 covers printer configuration and explains the use of the keypad when in Menu Mode (see Section 4.1).



## Chapter 4

# Printer Configuration

---

This chapter describes how to configure the printer by selecting operating parameters that can be stored in the printer's memory. These operating parameters are known as features and values. By selecting the correct operating parameters, you ensure that the printer can communicate properly with the host computer and application software.

You configure the DEClaser 2100 plus printer by selecting an appropriate set of values from a group of printer setup menus. You make these selections while the printer is in Menu Mode. Once values are selected you can save them in the appropriate type of memory. Saving features in the proper type of memory allows you to retain most printer values so that the printer has to be configured only once. Figure 4-1 shows a sample menu from Test Print A, with its features and values.

**Figure 4-1: Sample of a Menu**

INTERFACE	
i/f	= RS232C
baud	= 4800
rsmode	= 8S
dtr	= Fix-H
xon/xoff	= ON
etx/ack	= OFF
( NVRAM )	

NLO-004856

You can access some menu features by using commands from the host computer; you can select others only from the control panel. This chapter describes how to select features using the control panel. For information about selecting features using commands from the host computer, see the *Digital ANSI-Compliant Printing Protocol Level 3 Programming Reference Manual* and the *Digital ANSI-Compliant Printing Protocol Level 3 Programming Supplement*.

**NOTE:** *The interface, message, and page offset features can be configured only from the control panel.*

## 4.1 Entering Menu Mode

You configure the printer by selecting certain parameters (features and values) while in Menu Mode. When the printer is in Menu Mode, the keys labeled with gray text and symbols function to select parameters from the menu. Table 4-1 shows how to enter Menu Mode.

**NOTE:** *With the exception of **On Line**, all keys operate only when the printer is off line.*

**Table 4-1: Entering Menu Mode**






Operation	Display Reads
1. Press <b>On Line</b> to place the printer off line.  — The On Line indicator shuts off.	00 READY
2. Press <b>Menu</b> to place the printer in Menu Mode.  — The printer is now in Menu Mode and the keys labeled with gray text and symbols operate.	<b>FONT/FEED LAYOUT</b>



### 4.1.1 Using the Keypad in Menu Mode

Table 4-2 describes the function of the Menu Mode keys. After reading the description of the Menu Mode keys, you may want to try using the keys to better understand their functionality. See Section 4.4.1 for an example that uses the Menu Mode keys to configure the printer.

**Table 4-2: Keypad Functions: Menu Mode**

Key	Function
	Performs two functions: <ul style="list-style-type: none"><li>• Scrolls the menus and features to the right</li><li>• Increases numeric values</li></ul>
	Performs two functions: <ul style="list-style-type: none"><li>• Scrolls the menus and features to the left</li><li>• Decreases numeric values</li></ul>
	Returns the printer to the previous level of operation
	Performs three functions: <ul style="list-style-type: none"><li>• Advances to the next menu level</li><li>• Invokes the ROM, RAM, and NVRAM functions</li><li>• Invokes the selected value</li></ul>
	Exits Menu Mode and returns printer operation back on line

## 4.2 Reading the Display in Menu Mode


Printer status and operator call messages are shown on the display in uppercase lettering, preceded by a numerical code. Examples of such messages are 00 READY or 11 PAPER OUT. Menu Mode messages are displayed differently to distinguish differences between the menu selections, feature selections, and value selections.

**NOTE:** *The menu names on the message display are written to accommodate all protocols available on the DEClaser 2100 plus printer (ANSI, PostScript, or CaPSL). Depending on the protocol being used, the menu names that appear on the message display may not read exactly as they do on Test Print A. For example, if you are using Digital's ANSI-Compliant Printing Protocol, the first menu listed on Test Print A is the FEEDER menu, but on the message it is displayed as the FONT/FEED menu.*

### 4.2.1 Displaying Menu and Feature Selections

Menu and feature selections are scrolled to the left or right, and are shown on the display in groups of 16 characters. This means that in addition to the menu or feature you have selected, other characters are displayed from the next menu or feature. Think of the menu and feature selections as being placed on a scrolling band separated only by a space. The display shows a group of 16 characters from the band and denotes the selection by displaying it first with a cursor below the first letter. See the examples in Figure 4-2.

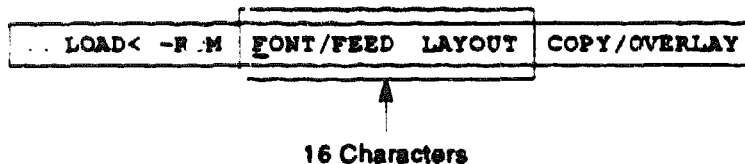**Figure 4-2: Menu Display**



Press ◀ to scroll to the left

Press ▶ to scroll to the right

**LOAD< -R M** **FONT/**

**LAYOUT** **COPY/OVER**

MLO-004819

This manual shows items from the scrolling menus and features as they are displayed (uppercase, lowercase, or initial capitals) with the selected item shown in bold type for clarification. For example:

**FONT FEED LAYOUT** or **offsetX offsetY**

### 4.2.2 Displaying Menu Values

Menu values are scrolled to the right and left using ▶ and ◀ and are displayed with the associated feature, for example:

i/f **RS232C**

When you scroll through the values, the currently selected value is always displayed first and is denoted by an equal sign (=) between the feature and value, for example:

i/f **=RS232C**

## 4.3 Printer Configuration Memory

Printer configuration uses four types of memory: an operating memory that contains the currently selected values, and three storage memories in which values are stored or saved. These memories are known as ROM (read-only memory), RAM (random-access memory), and NVRAM (nonvolatile random-access memory).


**NOTE:** *All four types of printer configuration memory are separate and distinct from the Free RAM listed on Test Print A. Configuration memory can be accessed only from the menus to set up the operational parameters of the printer.*

You can save new values temporarily in RAM, but they are cleared when the printer is powered off. You can also save new values in NVRAM so that they are not cleared if the printer is reset or powered off. ROM contains the factory default values that can be recalled into the operating memory. Some values can be saved only in RAM or only in NVRAM, while other values can be saved in either type of memory. For a listing of the types of memory in which values can be saved, see Table 4-7.

### 4.3.1 Operating Memory

The printer operates using the currently selected values contained in operating memory. When the printer is powered on, it loads the values stored in NVRAM into operating memory. When you select new values (through escape sequences or from the control panel), they are placed in operating memory and become part of the printer settings that are currently in use. Figure 4-3 shows the operational flow between the different types of memory.

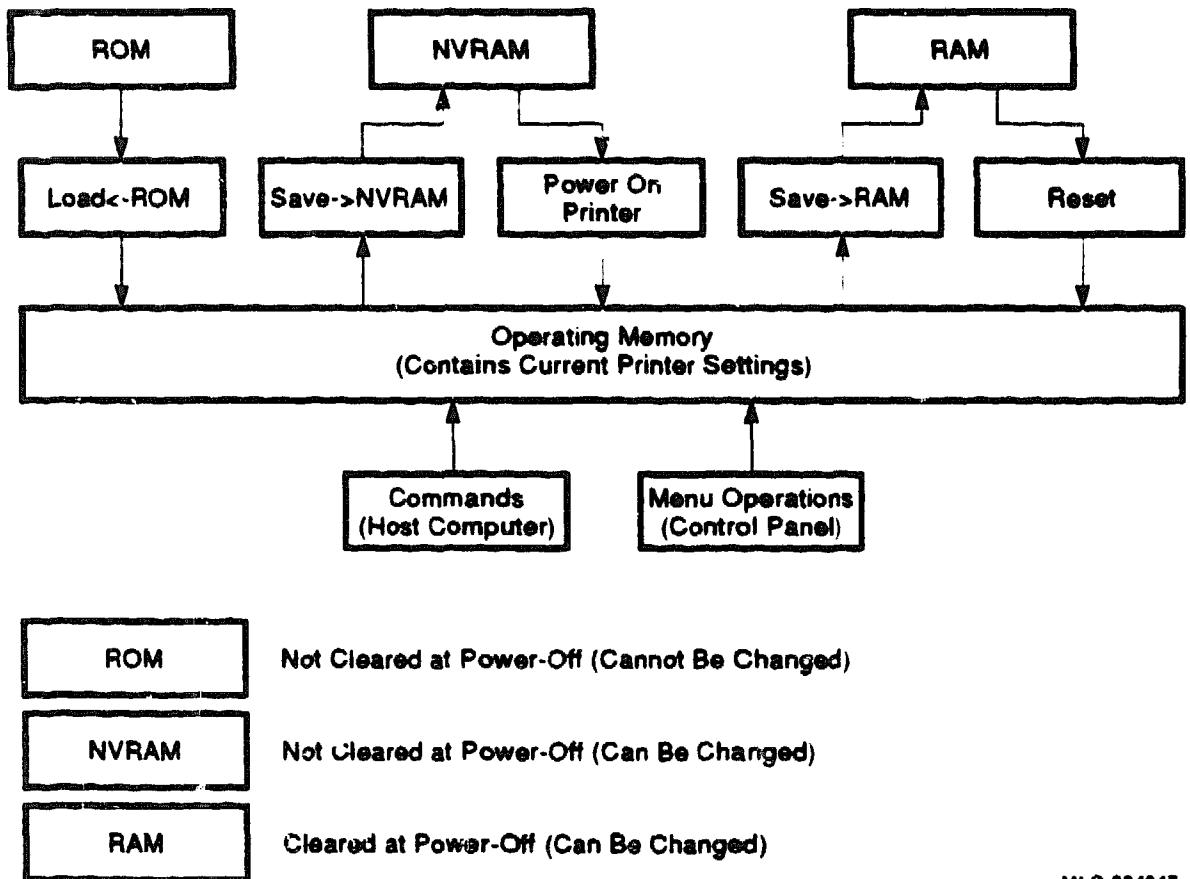Figure 4-3: Operating Memory



MLO-004847

### 4.3.2 ROM (Read-Only Memory)

ROM contains default values that are set at the factory. They are called default values because they are stored in ROM and cannot be changed. You can load these default values into operating memory while in Menu Mode using the procedure shown in Table 4-3.

**NOTE:** *Default values loaded from ROM are temporary values, and are affected if the printer receives a reset command or is powered off. If you want to retain the default values, you must save them in NVRAM (see Section 4.3.3).*

**Table 4-3: Recalling Factory Default Values from ROM**

Operation	Display Reads
1. Press <b>[On Line]</b> to place the printer off line.  — The On Line indicator shuts off.	00 READY
2. Press <b>[Menu]</b> to place the printer in Menu Mode.	<b>FONT/FEED LAYOUT</b>
3. Press <b>[&lt;]</b> once.	<b>LOAD&lt;-ROM FONT/F</b>
4. Press <b>[V Enter]</b> to load the default values from ROM.	OK (momentarily) <b>LOAD&lt;-ROM FONT/F</b>
5. Press <b>[On Line]</b> to place the printer on line.  — The On Line indicator lights.	00 READY

### 4.3.3 NVRAM (Nonvolatile Random-Access Memory)

The printer can communicate with many systems using the factory default settings in ROM, but you may have to change values to accommodate your particular application or host computer. NVRAM allows those changes to be saved in a nonvolatile memory so that they are available each time you power on the printer. In nonvolatile memory the selected values are not cleared when the printer is powered off or reset. Selections are saved in NVRAM until you change them. To save values in NVRAM while in Menu Mode, use the procedure shown in Table 4-4.

**Table 4-4: Saving Values in NVRAM**

Operation	Display Reads
1. Press <b>On Line</b> to place the printer off line.  — The On Line indicator shuts off.	00 READY
2. Press <b>Menu</b> to place the printer in Menu Mode.	<u>F</u> ONT/ <u>F</u> EEED LAYOUT
3. Press <b>□</b> twice.	<u>S</u> AVE- <u>&gt;</u> NVRAM LOAD
4. Press <b>▽ Enter</b> to save the values in NVRAM.	OK (momentarily) <u>S</u> AVE- <u>&gt;</u> NVRAM LOAD
5. Press <b>On Line</b> to place the printer on line.  — The On Line indicator lights.	00 READY

### 4.3.4 RAM (Random-Access Memory)

RAM is a temporary memory area that stores selected values until the printer is powered off. It is useful to store features in RAM when you need to change settings for specific print jobs. To save values in RAM while in Menu Mode, use the procedure in Table 4-5.

**Table 4-5: Saving Values In RAM**


Operation	Display Reads
1. Press <b>On Line</b> to place the printer off line. — The On Line indicator shuts off.	00 READY
2. Press <b>Menu</b> to place the printer in Menu Mode.	<u>F</u> ONT/ <u>F</u> EED LAYOUT
3. Press <b>↵</b> three times.	<u>S</u> AVE->RAM SAVE->
4. Press <b>▽ Enter</b> to save the values in RAM.	OK (momentarily) ↓ <u>S</u> AVE->RAM SAVE->
5. Press <b>On Line</b> to place the printer on line. — The On Line indicator lights.	00 READY

## 4.4 Operational Flow in Menu Mode

Figure 4-4 illustrates the operational flow to select and change values while in Menu Mode. See Section 4.4.1 for an example of selecting values while in Menu Mode.



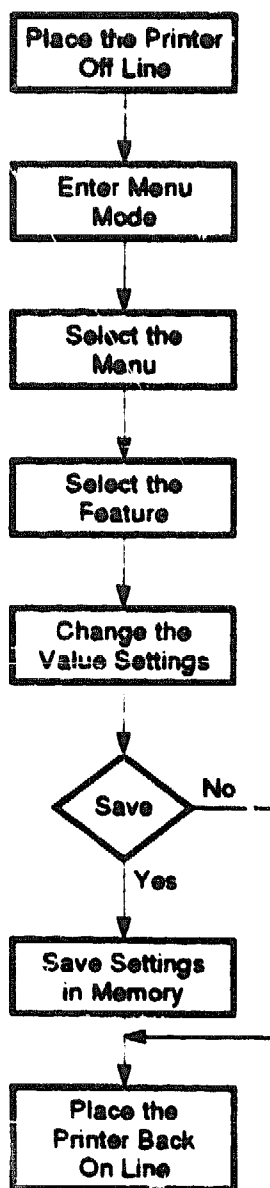**Figure 4-4: Operational Flow Chart**



MLO-004846

### 4.4.1 Sample Procedure for Changing and Saving Values

This section contains an example of how to change and save values in Menu Mode. Use the steps in Table 4-6 to perform the following tasks:

- Enter Menu Mode
- Change page offset values of X and Y in the LAYOUT menu from +0.0 to -10.0
- Save the new values in NVRAM
- Exit Menu Mode

#### Before You Begin

This example assumes that the printer is using the factory default values in ROM. You will use Test Print A to verify the changes you make. Print a copy of Test Print A before beginning this example (Section 2.13). Be sure that all printing has stopped and the display reads 00 READY before you make any changes.

**Table 4-6: Changing and Saving Values**

Operation	Display Reads
1. Press <b>[On Line]</b> to place the printer off line.  — The On Line indicator shuts off.	00 READY
2. Press <b>[Menu]</b> to place the printer in Menu Mode.	<u>F</u> ONT/ <u>F</u> EED LAYOUT
3. Press <b>[<math>\square</math>]</b> once to scroll the display to the LAYOUT menu.	<u>L</u> AYOUT COPY/OVER
4. Press <b>[<math>\nabla</math> Enter]</b> to enter the LAYOUT menu.	<u>offsetX</u> offsetY
5. Press <b>[<math>\nabla</math> Enter]</b> to select the offsetX feature.	offsetX =+0.0

**Table 4-6 (Cont.): Changing and Saving Values**

<b>Operation</b>	<b>Display Reads</b>
6. Press <input type="button" value="↓"/> until the value equals -10.0.  NOTE: The value decreases in steps of 0.5.	offsetX <u>-10.0</u>
7. Press <input type="button" value="▽ Enter"/> to enter the new value.	offsetX =-10.0 (momentarily) ↓ <u>offsetX</u> offsetY
8. Press <input type="button" value="▶"/> once to scroll the display to the offsetY feature.	<u>offsetY</u> autoNL o
9. Press <input type="button" value="▽ Enter"/> to select the offsetY feature.	offsetY =+0.0
10. Press <input type="button" value="↓"/> until the value equals -10.0.  NOTE: The value decreases in steps of 0.5.	offsetX <u>-10.0</u>
11. Press <input type="button" value="▽ Enter"/> to enter the new value.	offsetY =-10.0 (momentarily) ↓ <u>offsetY</u> autoNL o
12. Press <input type="button" value="△"/> to return to the menu selections.	<u>LAYOUT COPY/OVER</u>
13. Press <input type="button" value="↓"/> three times to reach the NVRAM SAVE menu.	<u>SAVE-&gt;NVRAM</u> LOAD
14. Press <input type="button" value="▽ Enter"/> to save the offset values in NVRAM.	OK (momentarily) ↓ <u>SAVE-&gt;NVRAM</u> LOAD

**Table 4-6 (Cont.): Changing and Saving Values**

<b>Operation</b>	<b>Display Reads</b>
15. Press <b>On Line</b> to exit Menu Mode.  — The On Line indicator lights.	00 READY

**Verification**

To verify that the offset distances have been changed, print a copy of Test Print A and compare it with the copy made before the changes. Verify the changes by comparing the new layout of the page and the offset values in the LAYOUT menu (see Figure 4-5).

[illegible]

Printer Configuration 4-15

## 4.5 Menu Descriptions

This section describes the printer menus, features, and values. See Table 4-7 for a complete listing of all menus and parameters.

**Table 4-7: Menu Mode Features and Values**

Menu	Features	Values
FEEDER	feeder	Casa. <sup>1</sup> Manual
LAYOUT	offsetX <sup>2</sup>	-10.0 . +0.0 <sup>1</sup> . +10.0
	offsetY <sup>2</sup>	-10.0 . +0.0 <sup>1</sup> . +10.0
	autoNL	ON <sup>1</sup> OFF
COPY	copy	01 <sup>1</sup> -99
COMMAND	message <sup>2</sup>	English <sup>1</sup> Finnish French German Italian Japan Norway Port. Spanish Swedish Danish Dutch
INITIAL	macro	000 <sup>1</sup> -099

<sup>1</sup>Factory default setting.

<sup>2</sup>Cannot be selected using a command from the host. Selectable from the control panel only.

**Table 4-7 (Cont.): Menu Mode Features and Values**

<b>Menu</b>	<b>Features</b>	<b>Values</b>
	paint	Partial <sup>1</sup> Full Dual
	paper	Letter <sup>3</sup> A4
<b>INTERFACE</b>	<b>if<sup>2</sup></b>	RS232C <sup>1</sup> CENTRO Optional I/O
	baud <sup>4</sup>	300 600 1200 2400 4800 <sup>1</sup> 9600 19200
	rsmode <sup>4</sup>	2S <sup>1</sup> 8SS 7OS 7ES 7OSS 7ESS 8OS 8ES
	dtr <sup>4</sup>	Fix-H <sup>1</sup> Ready-H
	xon/xoff <sup>4</sup>	ON <sup>1</sup> OFF
	cts/ack <sup>4</sup>	OFF <sup>1</sup> ON

<sup>1</sup> Factory default setting.

<sup>2</sup> Cannot be selected using a command from the host. Selectable from the control panel only.

<sup>3</sup> Factory default setting for North America. Other countries use A4 as the default.

<sup>4</sup> Available only when RS232C is selected.

### 4.5.1 FEEDER Menu

The FEEDER menu determines whether paper is fed manually or automatically from the cassette. You can also select the paper feed selection using the **Manual Feed** key on the control panel. See Table 3-3 for more information about using the **Manual Feed** key. For more information about manual feed operation, see Section 2.8. Table 4-8 shows the features and values of the FEEDER menu.

**Table 4-8: FEEDER Menu Features and Values**

Feature	Values	Description
feeder	Cass. <sup>1</sup>	Selects the paper cassette to automatically feed paper into the printer.
	Manual	Selects the manual feeding mode of operation. You must feed paper one sheet at a time when you select Manual.
<sup>1</sup> Factory default setting.		



## 4.5.2 LAYOUT Menu

The features of the LAYOUT menu shown in Table 4-9 allow you to make adjustments to the print position (the distances from the edges of the paper where printing begins), and to set the new line so that print wraps when it reaches the right margin.

**Table 4-9: LAYOUT Menu Features and Values**

Feature	Values	Description
offsetX	-10.0	Determines the offset distance from the right and left sides of the page. An offset of 10.0 is approximately 1.1 in.
	+0.0 <sup>1</sup>	
	+10.0	
offsetY	-10.0	Determines the offset distance from the top and bottom of the page. An offset of 10.0 is approximately 1.1 in.
	+0.0 <sup>1</sup>	
	+10.0	
autoNL	ON <sup>1</sup>	When the print position reaches the right margin, it wraps to the left margin of the next line.
	OFF	When the print position reaches the right margin, it does not move to the next line until the printer receives a Carriage Return (CR) or Line Feed (LF) command from the host computer. Data beyond the right margin is lost until the carriage return or line feed command is received.

<sup>1</sup>Factory default setting.

#### 4.5.2.1 Offset Position (offsetX, offsetY)


The offset feature of the LAYOUT menu allows you to make fine adjustments to the printing coordinates. Since the DEC Laser 2100 plus printer is a page printer, it is not possible to adjust the print position by manually shifting the position of the page. Do not use offset to move normal data to different positions on the page. It should only be used as a mechanism to center the print on the page. Test Print B is typically used when adjusting the offset positions.

You cannot set offset positions using escape sequences from the host computer. You must select them from the control panel.

Figure 4-6 shows the directions of offsetX and offsetY in relation to the direction that paper is fed into the printer.

**NOTE:** Offset values are changed in increments and decrements of approximately 0.1 in. from the default value of +0.0 in. For example, an offset value of +5.0 moves the print origin approximately 0.5 in.

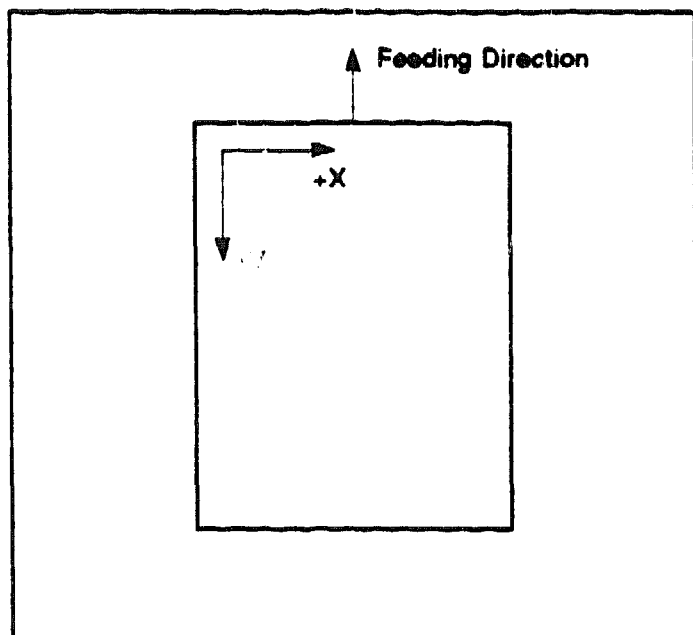**Figure 4-6: Offset Positioning**



MLO-004844

Figure 4-7 shows sample printouts of Test Print A that use different offset values.

Figure 4-7: Offset Printout Samples

Version : V1.0 Total Ram : 2560 ( 512 + 2048 ) K byte Font Card : NONE	
Page Count : 001628 Free Ram : 002338 K bytes	
<b>Current Settings</b>	
<b>FEEDER</b> feeder = Cass. ( RAM + NVRAM )	<b>LAYOUT</b> offsetX = -10.0 offsetY = -10.0 autoN1 = ON
<b>COPY</b> copy = 01 ( RAM )	( RAM + NVRAM )
<b>INITIAL</b> macro = 000 paint = Partial paper = Letter ( NVRAM )	<b>COMMAND</b> message = English ( NVRAM )
<b>INTERFACE</b> i/f = RS232C baud = 4800 rsmode = 8S dtr = Fix-H xon/xoff = ON etx/ack = OFF ( NVRAM )	

#### 4.5.2.2 Automatic New Line (autoNL)

The autoNL feature determines whether or not the printer wraps to the next line when it reaches the right margin.

#### 4.5.3 COPY Menu

The COPY menu (Table 4-10) determines the number of copies to be printed. You can save this setting only in RAM.

**Table 4-10: COPY Menu Features and Values**

Feature	Values	Description
copy	01 <sup>1</sup> -99	Sets the number of copies of each sheet to be printed.

<sup>1</sup>Factory default setting.

#### 4.5.4 COMMAND Menu

The COMMAND menu (Table 4-11) lets you display messages in your native language. Three types of messages are displayed in the desired language: status, operator call, and error. Service call messages and menus are displayed only in English.

You cannot select this setting using commands from the host computer. You must select it from the control panel. You can save the setting only in NVRAM.

**Table 4-11: COMMAND Menu Features and Values**

Feature	Values	Description
message	English <sup>1</sup> Finnish French German Italian Japan Norway Port. Spanish Swedish Danish Dutch	Displays messages in the selected language.

<sup>1</sup>Factory default setting.

## 4.5.5 INITIAL Menu

The INITIAL menu (Table 4-12) combines the macro, paint, and paper size features. You can save settings from this menu only in NVRAM. To activate the settings, perform a reset after changing them.

**Table 4-12: INITIAL Menu Features and Values**

Feature	Values	Description
macro	000 <sup>1</sup> -099	Assigns the User Preference set, device identification answer, and initialization message (see Section 4.5.5.1).
paint	Partial <sup>1</sup>	Reserves no memory for bitmap pages. Memory is allocated dynamically.
	Full	Directs the printer to allocate memory space for one full bitmap page. The Full setting eliminates complex errors but may slow the printer down if not all pages require a full bitmap.  <i>NOTE: A4 and letter-size require at least 1 MB of optional RAM. Legal-size requires 2 MB of optional RAM.</i>
	Dual	Directs the printer to allocate memory space for two full bitmap pages. The Dual setting allows you to print at a more efficient speed for documents that require full page bitmaps for all pages.  <i>NOTE: A4 and letter-size require at least 2 MB of optional RAM. Legal-size requires 3 MB of optional RAM.</i>
paper	letter <sup>2</sup>	Specifies letter-size (8 1/2 in. x 11 in.) paper for manual feed operation.
	A4	Specifies A4-size (297 mm x 210 mm) paper for manual feed operation.

<sup>1</sup>Factory default setting.

<sup>2</sup>Factory default setting for North America. Other countries use A4 as the default.

#### 4.5.5.1 Macro

The macro feature allows you to select an environment for local compatibility. It assigns the proper User Preference character set, enables and disables the initialization message, and specifies a return response (device identification) when a Device Attributes (DA) request is received. The macro feature is slightly different from other menu features because three parameters (device ID, initialization message, and User Preference character set) are *added together* to determine the macro value. The device ID, initialization message, and user preference values cannot be selected independently, they must be added together to form the macro value.

The macro feature allows you to choose the User Preference character set for your application or system. Consult the *Digital ANSI-Compliant Printing Protocol Level 3 Programming Reference Manual* for more information about the user preference sets. Table 4-13 lists the User Preference character sets and their values.

**Table 4-13: User Preference Character Set**

Character Set	Value
DEC Supplemental	00 <sup>1</sup>
ISO Latin-1 Supplemental	10
JIS Katakana <sup>2</sup>	20
ISO Latin-Hebrew Supplemental	30
DEC Latin-Hebrew Supplemental	40
DEC 7-Bit Hebrew	50
DEC Technical	60

<sup>1</sup>Factory default setting.

<sup>2</sup>Not resident

The initialization message is sent to connected devices (when the printer is powered on or reset from the control panel) to indicate that the printer is reinitializing. The feature is designed for use with future applications and should be set to disabled at this time. Consult the *Digital ANSI-Compliant Printing Protocol Level 3 Programming Reference Manual* for additional information about this feature.

**Table 4-14: Initialization Message**

Initialization Message	Value
Disabled	00 <sup>1</sup>
Enabled	05

<sup>1</sup>Factory default setting.

The DEClaser 2100 plus printer can identify itself as a Digital ANSI-Compliant Printing Protocol level 3 printer, and therefore can be recognized as such by symbionts and terminal drivers that conform to Digital ANSI-compliant architecture. This identification is also compatible with level 2 devices because all level 2 sequences are also supported. You can also select an LN03 identification for applications that require the printer to identify itself as an LN03 printer. For example, the DECmate word processing system requires an LN03 device identification. The device identification values are shown in Table 4-15.

**Table 4-15: Device Identification**

Device ID	Value
Digital ANSI-compliant level 3 device	00 <sup>1</sup>
LN03	01

<sup>1</sup>Factory default setting.

#### 4.5.5.2 Examples Using the Macro Feature

The examples in Table 4-16 demonstrate how to determine the macro value.

**Table 4-16: Macro Feature Examples**

Character Set and Value	Initialization Message and Value	Device ID and Value	Macro Value
JIS Katakana (20)	Not Enabled (00)	Level 3 (00)	20
DEC Technical (60)	Not Enabled (00)	Level 3 (00)	60
DEC Supplemental (00)	Not Enabled (00)	LN03 (01)	01

#### **4.5.5.3 Paint Mode (paint)**

The paint mode (paint) feature instructs the printer to reserve memory space for one or two full bitmap pages, or not to allocate any bitmapped memory space for page printing. Since printer memory is shared with both fonts and page drawings, it is usually desirable to let the printer allocate the memory dynamically, because even full-page sized images often print in partial paint mode. You should enable the printer to direct the memory allocation mechanism only in the following situations:

- If you are receiving error messages about page complexity—for example, 21 COMPLEX DATA.
- If pages are breaking incorrectly—for example, half the page prints on one sheet and the second half on the next sheet.

See Table 4–12 for a complete description of the paint mode values.

#### **4.5.5.4 Paper Size (paper)**

The paper size feature determines the printable area on the page. It is only used in manual feed mode when no other command has been received to specify paper size. See Section 2.8 for additional information about manually feeding media.

### **4.5.6 INTERFACE Menu**

The correct interface connection is necessary for the printer to communicate properly with the host computer. The DEC Laser 2100 plus printer supports both parallel and serial interface connections. The interface must match the type used by the host computer.

You cannot make selections from the INTERFACE menu using commands from the host computer. All values must be selected from the control panel and can be saved only in NVRAM. Once you make the selections you should save them in NVRAM so that they will be activated (loaded into operational memory) each time the printer is powered on. The INTERFACE menu features and values are shown in Table 4–17 and described in the following sections.



**Table 4-17: INTERFACE Menu Features and Values**

Feature	Values	Description
i/f	RS232C <sup>1</sup>	Selects the RS232C serial interface to communicate with the host computer. Select this value if your computer uses a serial interface.  When you select the serial interface, you must select values for all the other features in this menu (baud rate, rsmode, and so on).
	CENTRO	Selects the Centronics parallel interface to communicate with the host computer. Select this value if your printer uses a parallel interface.  When you select the parallel interface, all other features in the interface menu are disabled.
	Optional I/O	When an option is plugged into the I/O port, the I/O option will appear in the i/f menu.
baud <sup>2</sup>	300	Sets the transmit and receive speed the printer uses to communicate with the host computer. The printer speed must match the speed used by the host computer.
	600	
	1200	
	2400	
	4800 <sup>1</sup>	
	9600	
rsmode <sup>2</sup>	19200	
	8S <sup>1</sup>	8 data bits No parity check 1 stop bit
	8ES	8 data bits Even parity check 1 stop bit
	8OS	8 data bits Odd parity check 1 stop bit
	7ESS	7 data bits Even parity check 2 stop bits
	7OSS	7 data bits Odd parity check 2 stop bits
	7ES	7 data bits Even parity check 1 stop bit

<sup>1</sup>Factory default setting.

<sup>2</sup>Available only when RS232C is selected.

**Table 4-17 (Cont.): INTERFACE Menu Features and Values**

Feature	Values	Description
	7OS	7 data bits Odd parity check 1 stop bit
	8SS	8 data bits No parity check 2 stop bits
dtr <sup>2</sup>	Fix-H <sup>1</sup>	Sets the DTR line to a fixed high signal.
	Ready-H	Sets the DTR line to a high signal when the printer is ready to receive data.
xon/xoff <sup>2</sup>	ON <sup>1</sup>	Enables buffer overflow control.
	OFF	Disables buffer overflow control.
etx/ack <sup>2</sup>	OFF <sup>1</sup>	Disables buffer overflow control.
	ON	Enables buffer overflow control.
<b>NOTE:</b> <i>Etx/ack is not supported on Digital systems.</i>		

<sup>1</sup> Factory default setting.

<sup>2</sup> Available only when RS232C is selected.

#### 4.5.6.1 Interface Selection (I/F)

The interface selection (i/f) feature selects the type of interface used to communicate with the host computer and enables video mode. The serial or parallel interface must match the interface used by the host computer.

When you select the parallel (CENTRO) interface, you do not select any other settings in the INTERFACE menu. The other features in this menu apply only to the serial interface and are not displayed when you select the parallel interface.

When you select the serial (RS232C) interface, you must also select other values in the INTERFACE menu in order to match the features of the host computer. The additional features are described in Section 4.5.6.2.

When you select Optional I/O, you enable video mode. You must plug the video option into the I/O port for the Optional I/O option to appear on the i/f menu.

#### **4.5.6.2 Baud Rate (baud)**

The baud rate (baud) feature sets the transmit and receive speed the printer uses to communicate with the host computer. The printer speed must match the speed used by the host computer.

#### **4.5.6.3 RS232C Data Format (rsmode)**

The RS232C data format (rsmode) feature determines the data format the printer uses to communicate with the host computer. The first part of the value (7 or 8) is the number of data bits the printer expects to see in each character it receives. The second part of the value is the type of parity (checking) bit the printer looks for in each character. A parity check is a method used to detect errors when data is sent over a communications line. Some systems use an odd parity bit to detect errors, while other systems use an even parity bit. Some systems use no parity bit at all. The third part of rsmode is the number of stop bits. Some systems use one stop bit while other systems require two. The format for the data bits, parity bit, and stop bits must match the format of the host computer in order for the printer and the host to communicate.

#### **4.5.6.4 Data Terminal Ready (dtr)**

The data terminal ready (dtr) feature uses hardware to regulate the flow of data to the input buffer of the printer. Regulation is accomplished by toggling a signal on the DTR line of the serial port when the printer is ready to receive data. This is sometimes referred to as hardware handshaking protocol.

For Digital systems, the dtr feature should always be set to the fixed high value. When the DTR signal is fixed high (Fix-H) it indicates to the system that the printer is "present."

#### **4.5.6.5 Buffer Control (xon/xoff)**

The buffer control (xon/xoff) feature uses software to regulate the flow of data to the input buffer of the printer. It is sometimes referred to as software handshaking protocol, a method the printer and the host computer use to exchange on/off signals. These signals prevent the input buffer from overflowing with data. If the input buffer becomes full and handshaking is not enabled, the overflowing data will be lost. Xon/xoff must be enabled in systems that use this software handshaking protocol to prevent the loss of data.

#### **4.5.6.6 End of Text/Acknowledge (etx/ack)**

The end of text/acknowledge (etx/ack) feature is another type of handshaking protocol on some systems to prevent data overflow. The etx/ack feature also uses software to regulate the flow of data to the input buffer by exchanging signals with the host computer. It is recommended that this feature be enabled by systems that support etx/ack to prevent the loss of data.

**NOTE:** *The etx/ack feature is not supported on Digital systems. Use xon/xoff if you have a Digital system.*

[illegible][illegible]

## Chapter 5

# Print Media

---

This chapter describes the print media that are appropriate for use with the DEClaser 2100 plus printer. The types of print media described in this chapter are paper, labels, transparencies, and envelopes.

The DEClaser 2100 plus printer produces excellent print quality using electrophotographic laser technology. The laser printing process differs greatly from that of a conventional impact printer, and this is why paper selection is particularly important. Because toner is bonded to the paper as it passes through the heat and pressure rollers of the fixing unit, the paper must be able to withstand high amounts of heat and pressure.

**CAUTION:** *When selecting paper or other print media, always print test samples of the paper you want to use. This is particularly important when you are printing on chemically treated or coated paper, such as preprinted forms or colored paper. The inks and pigments used on these papers must also be able to withstand the high heat and pressure of the fixing unit. Be sure to consider the heat limitations of transparencies and the glues used on envelopes and labels. Always select print media according to the instructions and specifications in this chapter. For a complete listing of recommended print media and ordering information, see Appendix B.*

Print quality can also deteriorate if paper is not stored properly. Read Section 5.5 in this chapter for complete information about storing paper.

For additional information about print media, consult the *Digital Laser Printers Guide to Paper and Other Media* available from DECdirect (see Appendix B).

## 5.1 Paper Specifications

This section contains information on the sizes and specifications of plain paper that can be used with the DEClaser 2100 plus printer.

Table 5-1 lists the paper sizes that can be used with the standard and optional size cassettes for the printer.

**Table 5-1: Cassette Feed Paper Sizes**

<b>Paper Size</b>	<b>Dimensions</b>
A4	210 mm x 297 mm
Executive	7 ¼ in. x 10 ½ in.
Letter	8 ½ in. x 11 in.
Legal	8 ½ in. x 14 in.

### **Manual Feed Paper and Envelope Sizes**

Manual feed operation can accept all of the paper sizes listed in Table 5-1 as well as the following sizes for paper and envelopes:

**Minimum:** 100 mm x 190 mm (4 in. x 7 ½ in.)

**Maximum:** 216 mm x 356 mm (8 ½ in. x 14 in.)

Table 5-2 lists paper specifications for the DEClaser 2100 plus printer.

**Table 5-2: Paper Specifications**

<b>Category</b>	<b>Specification</b>
Paper weight: cassette feed	60 g/m <sup>2</sup> to 80 g/m <sup>2</sup> basis weight (16 lb. to 21 lb.)
Paper weight: manual feed	60 g/m <sup>2</sup> to 135 g/m <sup>2</sup> basis weight (16 lb. to 35 lb.)
Thickness	0.075 mm to 0.115 mm
Moisture content	5% to 8%
Smoothness	100-300 Sheffield
Brightness	84% minimum recommended
Heat tolerance	200°C (392°F) for 0.1 second
Electrical resistance	1.0 x 10 <sup>11</sup> ohm-cm-2.0 x 10 <sup>12</sup> ohm-cm (cubic content) 2.0 x 10 <sup>10</sup> ohm-cm-2.0 x 10 <sup>11</sup> ohm-cm (surface)
Cotton (rag) content	25% maximum

### **5.1.1 Special Considerations When Printing on Paper**

Because of the way laser printers print and bond toner to the paper, you must observe some special requirements with certain types of papers.

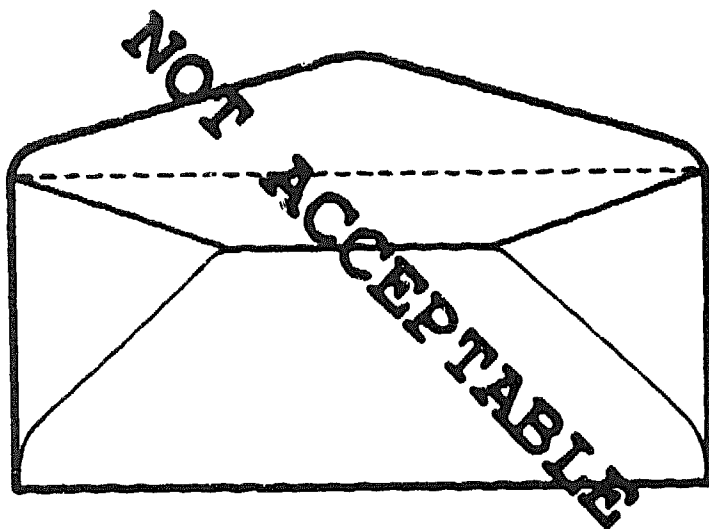
- Do not use preprinted papers that do not meet the specifications for heat tolerance. The ink from some preprinted papers, such as those with a company letterhead, can cause smearing and in some extreme cases could damage the printer.
- Do not use colored papers in which the color is applied as a coating to the surface.
- Do not use thermal papers.
- Prepunched paper is not recommended.
- Do not use carbon papers.



## 5.2 Envelope Specifications


Envelopes must meet the same specifications as paper (see Table 5-2). In addition, the following types of envelopes cannot be used with the printer:

- Envelopes with sealing flaps that are open




16.0-00573

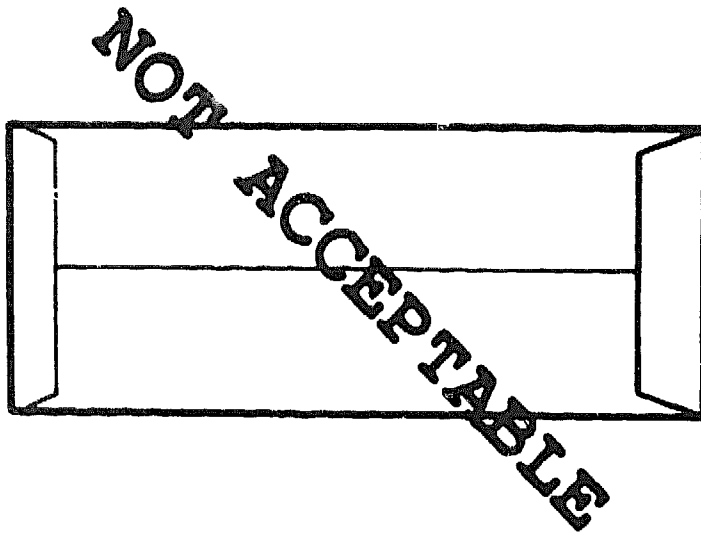- Envelopes with sealing flaps at the leading and trailing edges




MLO-005728

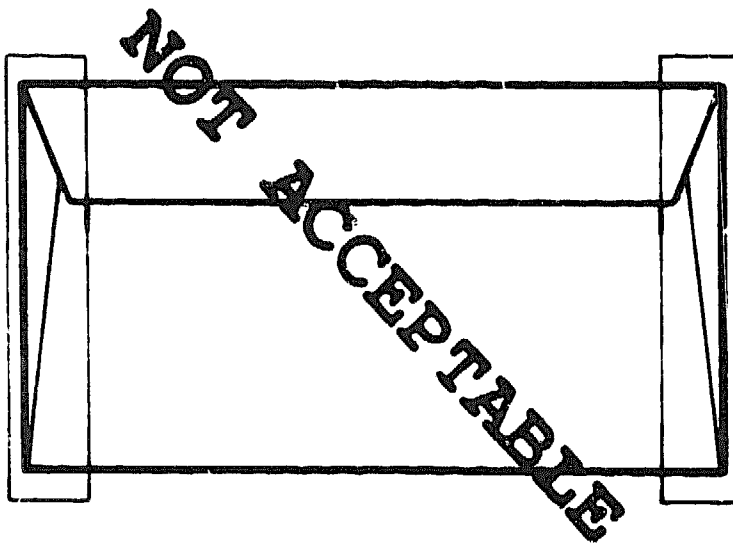- Envelopes with three or more layers of paper at the leading and trailing edges




MLO-005732

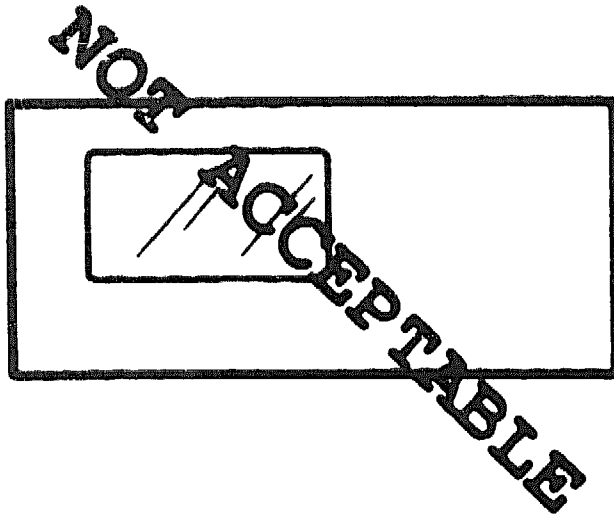- Envelopes that have transparent windows



MLO-005730

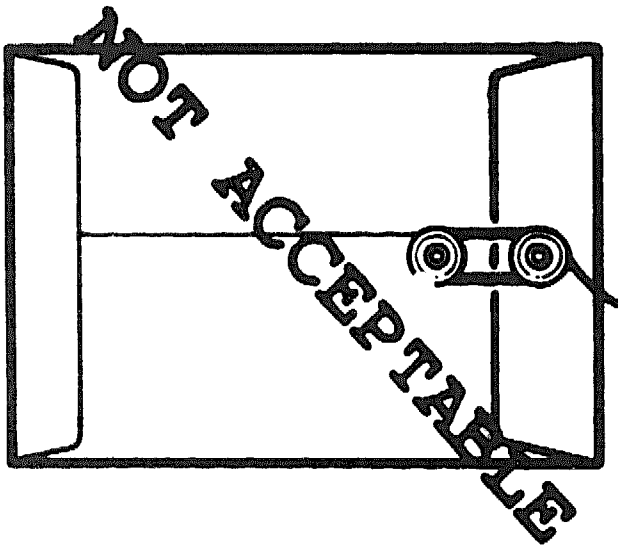- Envelopes that have clasps, snaps, or strings




MLO-005733

## 5.2.1 Special Considerations When Printing on Envelopes

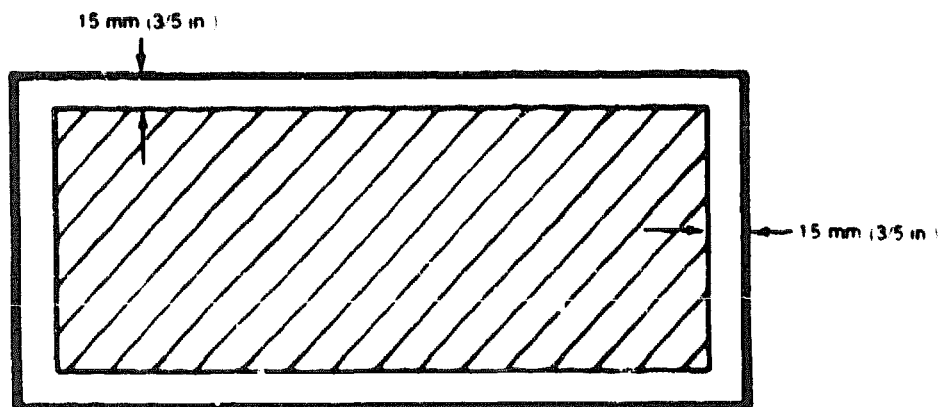Observe the following requirements when printing on envelopes:

- Feed envelopes manually (if you are not using the special envelope cassette).
- Envelopes can be printed only on the front side.
- Since you need to print addresses in a particular area on envelopes, you must give the printer the proper print coordinates to print the addresses. See Section 2.10 for more information about printing on envelopes.
- Printing in the 15 mm (3/5 in.) border around the envelope may cause print quality problems with some types of envelopes. For best print quality, do not print in this border.
- Use the rear output tray.
- Install the optional envelope cassette in the cassette slot and select it using the DECASFC command with a parameter of 1.



MR 0-005978

## 5.3 Transparency Specifications

Table 5-3 and Table 5-4 contain information on the sizes and specifications of transparencies that can be used with the DECtaser 2100 plus printer.

**Table 5-3: Transparency Sizes**

Transparency Size	Dimensions
A4	210 mm x 297 mm
Letter	8 1/2 in. x 11 in.

**Table 5-4: Transparency Specifications**

Category	Specification
Transparency weight	135 g/m <sup>2</sup> to 150 g/m <sup>2</sup> basis weight
Thickness	0.095 mm to 0.115 mm
Heat tolerance	200°C (392°F) for 0.1 second

### 5.3.1 Special Considerations When Printing Transparencies

Observe the following requirements when printing on transparencies:


- Transparencies are usually fed manually. If you are feeding transparencies from a cassette, be sure they are high-quality transparencies and meet the specifications listed in Table 5-4.
- Fan the transparencies before loading them to prevent jams.
- Use the rear output tray.
- Remove transparencies from the rear output tray as each one is printed to prevent them from sticking to each other.

## 5.4 Label Specifications

A label consists of a face sheet, an adhesive sheet, and a carrier sheet. The face sheet (or printing surface) is usually composed of photocopying paper and should meet the same specifications for paper as described in Table 5-2. The carrier sheet and adhesive used for the labels must also be able to meet the heat tolerance specification of 200°C (392°F) for at least 0.1 second. Figure 5-1 shows the types of labels that are unacceptable.

**CAUTION:** *Exposed adhesive on labels can cause damage to the printer. To test for exposed adhesive, press a plain piece of paper on top of the sheet of labels. If the paper sticks to the labels, you should not use those labels.*

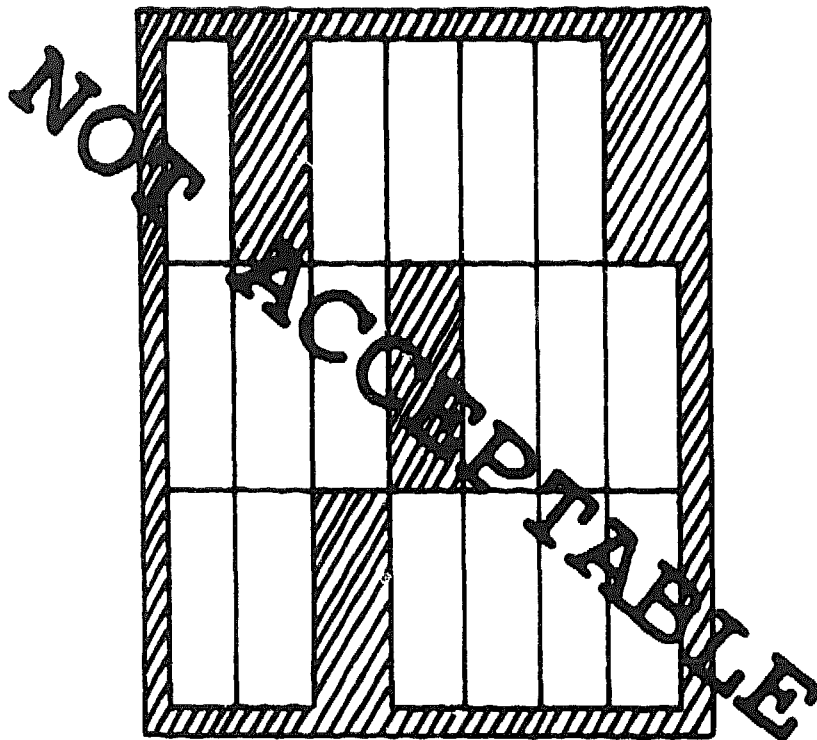Figure 5-1: Unacceptable Labels



MLO-00599

### **5.4.1 Special Considerations When Printing on Labels**

Observe the following requirements when printing on labels:

- Labels are usually fed manually. If you are feeding labels from a cassette, be sure they are high-quality labels that meet the specifications listed in Table 5-2.
- Be sure that the carrier sheet is not exposed.
- Be sure that no adhesive is exposed.
- Use the rear output tray.

## **5.5 Paper Handling and Storage**

Although you may be using paper that meets all specifications, improper handling and storage may affect the quality of the paper and the performance of the printer. Improper storage and handling can cause paper jams, misfeeding, and other printer performance problems.

Follow the recommendations in this section on paper storage and handling to reduce the possibility of printer jams and misfeeds.

### **5.5.1 Paper Handling**

Observe the following requirements when handling paper:

- Load the cassette to its proper capacity rather than adding small amounts at a time. Loading small amounts of paper can cause jams because of air pockets created between small stacks of paper.
- When you unwrap a new package of paper, discard the top and bottom sheets, as they tend to absorb the most humidity from the surrounding environment.
- Sudden changes in temperature or humidity can cause paper curl, leading to misfeeds and paper jams. If you bring paper from a storage environment that differs greatly in temperature or humidity from the printer room, leave the paper unopened for a day to allow it to adjust to the printer room environment.

- Check to see that the paper is loaded with the correct side up. Some packages of paper have an arrow on the label that points in the direction of the top side of the paper. Load paper with this top side up.

If there is no arrow on the label, check the paper for curl. If a small amount of curl is present, fan the paper in the opposite direction of the curl to remove as much of the curl as possible.

- Follow the instructions in Chapter 2 to properly load paper.

### **5.5.2 Paper Storage**

Observe the following requirements when storing paper:

- Always store unused paper in its original wrapping. The wrapping protects the paper against humidity.
- Do not store paper directly on the floor, as floors are generally humid.
- Lay paper on a flat surface to prevent in-ream paper curl.





## Chapter 6

# Troubleshooting

This chapter helps you to quickly locate most problems that may occur with the printer. It discusses the following topics:

Topic	Section
Error skip procedure	Section 6.1
Printer status messages	Section 6.2
Operator call messages	Section 6.3
Software error messages	Section 6.4
Service call messages	Section 6.5
Common operating problems	Section 6.6
Paper jams	Section 6.7

Most problems are identified on the message display when they occur. The corrective action to take is listed in the appropriate table as follows:

Topic	Table
Printer Status Messages	Table 6-2
Operator Call Messages	Table 6-3
Software Error Messages	Table 6-4
Common Operating Problems	Table 6-5

**NOTE:** *The printer status messages do not require operator intervention.*

### 6.1 Error Skip Procedure

The DEClaser 2100 plus printer alerts you to error conditions by stopping the printer, placing it off line, and displaying the type of error on the control panel. Some error conditions cannot be cleared using the error skip procedure. For example, 12 PRINTER OPEN needs to be corrected

immediately before printing can continue. You can acknowledge other types of errors and still continue printing by pressing **Error Skip**. When these types of errors occur, you may elect to take the long-term corrective action (for example, adding RAM or reassigning memory) at another time.

Use the procedure in Table 6-1 to acknowledge the error condition and continue printing

**Table 6-1: Error Skip Procedure**

Operation	Display Reads
	"Error Message"
1. Press <b>Error Skip</b> . — The Alarm indicator shuts off. — The error condition clears.	00 READY
2. Press <b>On Line</b> to place the printer back on line. — The On Line indicator lights. — Printing continues.	00 READY

Some communication or formatting errors may repeat when the printer is receiving additional communications data. When this happens you may need to repeat the error skip procedure several times.

## 6.2 Printer Status Messages

Printer status messages are displayed to show the printer's current operating condition (see Table 6-2). This status information lets you know if the printer is performing a task or is ready to receive another job. Status messages are displayed whether the printer is on line or off line.

**Table 6-2: Printer Status Messages**

Message	Meaning
00 READY	The printer is ready to operate. The ready condition can exist whether the printer is on line or off line.
01 TEST PRINT B	Test Print B is being printed (Section 2.14).
02 WARMING UP	The printer has not reached operating temperature. Printing cannot be performed while the printer is warming up.

**Table 6-2 (Cont.): Printer Status Messages**

<b>Message</b>	<b>Meaning</b>
03 RESET	The printer is being reset (Section 2.17).
04 TEST STOP	Test printing has stopped.
05 TEST PRINT A	Test Print A is being printed (Section 2.13).
06 FONT LIST A	Font List A is being printed (Section 2.15).
15 ENGINE TEST	The mechanical engine test is being executed (Section 2.12).

## 6.3 Operator Call Messages

Operator call messages appear if a problem with the printer requires operator intervention, such as adding paper or closing the printer cover. You should check the online/offline status of the printer after correcting a problem; you may have to place the printer back on line by pressing **On Line**. Table 6-3 lists the operator call messages.

**NOTE:** *The operator call message number flashes when it is displayed.*

**Table 6-3: Operator Call Messages**

Message	Meaning	Corrective Action
11 PAPER OUT	There is no paper in the paper cassette.	Add paper to the paper cassette (Section 2.6.1).
	There is no paper cassette installed in the printer, or the cassette is not installed securely.	Install the paper cassette securely into the printer.
12 PRINTER OPEN	The top cover of the printer is open.	Close the top cover (Section 2.4).
13 PAPER JAM	Paper is jammed inside the printer.	Remove jammed paper from the printer (Section 6.7).
14 NO EP-CART.	There is no EP-S cartridge in the printer.	Install an EP-S cartridge in the printer (Section 7.3).
16 TONER LOW	Toner in the EP-S cartridge is not being distributed evenly.	Remove the cartridge and rotate it back and forth several times to redistribute toner evenly (Section 7.3).
	The EP-S cartridge has run out of toner.	Replace the EP-S cartridge (Section 7.3).
PC LOAD A4	Request for an A4-size paper cassette.	Install an A4-size paper cassette into the printer.
	The printer was not reset after the cassette size was changed.	Reset the printer.
PC LOAD LETTER	Request for a letter-size paper cassette.	Install a letter-size paper cassette into the printer.
	The printer was not reset after the cassette size was changed.	Reset the printer.

**Table 6-3 (Cont.): Operator Call Messages**

Message	Meaning	Corrective Action
PC LOAD LEGAL	Request for a legal-size paper cassette.	Install a legal-size paper cassette into the printer.
	The printer was not reset after the cassette size was changed.	Reset the printer.
PC LOAD EXEC	Request for an executive-size paper cassette.	Install an executive-size paper cassette into the printer.
	The printer was not reset after the cassette size was changed.	Reset the printer.
PF FEED A4	Feed A4-size paper.	Manually feed A4-size paper into the printer.
PF FEED LETTER	Feed letter-size paper.	Manually feed letter-size paper into the printer.
PF FEED LEGAL	Feed legal-size paper.	Manually feed legal-size paper into the printer.
PF FEED EXEC	Feed executive-size paper.	Manually feed executive-size paper into the printer.
PF FEED PAPER 80	Feed specified-size paper.	Manually feed the specified-size paper into the printer. The number "80" indicates that the paper size is specified from a software command in the file.

## 6.4 Software Error Messages

Many software errors can be corrected by adding additional memory, reassigning memory, or by selecting the proper interface parameter. Table 6-4 describes the corrective action to take when a software error occurs.

**Table 6-4: Software Error Messages**

Message	Meaning	Corrective Action
20 PAGE FULL	The page buffer is overflowing with data.	Clear fonts from memory after each job.  Assign one or two full-page bitmap areas in memory to handle the complex data (Section 4.5.5.3).  Add additional RAM.
21 COMPLEX DATA	There is complicated print data that the printer cannot handle.	Assign one or two full-page bitmap areas in memory to handle the complex data (Section 4.5.5.3).
22 LINE ERROR	The receiving buffer is overflowing with data.	Enable a handshaking protocol to regulate data flow (see Section 4.5.6.4, Section 4.5.6.5, and Section 4.5.6.6).  Ensure that the host, the printer, and any other devices that are connected (such as print servers) all have the same type of handshaking protocol enabled.
23 MEMORY FULL	Memory cannot accept additional downline loading of fonts into memory.	Clear fonts from memory after each job.  Reallocate less bitmap page memory space (Section 4.5.5.3).  Add additional RAM.
24 FULLPAINT REJ	Full paint mode is not allowed due to lack of memory space.	Clear fonts from memory after each job.  Add additional RAM.
26 MEMORY FULL	RAM memory space is full.	Clear fonts from memory after each job.  Add additional RAM.
40 LINE ERROR	An error has occurred in the communication circuit.	Check the interface parameters (Section 4.5.6).  Check the integrity of lines; be sure cables are properly shielded and that all ground screws are in place.
41 PRINT CHECK	A misprint has occurred.	Perform the error skip procedure (Section 6.1).

**Table 6-4 (Cont.): Software Error Messages**

<b>Message</b>	<b>Meaning</b>	<b>Corrective Action</b>
<b>42 ERROR</b>	There is an expansion interface error.	Power off the printer and verify that any memory expansion boards are correctly installed. If the problem continues, call your Digital service representative (Chapter 8).
<b>43 ERROR</b>	There is an expansion interface error.	Power off the printer and verify that any memory expansion boards are correctly installed. If the problem continues, call your Digital service representative (Chapter 8).
<b>FE FONT REMOVAL</b>	A font cartridge has been removed from the printer.	<p>Power off the printer and install the font cartridge before powering the printer back on.</p> <p><b>CAUTION:</b> <i>To prevent damage to the font cartridge or the printer, always turn the printer off before removing a font cartridge.</i></p> <p>If you do not want to use the font cartridge, power off the printer and wait at least two seconds, then power it back on.</p>
<b>FF FONT FULL</b>	The font registration area is full.	<p>Reduce the number of fonts in memory.</p> <p>Clear fonts from memory after each job.</p> <p>Add additional RAM.</p>



## 6.5 Service Call Messages

Service call messages indicate that the printer requires servicing by a qualified Digital service representative (see Chapter 8 for service information). Service messages are displayed as XX SERVICE (where XX equals a number from 50 through 99).

**NOTE:** *Before calling for service, try to clear the error message by powering the printer off. After a few seconds, power the printer on. If the error message is still displayed, power the printer off and call for service.*

## 6.6 Common Operating Problems

Table 6-5 lists common operating problems and their possible solutions. Follow the corrective actions in the order in which they are listed. Check the table to solve printer problems before calling for service.

**NOTE:** *Since many problems with print quality could be caused by a faulty component in the EP-S cartridge, it is recommended that you keep a spare cartridge as a replacement. If you are experiencing a problem with print quality that is not listed in the troubleshooting table, you can replace the EP-S cartridge to see if it solves the problem before calling for service.*

**CAUTION:** *Be careful when checking items inside the printer, because the fixing assembly may be hot.*

**Table 6-5: Common Operating Problems**

<b>Problem</b>	<b>Possible Cause</b>	<b>Corrective Action</b>
<b>NO POWER</b>		
The printer does not power up when you set the power switch to the ON position.	The power source is defective.	Make sure the power cord is plugged into the wall outlet. Check that there is power at the wall outlet by plugging in a lamp to see if it lights. If the lamp does not light, call your building maintenance services to check the circuit supplying power to that outlet.
	The power cord is not connected or is damaged.	Check the power cord for damage and secure connections at the printer and at the wall outlet.
<b>NO PRINTOUT</b>		
The message display reads 00 READY.	The interface cable to the host is not connected properly.	Check the cable connections at the printer and at the host computer.
	Interface selection, baud rate, or data bits/parity features may not match the host settings.	See Section 4.5.6 for information about these features.
	The printer is in the offline state.	Press <b>On Line</b> to place the printer on line.
The message display reads 00 READY. The Data indicator is on.	Data is still in the print buffer.	Press <b>On Line</b> to place the printer off line and then press <b>Form Feed</b> to print the remaining data. Be sure to press <b>On Line</b> to place the printer back on line after the last page is printed.

**Table 6-5 (Cont.): Common Operating Problems**

<b>Problem</b>	<b>Possible Cause</b>	<b>Corrective Action</b>
<b>POOR PRINTING</b>		
Large amounts of vertical fade and/or white streaks are on the page.	Toner is not being dispersed evenly.	Remove the EP-S cartridge from the printer and gently rotate it several times to redistribute toner.  Replace the EP-S cartridge (Section 7.3.)
Small amounts of fading occur across the page.	The transfer corona wire is dirty.	Clean the transfer corona wire (Section 7.1.3.)
Vertical black streaks occur on the page.	The primary corona wire is dirty.	Clean the primary corona wire (Section 7.1.2.)
Printing is too light.	The print density setting is incorrect.	Adjust the print density setting (Section 2.11).
	The primary and transfer corona wires are dirty.	Clean the primary and transfer corona wires (see Section 7.1.2 and Section 7.1.3).
	The primary corona wire is faulty.	Replace the EP-S cartridge (Section 7.3).
Printing is too dark.	The transfer corona wire is faulty.	Call your Digital service representative to repair the printer (Chapter 8).
	The print density setting is incorrect.	Adjust the print density setting (Section 2.11).
The page printed blank.	The toner seal was not completely removed from the EP-S cartridge.	Remove the toner seal completely from the EP-S cartridge.
	The EP-S cartridge is faulty.	Replace the EP-S cartridge (Section 7.3).
The page printed black.	The primary corona wire is broken or is not making contact.	Be sure the EP-S cartridge is seated properly in the printer.
		Replace the EP-S cartridge (Section 7.3).
Stray toner is fused to the paper.	The printer is dirty.	Clean the printer (Section 7.1).

**Table 6-5 (Cont.): Common Operating Problems**

<b>Problem</b>	<b>Possible Cause</b>	<b>Corrective Action</b>
<b>POOR PRINTING</b>		
	The cleaning mechanism in the EP-S cartridge is not working properly.	Replace the EP-S cartridge (Section 7.3).
The overall print quality is poor.	The print medium is not the recommended type.	See Chapter 5 for print media specifications.
<b>MISCELLANEOUS</b>		
A paper jam occurred.	There is an obstruction in the paper path.	See Section 6.7 for instructions on clearing paper jams.
Print lines overlap.	The vertical pitch setting is incorrect.	Correct the vertical pitch setting in your application program.
The print is skewed.	The print medium is not the recommended type.	See Chapter 5 for print media specifications.
	Paper is not loaded in the cassette properly.	Reload paper in the cassette (Section 2.6.1).
Printed pages have garbled characters.	Incorrect printer features were selected.	Check to see that the baud rate and data bits/parity format match the host computer settings (Section 4.5.6).
Envelopes are fogged lightly with toner.	Print density setting is too light.	Increase the print density setting by selecting a lower number on the print density dial (Section 2.11).

## **6.7 Paper Jams**

Paper jams are typically caused by:

- Damaged paper (torn or folded)
- Improperly stored paper (excessive paper curl or humidity)
- Paper that does not meet specifications (incorrect weight or heat tolerance)
- Paper that is improperly loaded in the tray (not aligned properly)


To reduce the chance of paper jams, you should follow the instructions for proper paper selection, storage, and loading as outlined in Chapter 5. To ensure that you are loading paper in the tray properly, see Section 5.5.1 for the correct procedure.

The following events occur when there is a paper jam in the printer:

- The printer stops printing and goes off line.
- The error message 13 PAPER JAM is displayed on the control panel.
- The Alarm indicator lights.

Most paper jams occur in the areas shown in Figure 6-1.

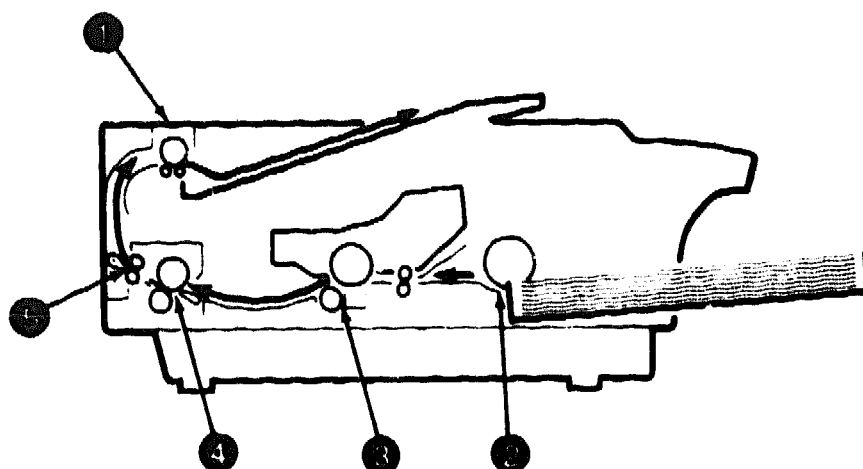**Figure 6-1: Paper Jam Areas**



- ① Top printout tray area
- ② Paper feeding area
- ③ Transferring area
- ④ Fixing area
- ⑤ Rear printout tray area

MLD-004865


After clearing a paper jam, reset the printer by closing the front cover. Closing the cover clears the error condition, but the printer must be placed back on line. After the cover is closed, press **On Line** to place the printer back on line. When a paper jam is cleared and printing is resumed, the DECtaser 2100 plus printer automatically reprints the page that jammed.

### **6.7.1 Top and Output Paper Tray Paper Jams**

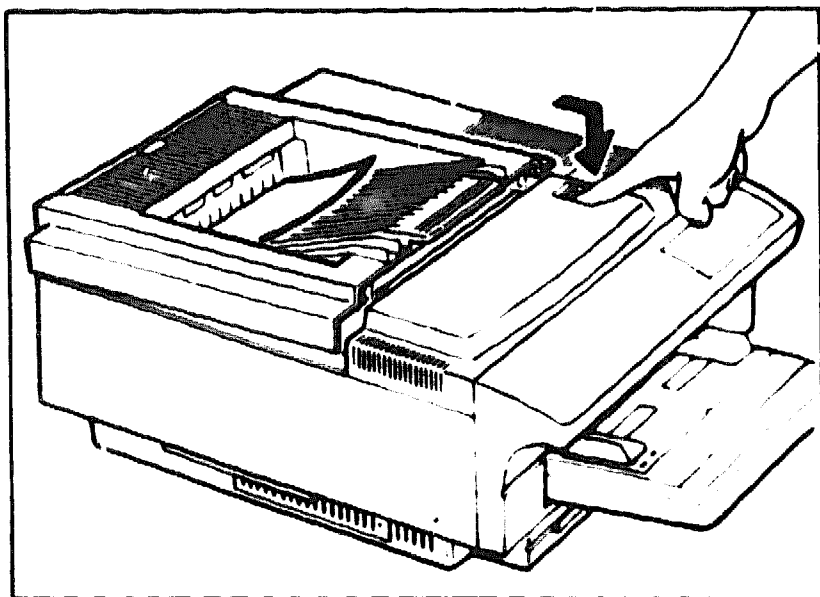Use the following procedure to clear paper jams from the top and rear output trays.


**CAUTION:** Do not attempt to remove jammed paper from the top or rear paper trays by simply pulling the paper out. Pulling the paper from the printer without releasing it from the fixing assembly first can cause damage to the printer.

1. Open the top cover by pressing the release button forward and then down.
  - The top cover will release and open slightly.



ALU-00489

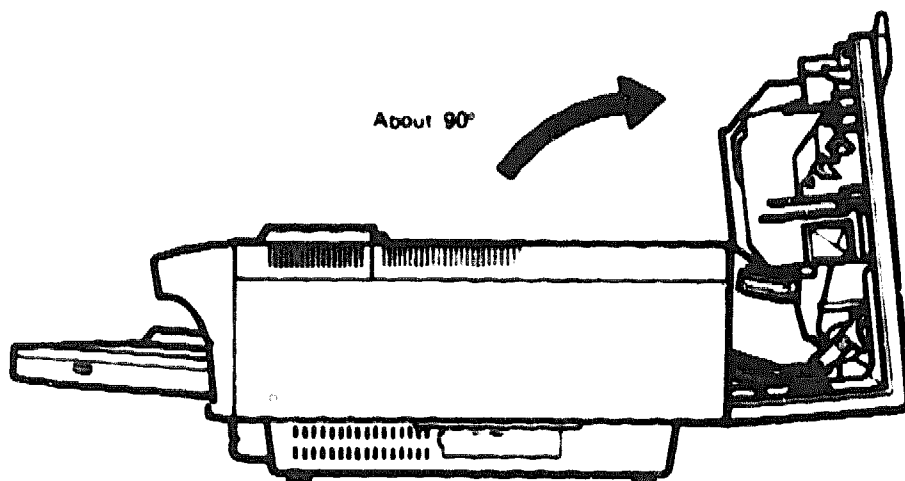
2. Lift the top cover open.



MLD-004868

3. Push the tab on the fixing assembly back to release the paper.

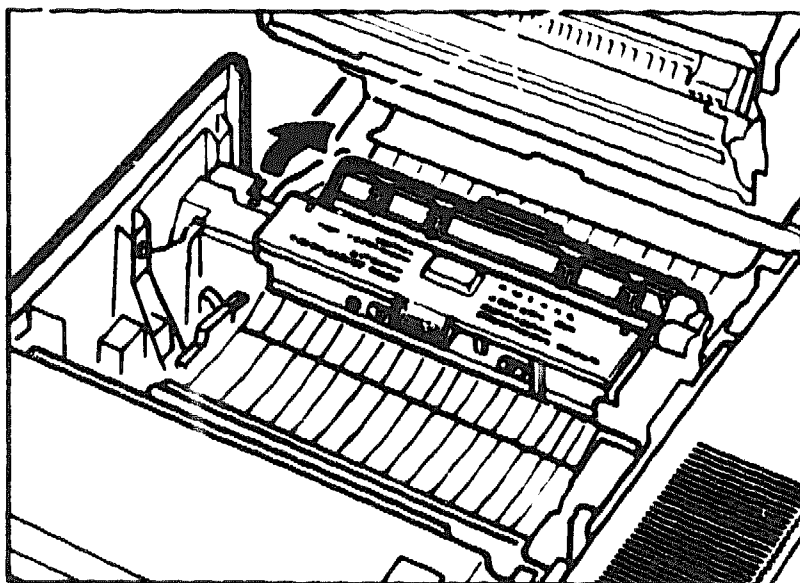
**WARNING:** *Be careful when accessing areas inside the printer, because the fixing assembly may be hot.*



MLD-004868




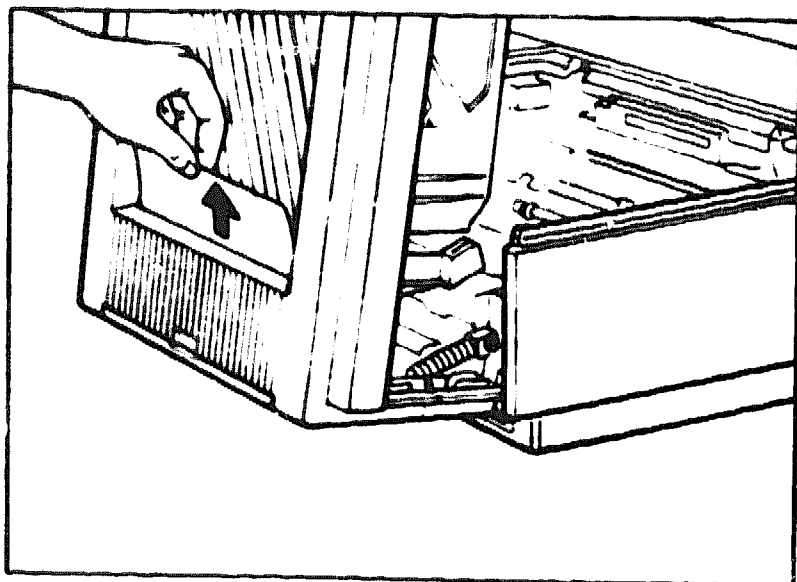4. Remove the jammed paper from the printer by pulling it out from the output tray.



M C-004892

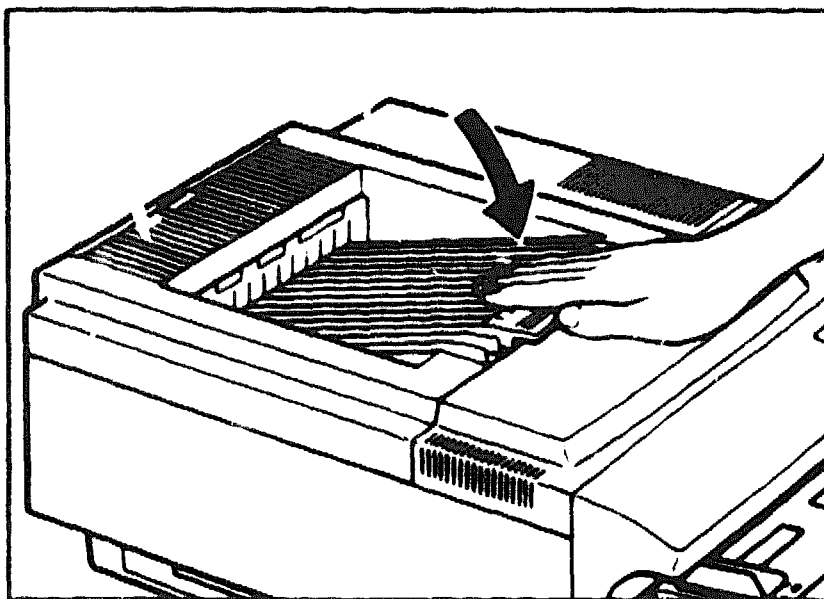5. Close the top cover by gently lowering the cover and pushing down on the hand grip until the cover latches securely in place.
  - The printer initializes (recycles).
  - The Alarm and Data indicators shut off.
  - The message display reads 00 READY.




WFO-004388

6. Press **On Line** to place the printer on line.
  - The printer reprints the page that was jammed.

## 6.7.2 Paper Feed, Transfer, and Fixing Assembly Paper Jams

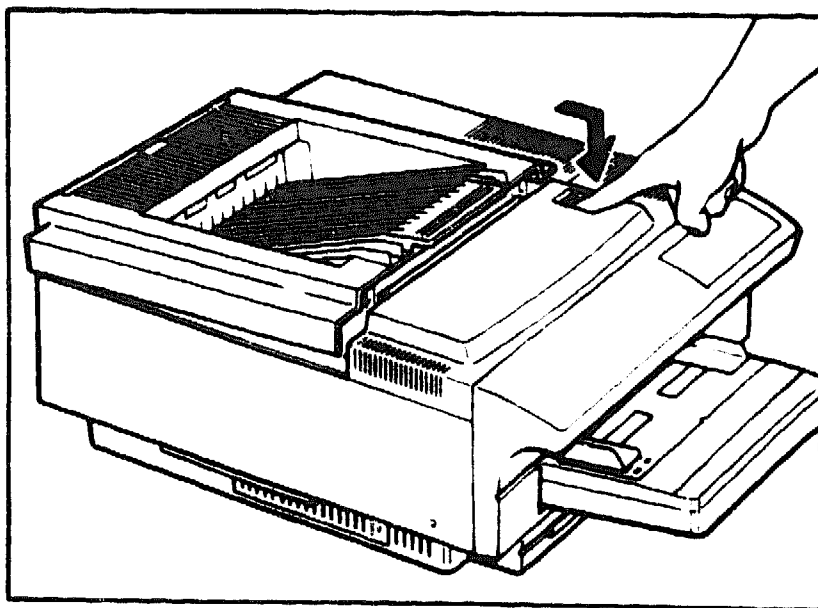
Use the following procedure to clear paper jams from the paper feed, transfer, and fixing assembly areas.

1. Open the top cover by pressing the release button forward and then down.
  - The top cover will release and open slightly.




MLO-004830

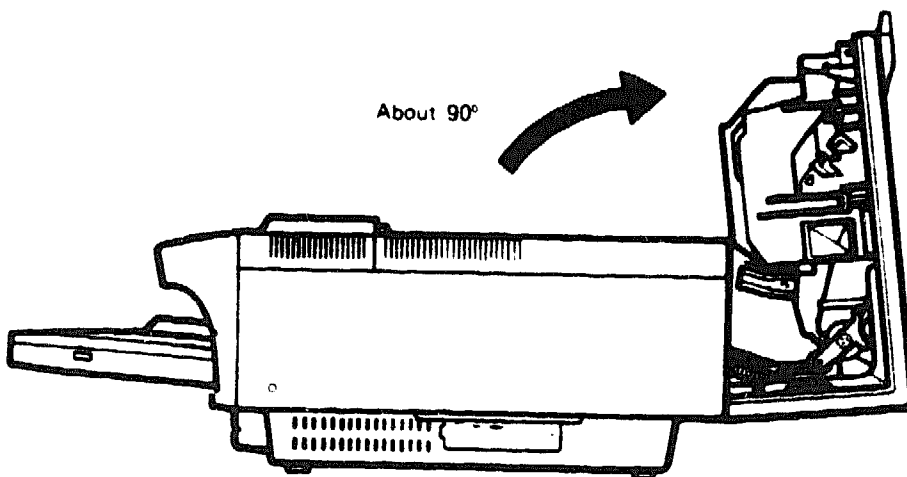2. Lift the top cover open.



MLO-004868

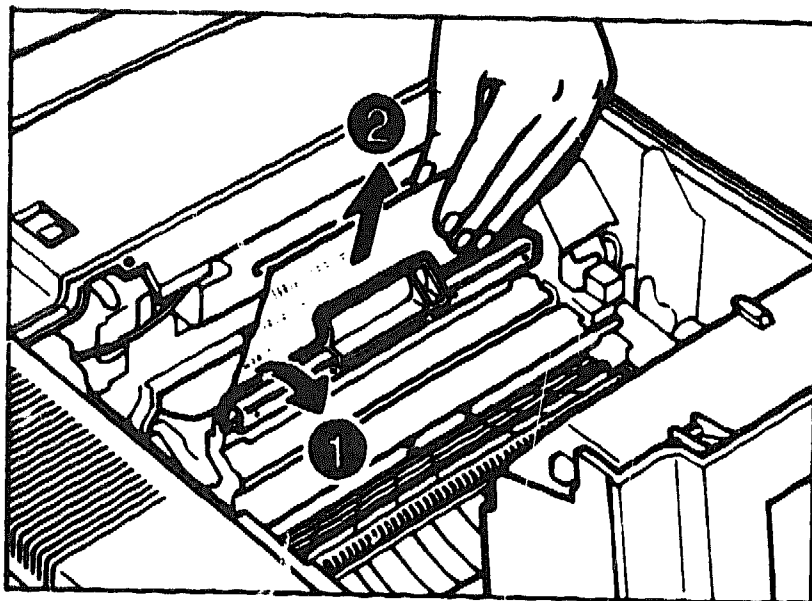
3. If paper is jammed in the feed or transfer area, lift the transfer guide (green handle) to release the paper and remove the paper from the printer.
  - ✓ If the jammed paper did not reach the feed area, remove the cassette and pull the paper out from the cassette slot.



MLO-004859


4. If paper is jammed in the fixing assembly, push the green tab on the fixing assembly down to release the paper, and remove the paper from the printer.

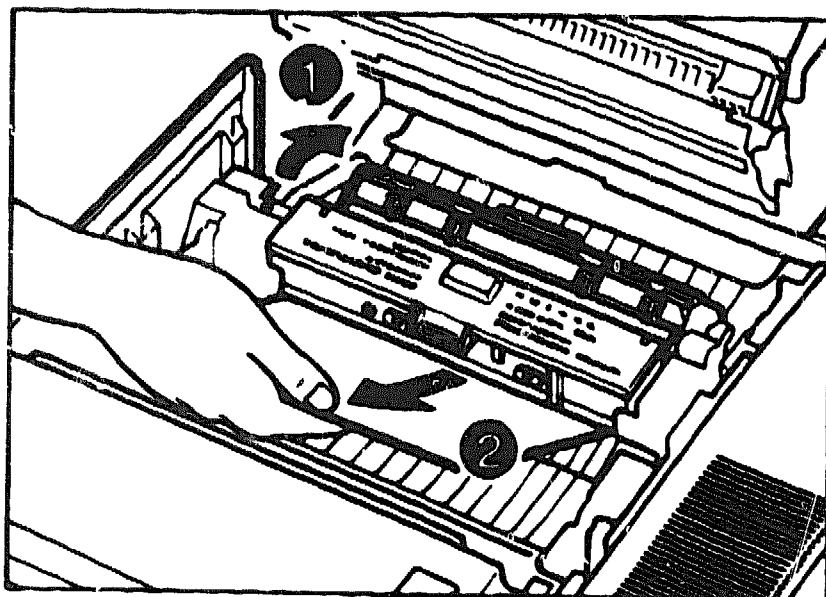**WARNING:** *Be careful when accessing areas inside the printer, because the fixing assembly may be hot.*



MLO-C04870

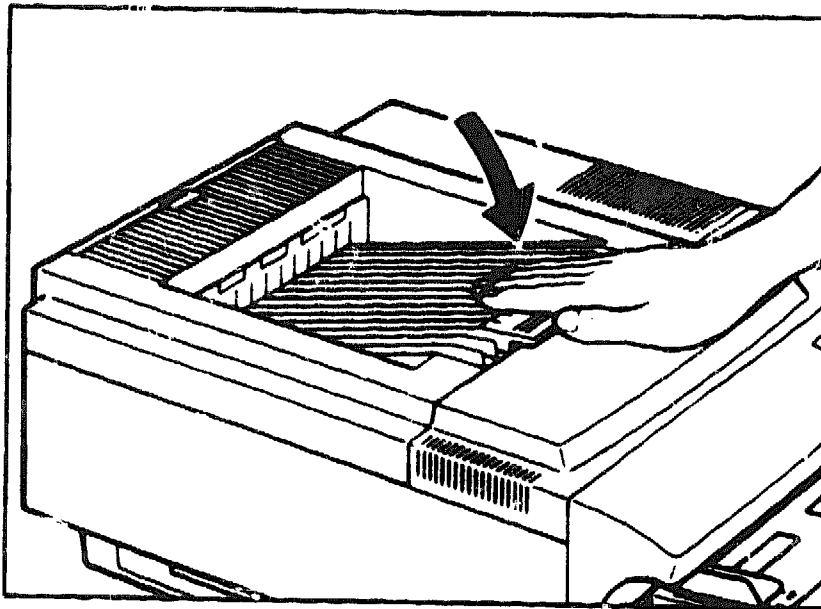5. Close the top cover by gently lowering the cover and pushing down on the hand grip until the cover latches securely in place.
  - The printer initializes (recycles).
  - The Alarm and Data indicators shut off.
  - The message display reads 00 READY.



MLO-004366

6. Press **On Line** to place the printer on line.
  - The printer reprints the page that was jammed.



## Chapter 7

# Maintenance

---

To obtain optimum performance from the DEClaser 2100 plus printer, you must perform the prescribed care and maintenance as outlined in this chapter. This chapter describes how to properly maintain the printer and covers the following topics:

- Cleaning the printer
- Cleaning the primary corona wire
- Cleaning the transfer corona wire
- Extending EP-S cartridge life
- Replacing the EP-S cartridge
- Replacing the ozone filter

### 7.1 Cleaning the Printer

Keeping the printer clean helps ensure optimum print quality because stray paper dust and toner can adversely affect the voltage levels placed on the corona wires, paper, and electrophotostatic drum. Although cleaning is part of the procedure you follow when replacing the EP-S cartridge, you may find it necessary to clean the printer between cartridge changes if print quality begins to deteriorate.

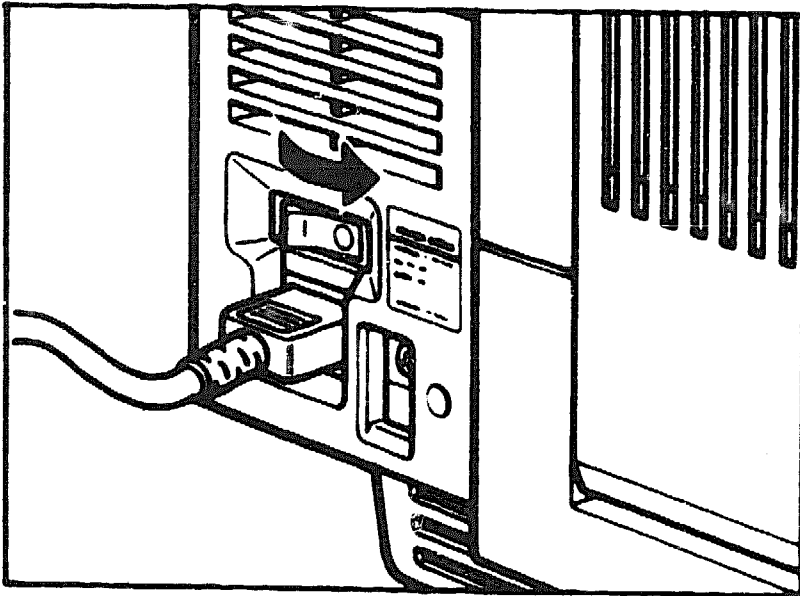
**CAUTION:** *To prevent possible damage to the internal and external surfaces of the printer, do not use cleaners or solvents. Use a clean cloth dampened with water only.*



### 7.1.1 Cleaning the Internal Surfaces


Clean the transfer and paper feed areas inside the printer using the following procedure.

1. Be sure the printer is not printing and the display reads 00 READY.
2. Press the power switch on the back of the printer to the O (OFF) position.




HL0-0048.29

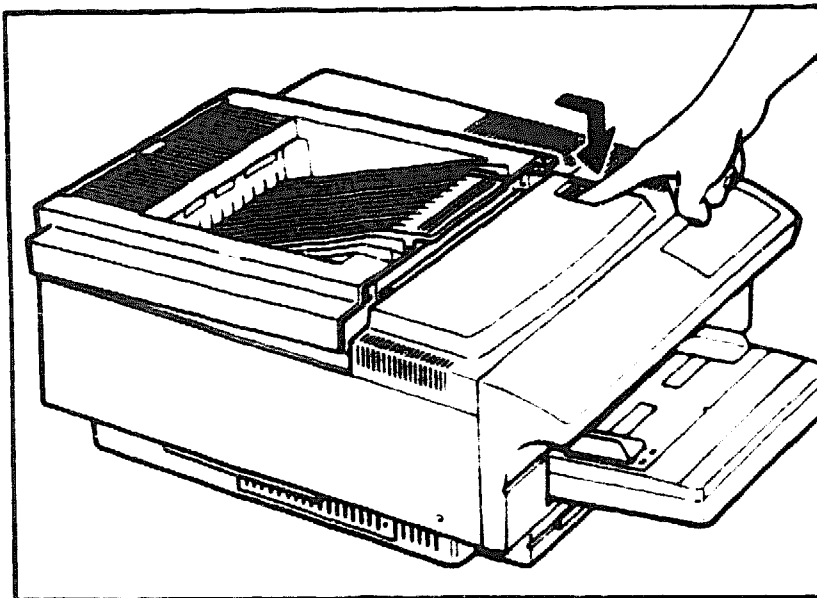3. Press the release button forward and then down.
  - The top cover releases and opens slightly.



MLC-004830

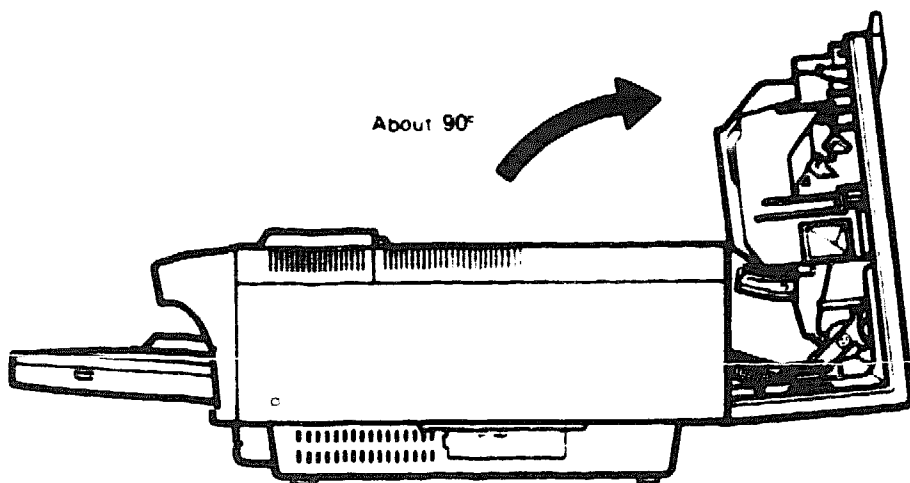
4. Lift the top cover open.



MLC-004868


5. Wipe the paper feed area (black plastic) clean with a cloth dampened with water.

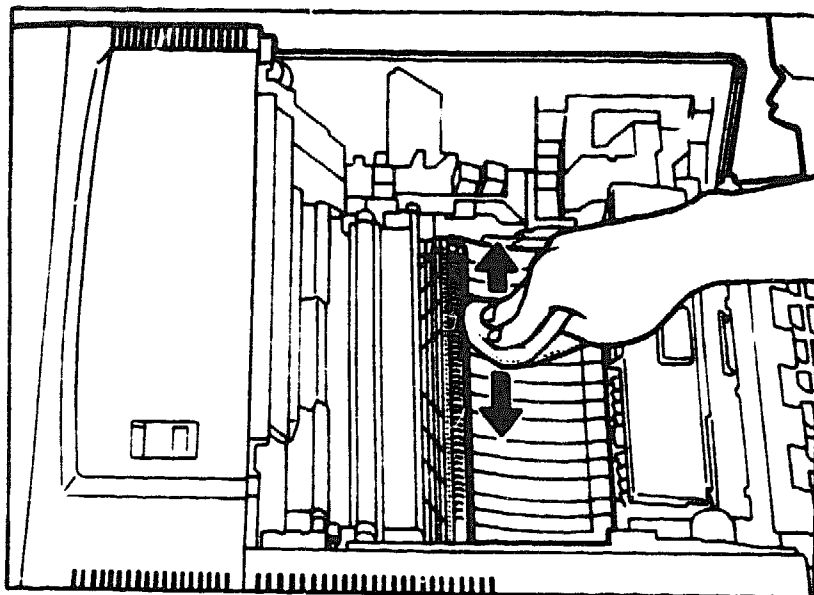**WARNING:** *Be careful when accessing areas inside the printer, because the fixing assembly may be hot.*




MLO-004871

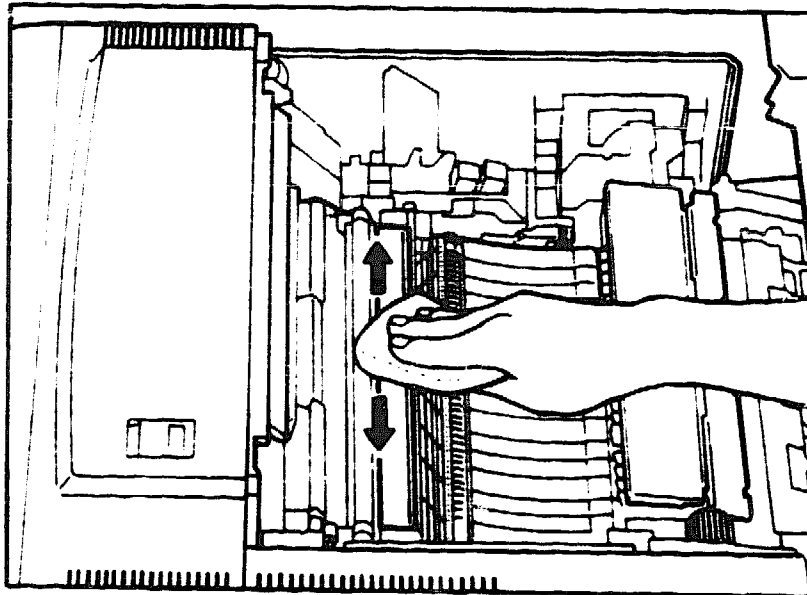6. Wipe the following items clean in the transfer area with the dampened cloth:
- The movable transfer guide (with green handle) and clear plastic strip
  - The metal transfer roller
  - The silver-colored metal transfer guide



MLO-004872

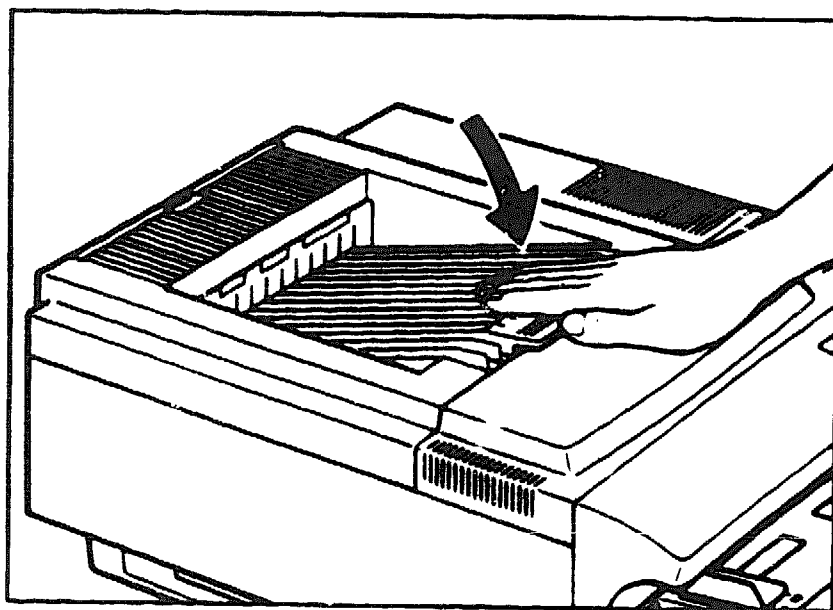7. Gently close the top cover by pushing down on the hand grip until the cover locks into place.




MLO-004366

### 7.1.2 Cleaning the Primary Corona Wire

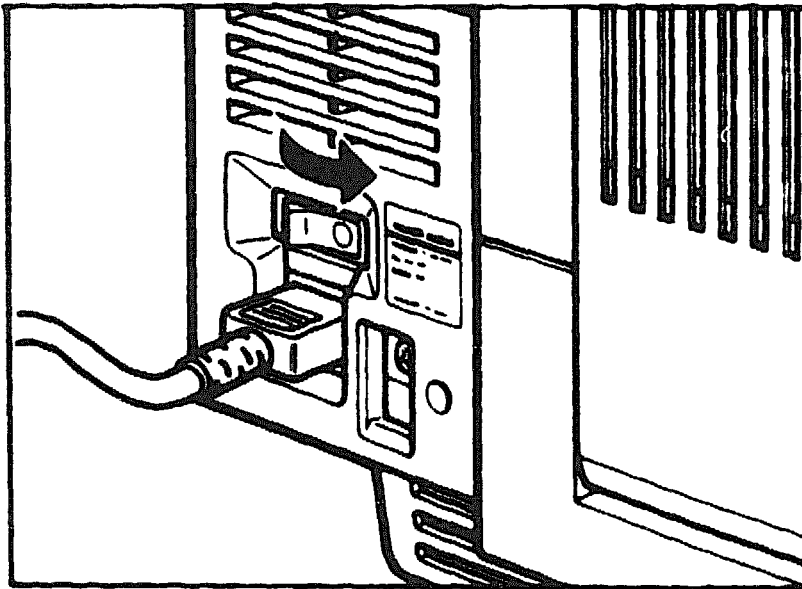
The primary corona wire is located inside the EP-S cartridge. A dirty primary corona wire can cause black streaking to occur on the paper, and should be cleaned to correct this problem.

1. Be sure the printer is not printing and the display reads 00 READY.
2. Press the power switch on the back of the printer to the O (OFF) position.




MLC-004829

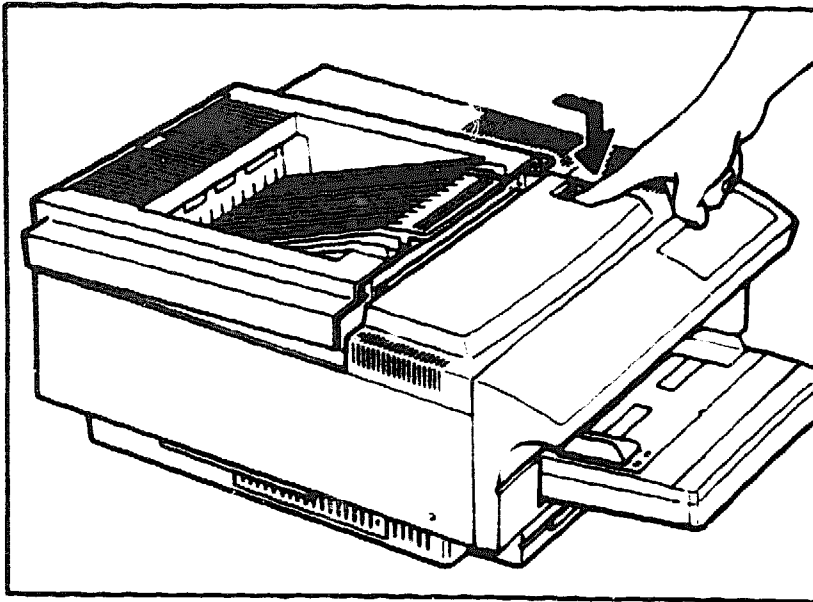3. Press the release button forward and then down.
  - The top cover releases and opens slightly.




MLO-004830

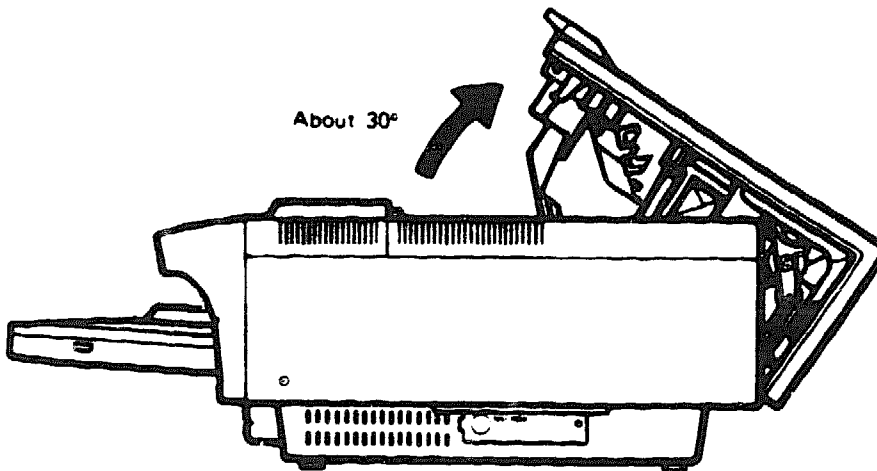4. Open the top cover halfway.



MLO-004840

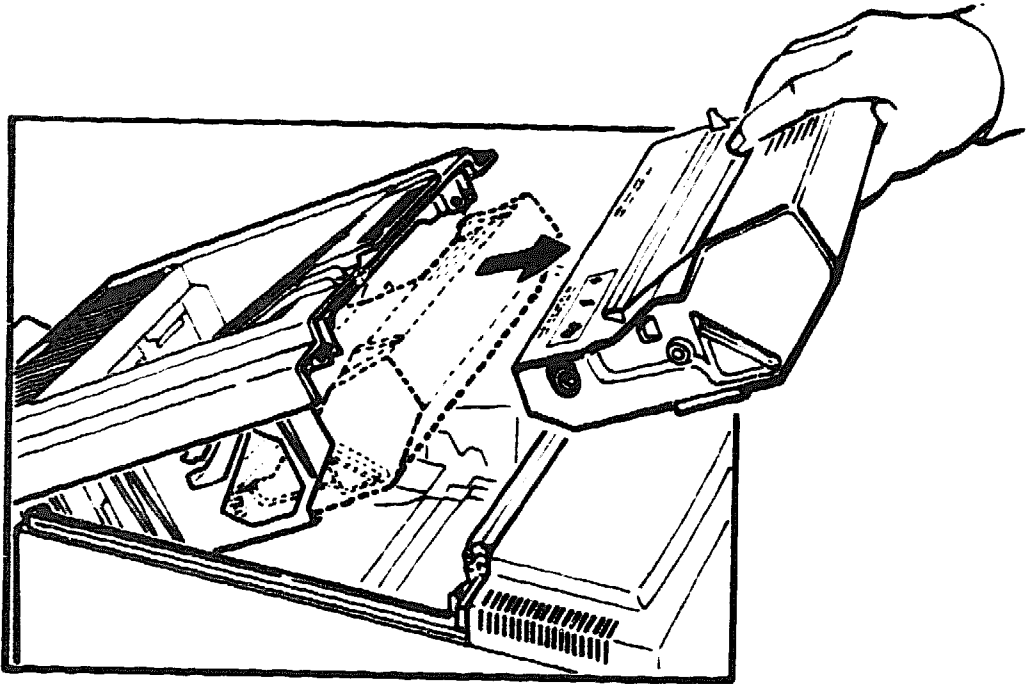
5. Remove the EP-S cartridge by pulling it out from the top cover.



MLO-004890

6. Remove the wire/pin cleaner from the inside of the printer.

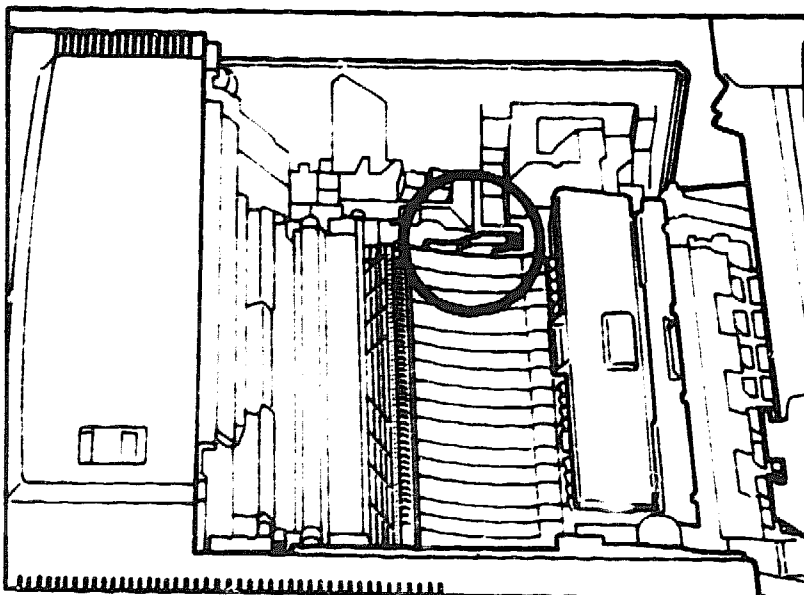**WARNING:** Be careful when removing the wire/pin cleaner from the printer, because the fixing assembly may be hot.




MLO-004873




7. Insert the felt end of the wire/pin cleaner into either end of the EP-S cartridge slot.

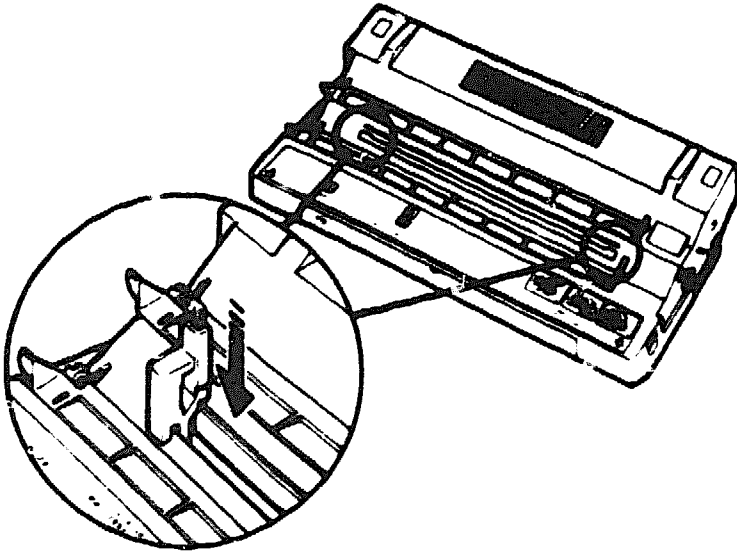**CAUTION:** *Do not insert the brush end of the wire / pin cleaner into the slot. Inserting the brush end can damage the corona wire.*




MLO-004875

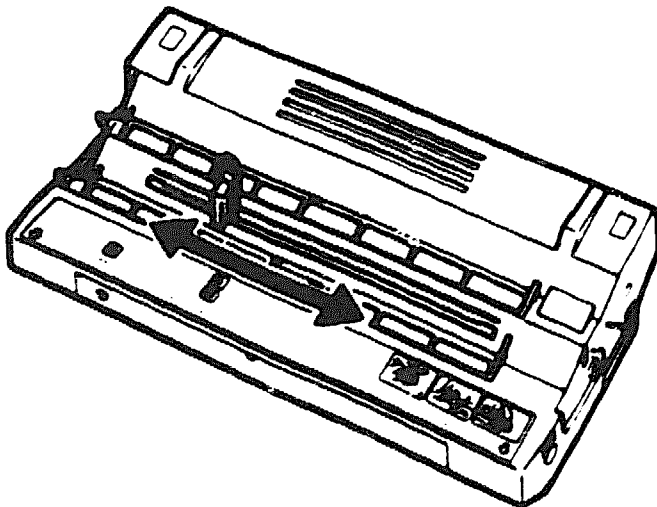8. Move the cleaner in the slot from side to side three to four times to clean the corona wire.




MLO-004874

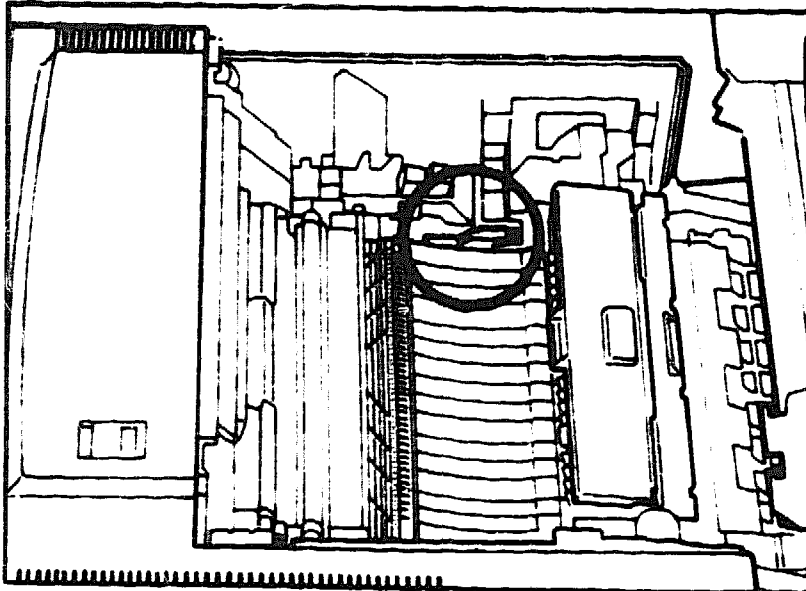9. Return the wire/in cleaner to its storage location in the printer.




MLC-004873

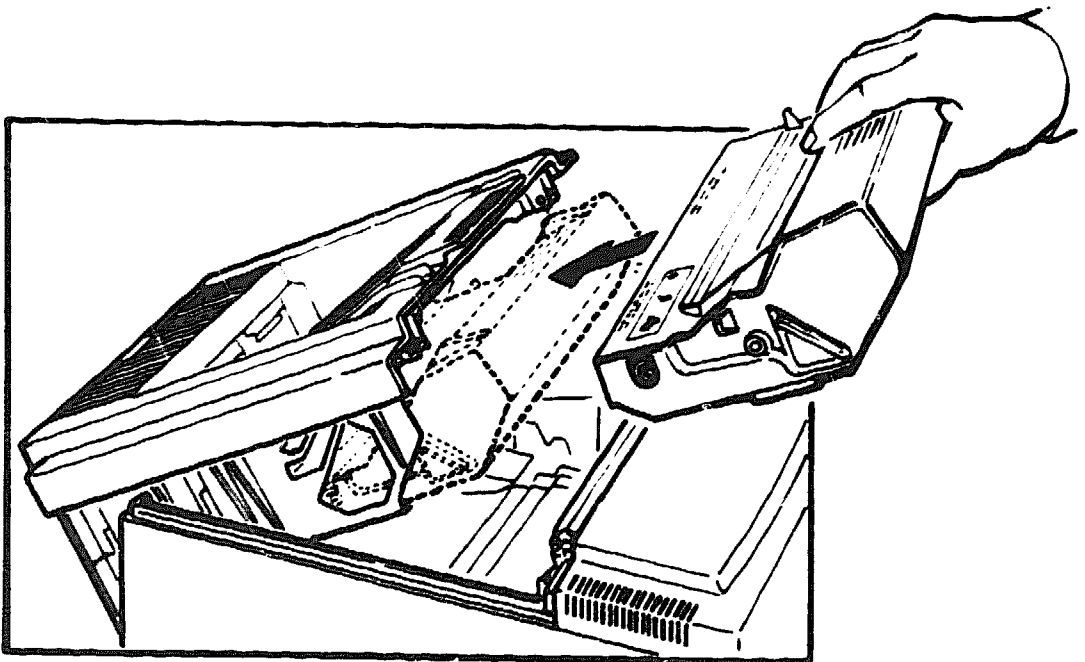10. Install the EP-S cartridge into the top cover.



MLC-004889

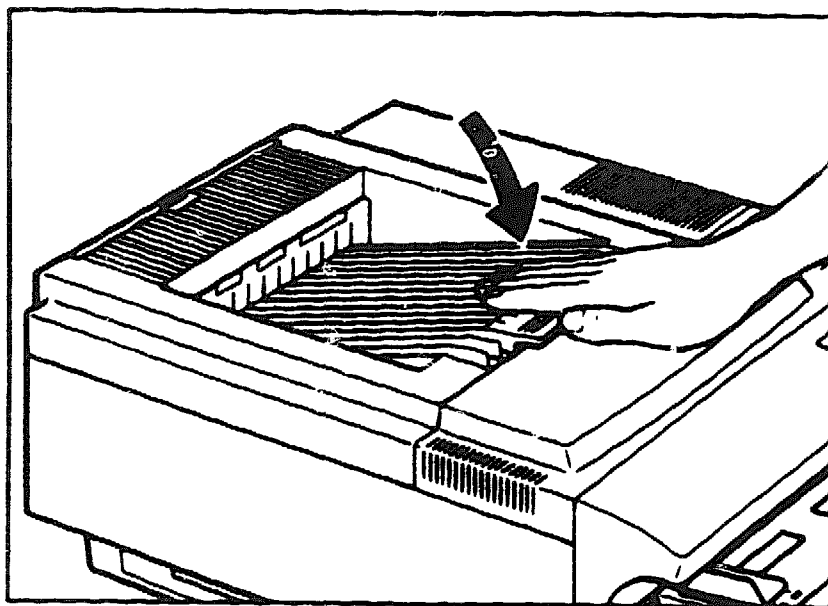11. Gently close the top cover by pushing down on the hand grip until the cover locks into place.




MLO-004386

### 7.1.3 Cleaning the Transfer Corona Wires and Discharging Pins

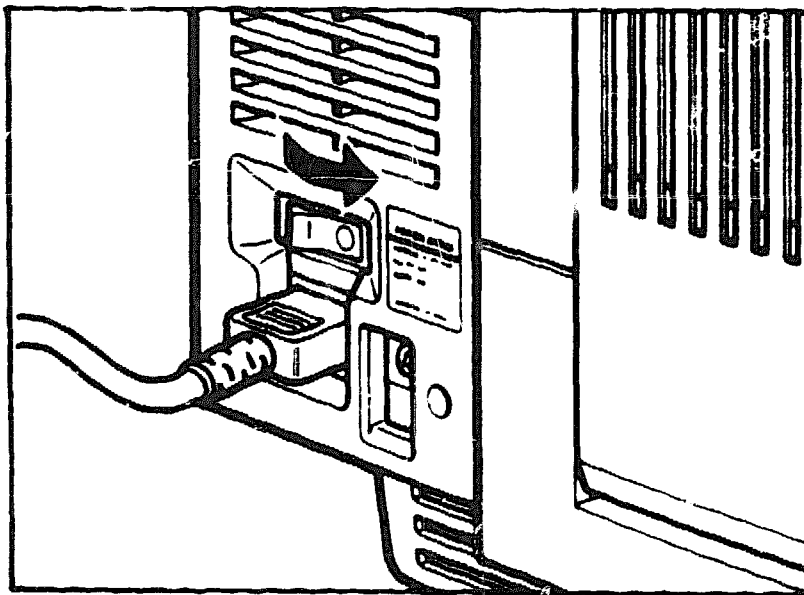The transfer corona wires and discharging pins are part of the paper transfer area inside the printer. Normally, you clean these corona wires and discharging pins each time you replace the EP-S cartridge, but you may find it necessary to clean them between cartridge replacements if you experience problems with print quality.


**NOTE:** *You will need a dry cotton swab, such as the one supplied with new EP-S cartridges, to clean the corona wires.*

1. Be sure the printer is not printing and the display reads 00 READY.
2. Press the power switch on the back of the printer to the O (OFF) position.




MLO-004829

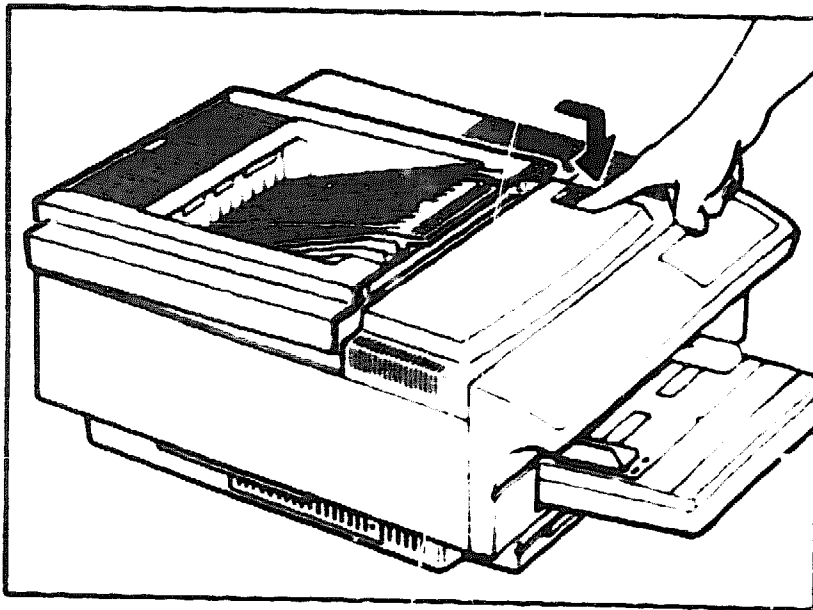3. Press the release button forward and then down.
  - The top cover releases and opens slightly.



MS-D-00487

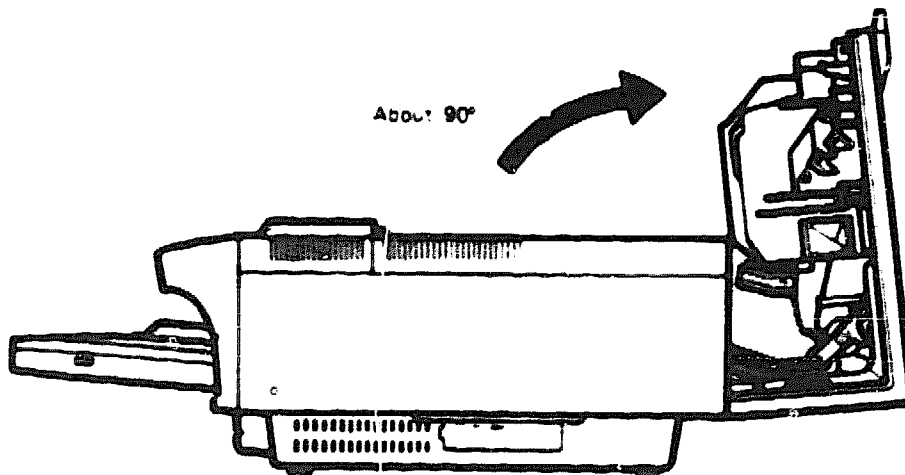
4. Lift the top cover open.



MS-D-00488

5. Remove the wire/pin cleaner from the inside of the printer.

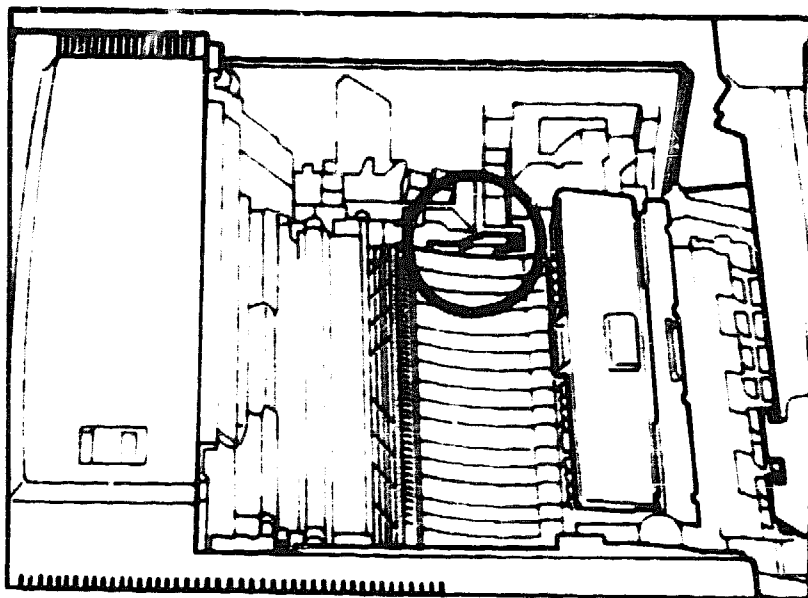
**WARNING:** *Be careful when removing the wire/pin cleaner from the printer, because the fixing assembly may be hot.*



MLC 004973


6. Clean the discharging pins (in the groove) using the brush end of the cleaner.

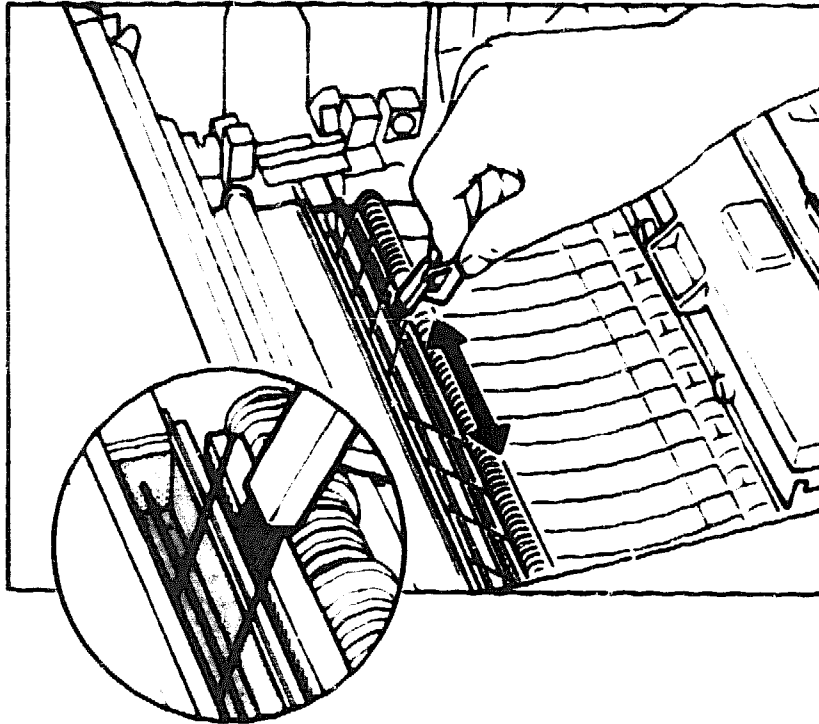**CAUTION:** *You must lift the brush over the separation wires as you clean along the groove. Be careful not to break the wires as you clean the discharging pins.*



W3-004876

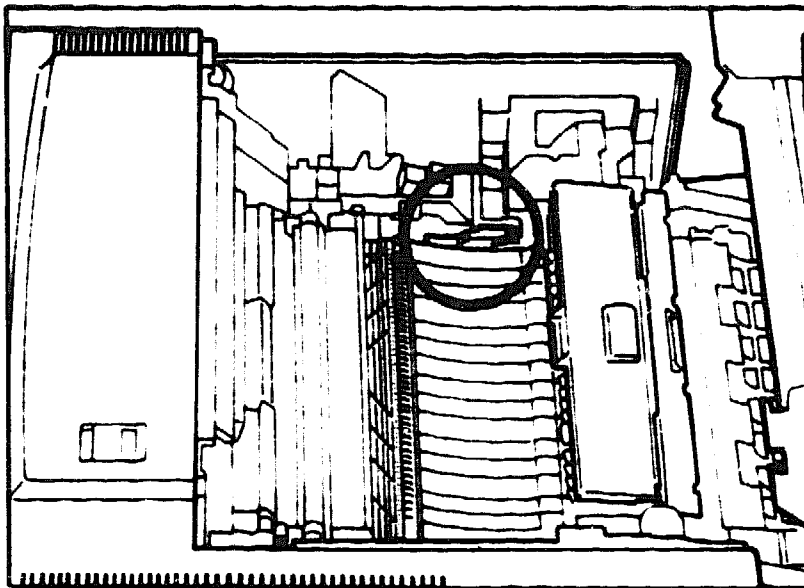7. Return the wire/pin cleaner to its storage location in the printer.




M.O.-004873




8. Clean the transfer corona wire and the nylon separation wires with the cotton swab.

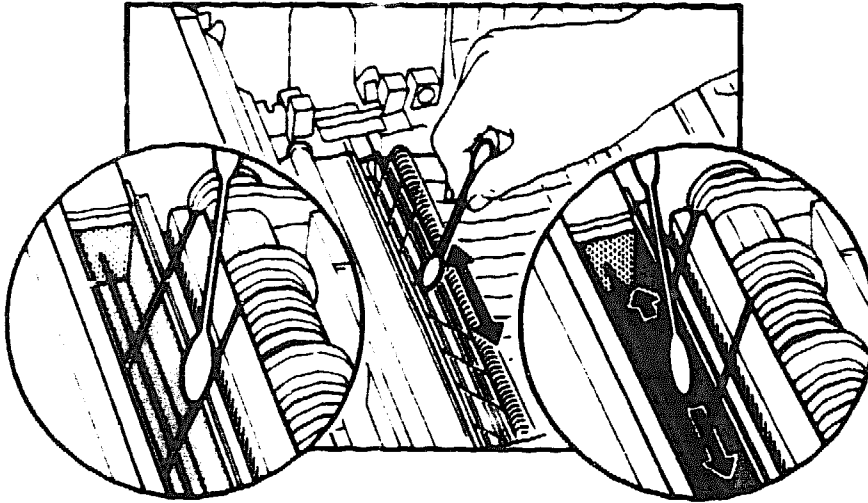**CAUTION:** *The corona wire and nylon separation wires are fragile. Do not press down too hard on the wires.*



MLO-004877

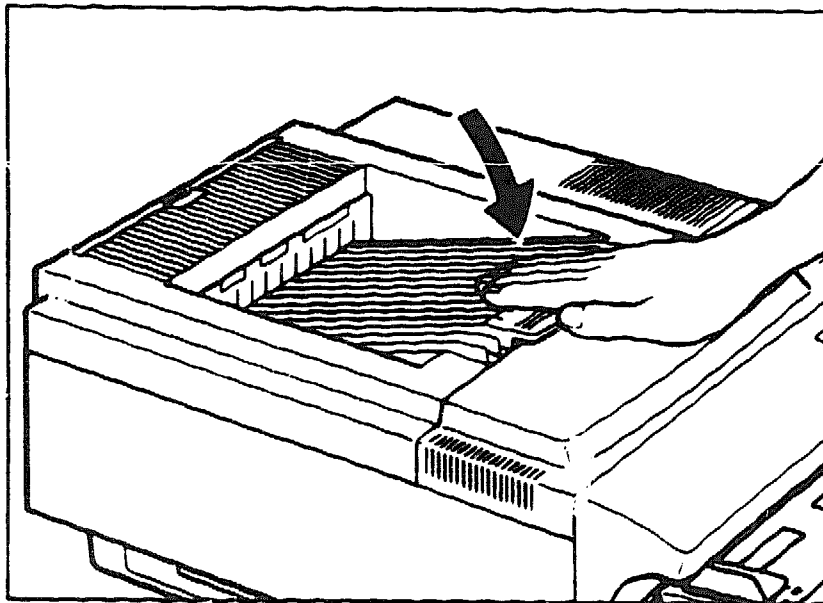9. Gently close the top cover by pushing down on the hand grip until the cover locks into place.



MLO-004386

## 7.2 Extending EP-S Cartridge Life

Each EP-S cartridge contains a photosensitive drum and toner, assuring you of optimum print quality throughout the life of the cartridge. When the cartridge runs out of toner, you replace it with a new one.

**CAUTION:** *The use of refilled EP-S cartridges is not recommended and may have an adverse effect on print quality. Consumables available through Digital, or recommended by Digital, should be used with Digital laser printers.*

A new EP-S cartridge lasts for approximately 4,000 pages (A4 or letter-size) of typical word processing text at 4% coverage with the print density dial set to 7. However, the cartridge life will vary depending on the amount of toner used for your particular application and the print density setting. If your average page contains more "white space" than the typical 4% coverage, the cartridge life will be longer. You can significantly extend the life of an EP-S cartridge by setting the print density adjustment dial to the highest number possible (lightest setting) that gives you acceptable print quality. The higher setting reduces the amount of toner used. For most applications the dial can be set to 7. See Section 2.11 for information about setting the print density.


The following rules apply to cartridge care:

- For best print quality always use the EP-S cartridge before the expiration date printed on the box.
- Do not remove the cartridge from its aluminum packing bag until you are ready to use it.
- Store the cartridge in an area where the average temperature is 0° to 35°C (32° to 95°F).
- Allow the cartridge to adjust to room temperature for at least one hour when moving a cartridge from a cold location to a hot location.
- Do not expose the cartridge to direct sunlight.
- Do not stand the cartridge on its end or lay it upside down.
- Do not attempt to disassemble the cartridge or open the light blocking shutters. Exposing the cartridge to light may result in poor print quality.
- Do not open the drum protection shutter. Touching the photosensitive drum will damage it and cause problems with print quality.

## 7.3 Replacing the EP-S Cartridge

When the 16 TONER LOW message is displayed, it means that the printer is either running out of toner or the toner is not being distributed evenly. Before replacing the EP-S cartridge, make sure that the toner is really depleted. Rock the cartridge back and forth gently to redistribute any remaining toner as shown in Figure 7-1.

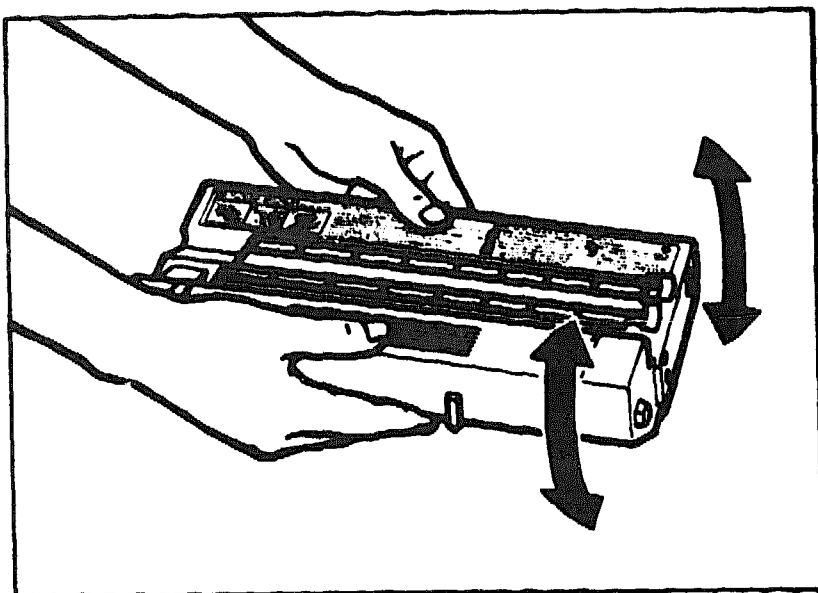**Figure 7-1: Rocking the EP-S Cartridge**



MLO-004382

Reinstall the cartridge and try printing. If the toner low message does not appear or printing is acceptable, the cartridge will last for a while longer. If the toner low message remains on and the print quality is not acceptable, you need to replace the EP-S cartridge.

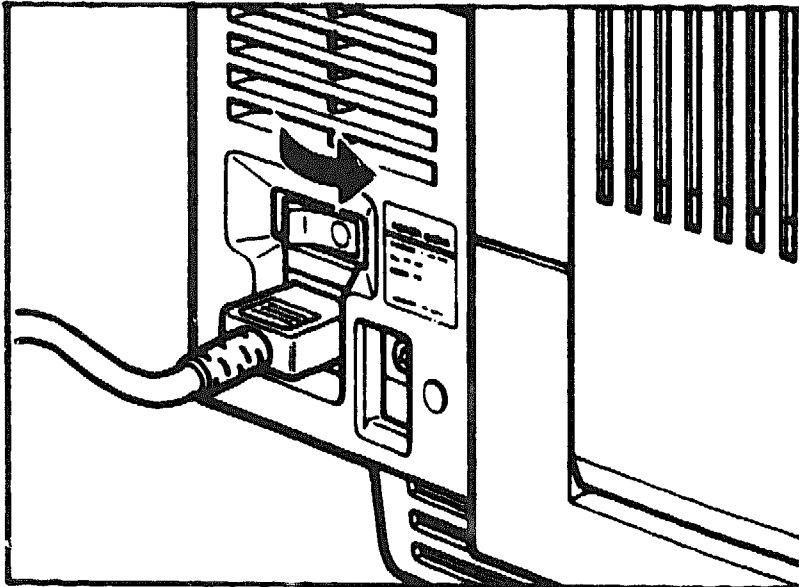
Replacing the EP-S cartridge requires the following:

- Cleaning the fixing roller
- Replacing the fixing roller cleaner
- Cleaning the transfer corona wires and discharging pins

You should perform all of these procedures each time you replace the EP-S cartridge to ensure optimum print performance.


To replace the EP-S cartridge, follow the instructions that come with the cartridge or use the following procedure.

1. Be sure the printer is not printing and the display reads 00 READY.
2. Press the power switch on the back of the printer to the O (OFF) position.




MLO-004829

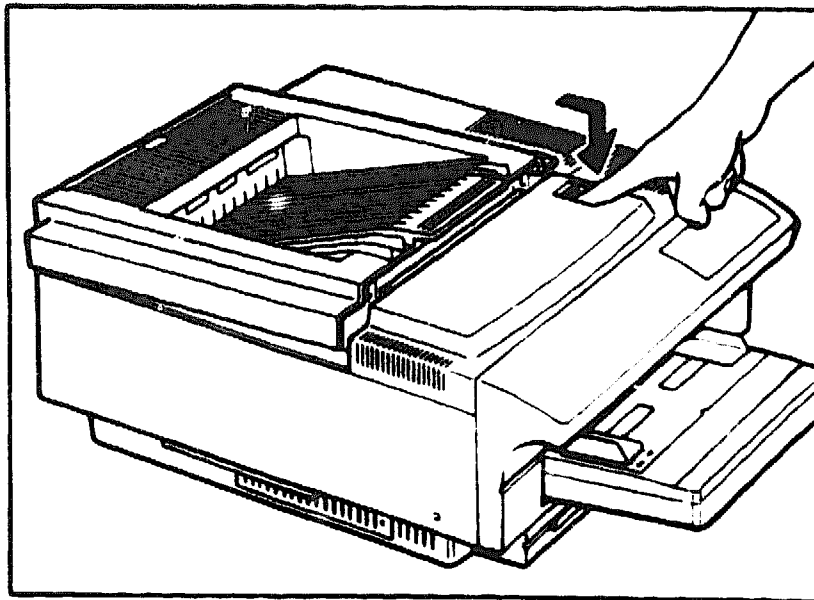3. Press the release button forward and then down.
  - The top cover will release and open slightly.




MLO-004830

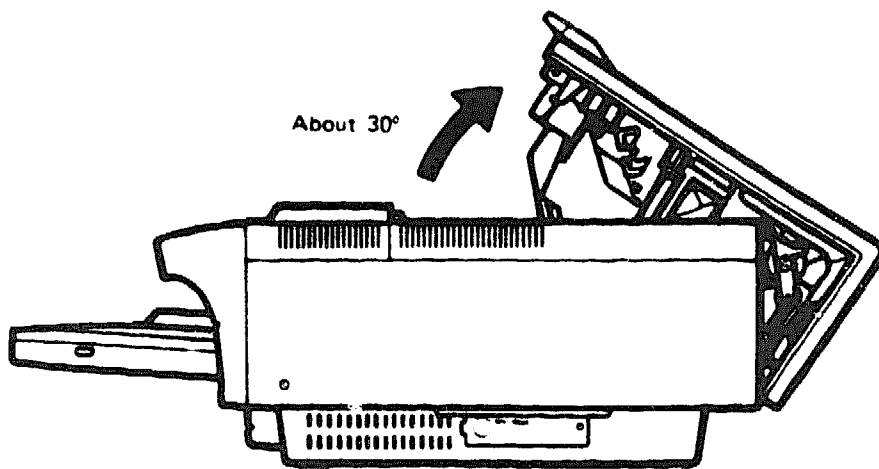4. Open the top cover to its halfway position.



MLO-004848

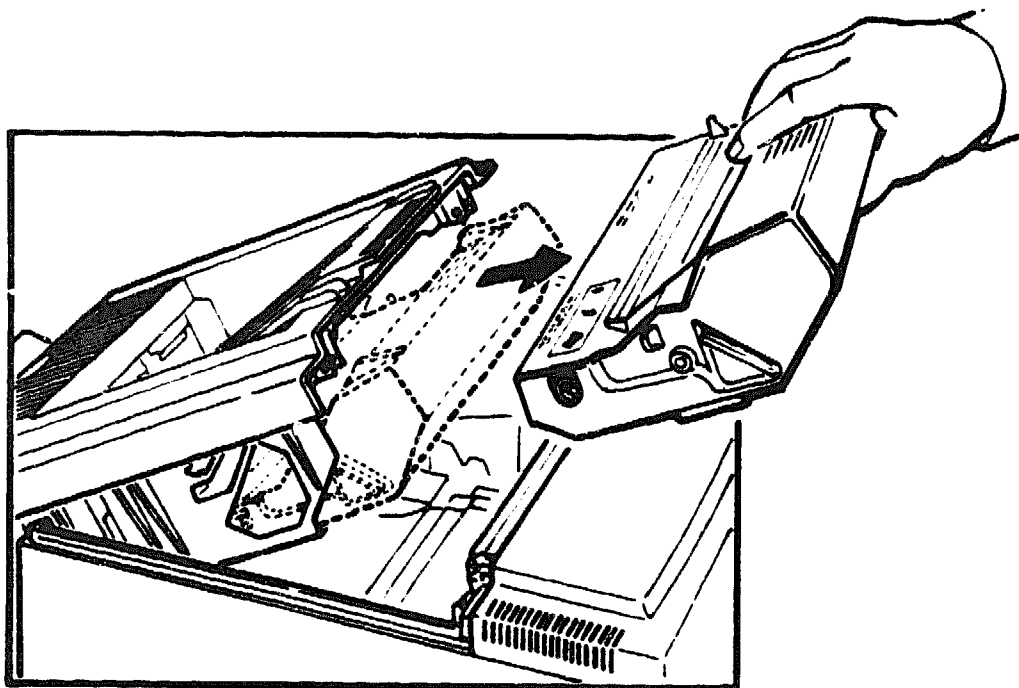
5. Remove the EP-S cartridge by pulling it out from the top cover.
  - ✓ Open the top cover to its full upright position after removing the cartridge.



MLO-004890


6. Open the green fixing assembly cover.

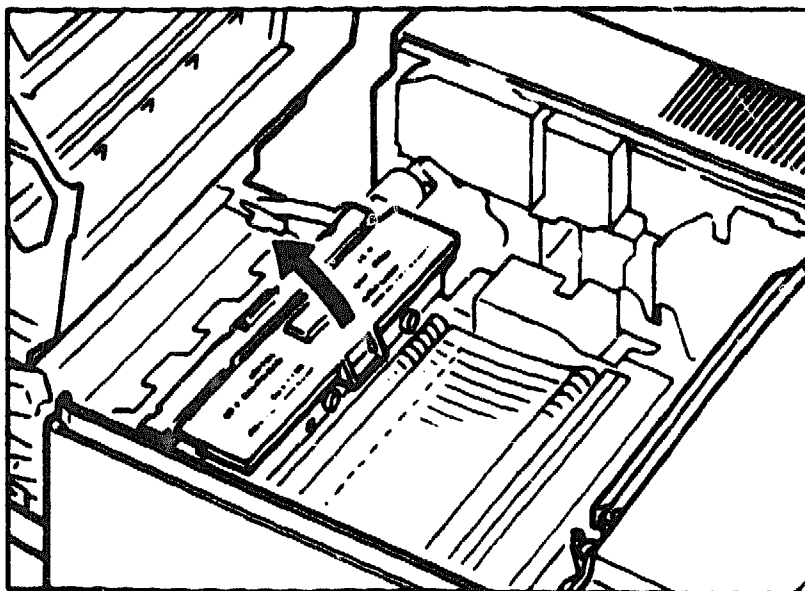**WARNING:** *The fixing assembly may be hot. Be careful when accessing the fixing unit.*




MLD-004354

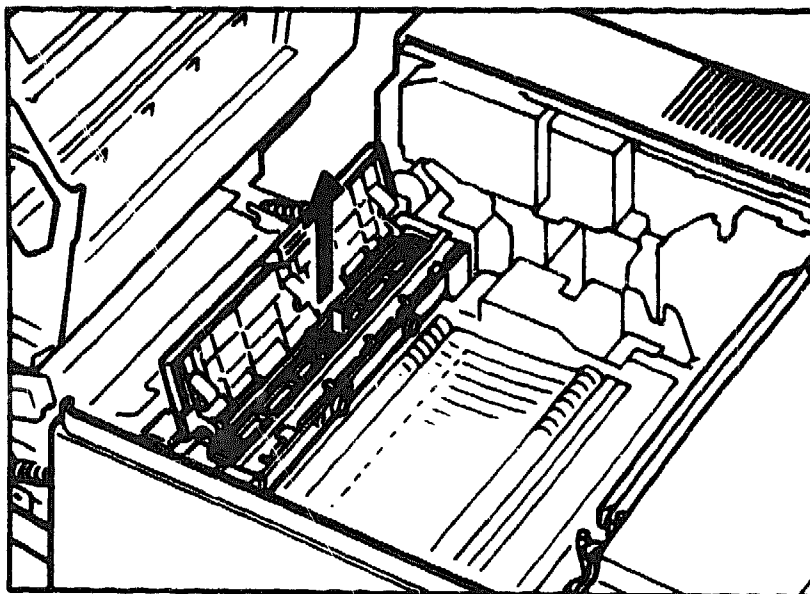7. Remove the used fixing roller cleaner from the fixing assembly.
  - ✓ Discard the used fixing roller cleaner.



MLO-004879

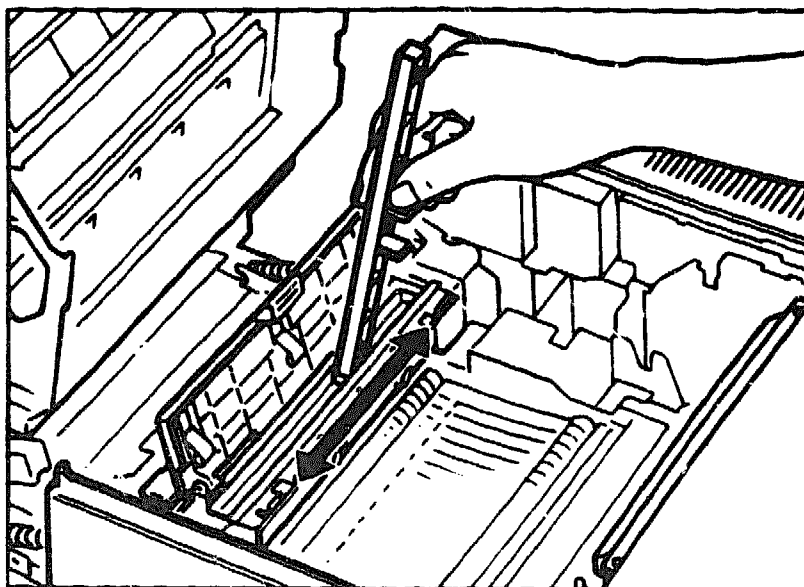
8. Wipe the fixing roller with the cleaning pad on the end of the new cleaner.



MLO-004355




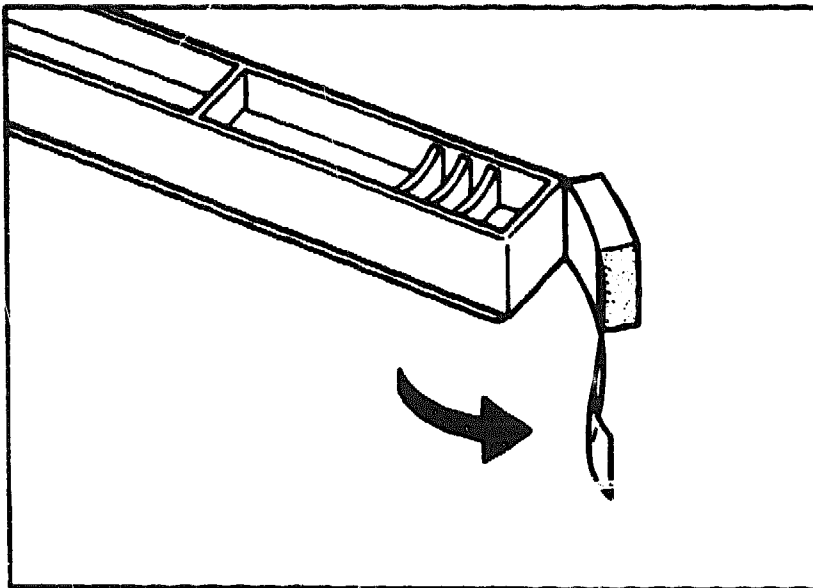9. Peel off the cleaning pad and discard it.



MLO-004356

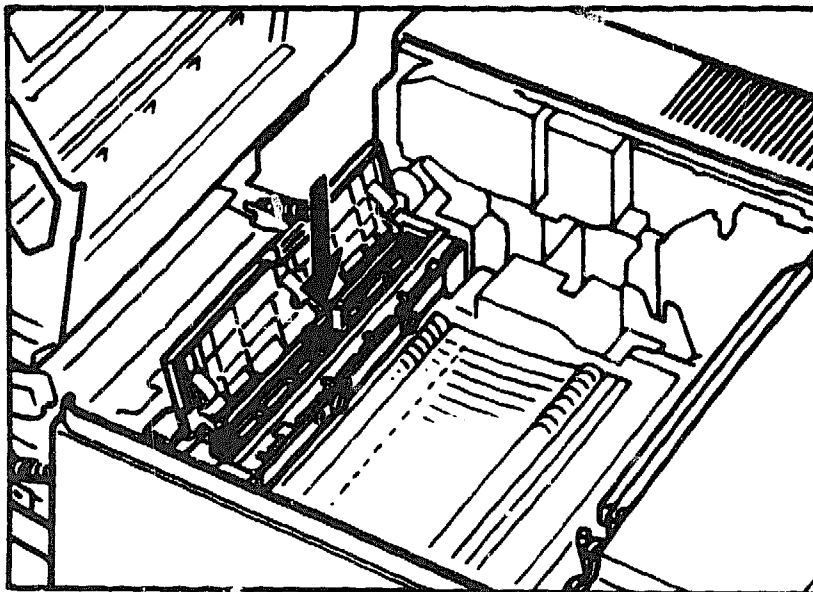
10. Insert the new cleaner into the fixing assembly.



MLO-004357

11. Close the fixing assembly cover.

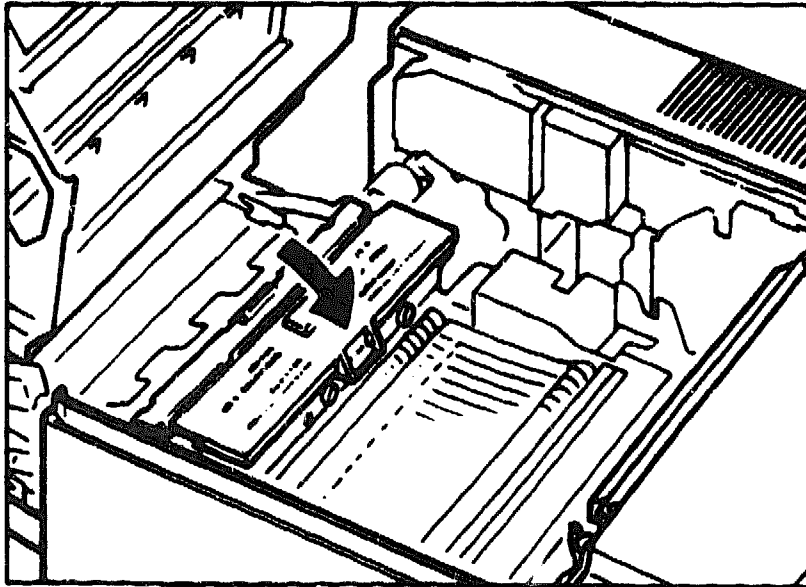
**NOTE:** *The fixing assembly cover does not close tightly.*



MLO-004358

12. Wipe the paper feed area (black plastic) clean with a cloth dampened with water.

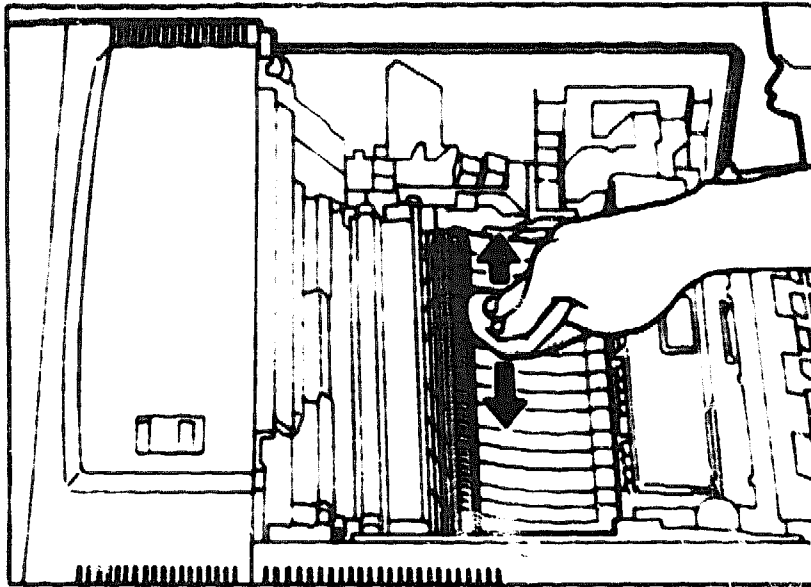
**CAUTION:** To prevent possible damage to the internal and external surfaces of the printer, do not use cleaners or solvents. Use a clean cloth dampened with water only.



46-0-00-107

13. Wipe the transfer area clean with the dampened cloth. The transfer area consists of the following components:

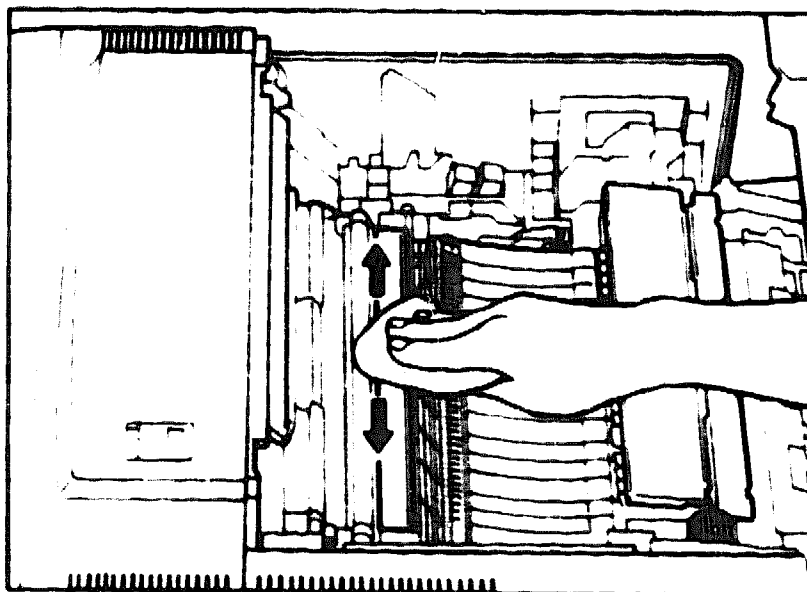
- The movable transfer guide (with green handle) and clear plastic strip
- The metal transfer roller
- The silver-colored metal transfer guide



MLC-008871

14. Clean the transfer corona wire and the nylon separation wires with the cotton swab.

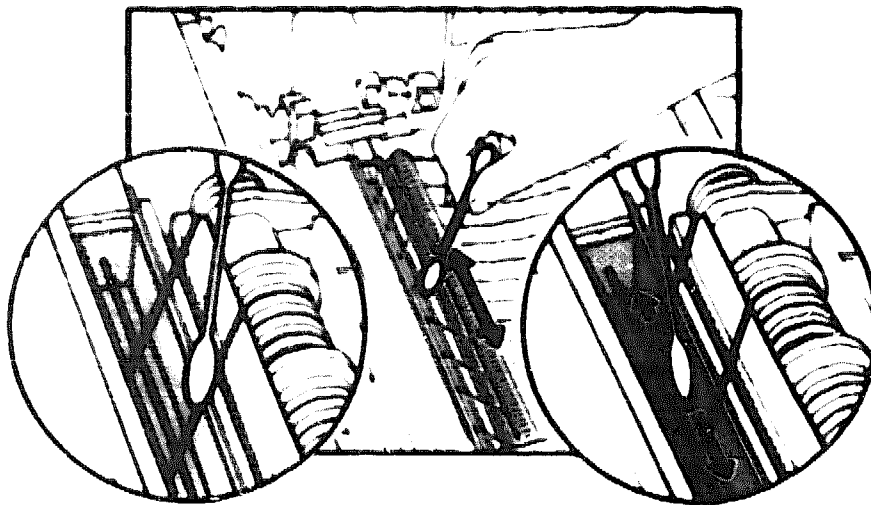
**CAUTION:** *The corona wire and nylon separation wires are fragile. Do not press down on the wires too hard or they may break.*



WA 0-0048 71

- 15 Remove the wire/pin cleaner from the inside of the printer

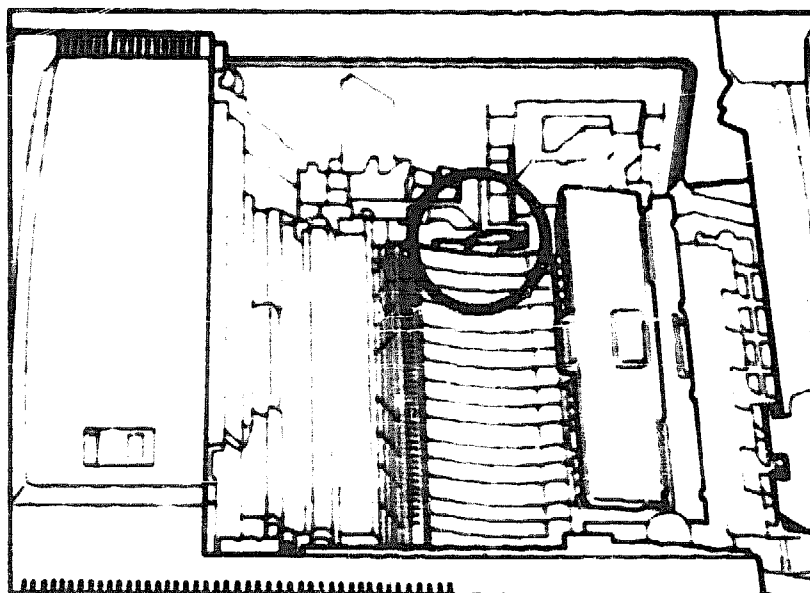
**WARNING:** *The fixing assembly may be hot. Be careful when removing the wire/pin cleaner from the printer*



WA 0-0048 71


16. Clean the discharging pins in the groove, using the brush end of the cleaner.

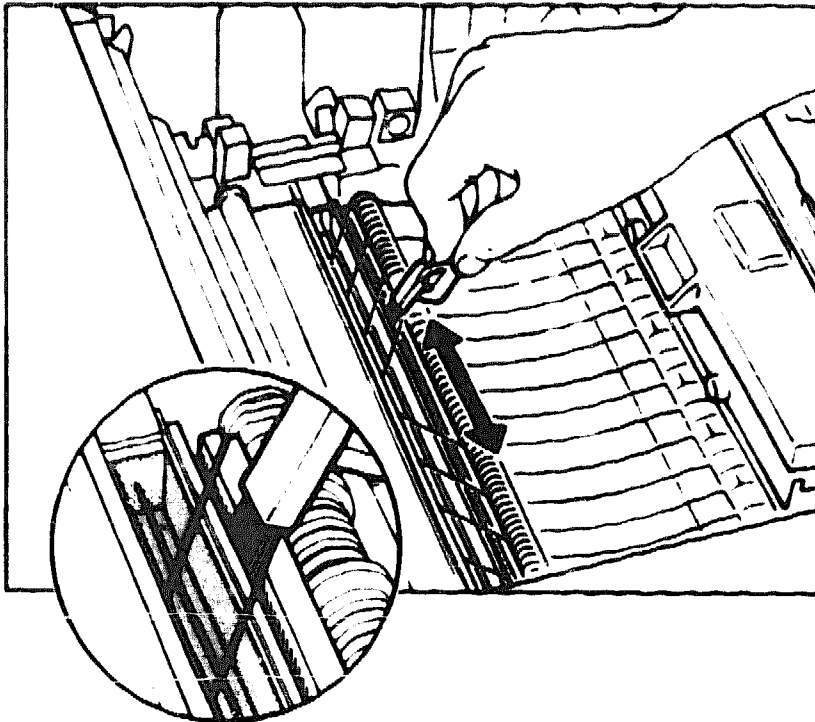**CAUTION:** *You must lift the brush over the separation wires as you clean along the groove. Be careful not to break the wires as you clean the pins.*




48 0-00487e

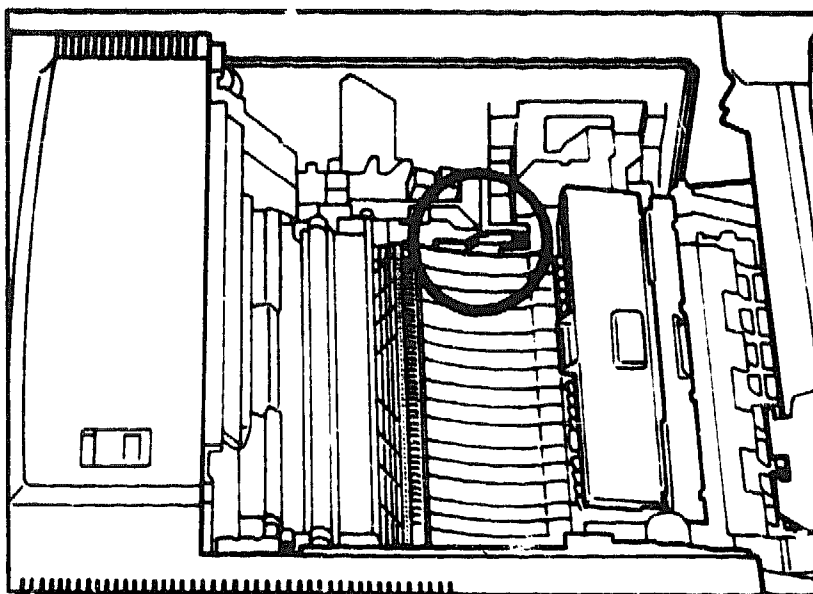17. Return the wire/pin cleaner to its storage location in the printer.




MLO-004873

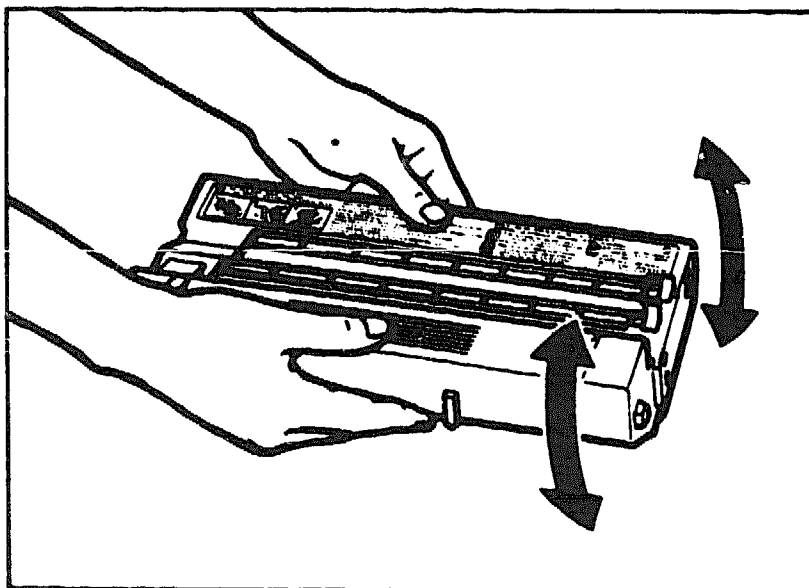18. Rock the new EP-S cartridge five or six times as shown to distribute the toner evenly.




MLO-004362

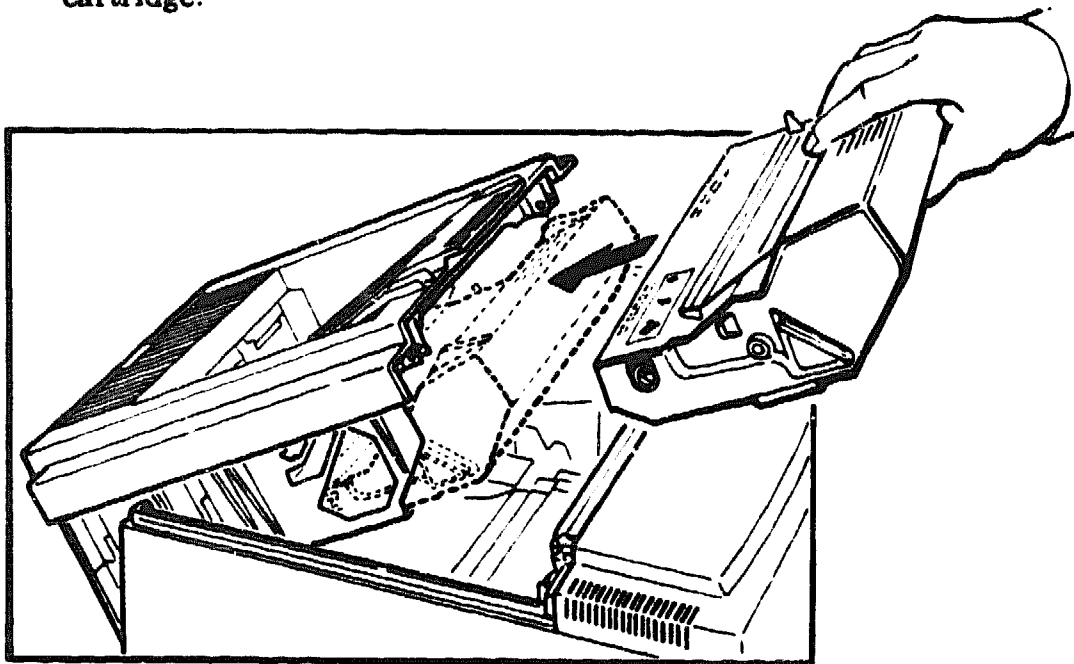19. Lower the top cover to its partially opened position and install the new cartridge.



MLO-004899

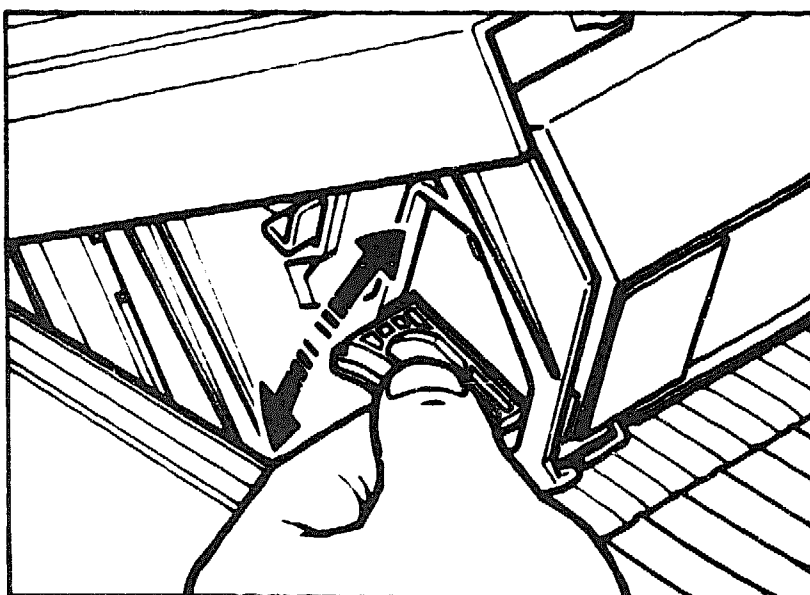20. Snap the tab from the left side of the cartridge by moving it up and down.




MLO-004364



21. Grasp the tab and pull the sealing tape completely out of the cartridge.


✓ Discard the sealing tape.

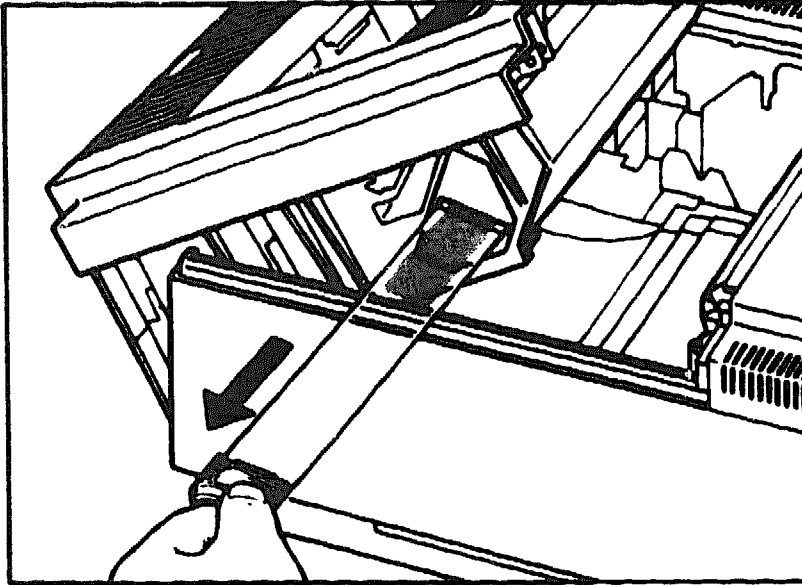**NOTE:** *The sealing tape is about 55 cm (22 in.) long and may have toner on it. If you get toner on your hands or clothing, wash them with cold water and soap.*



MLO-004385

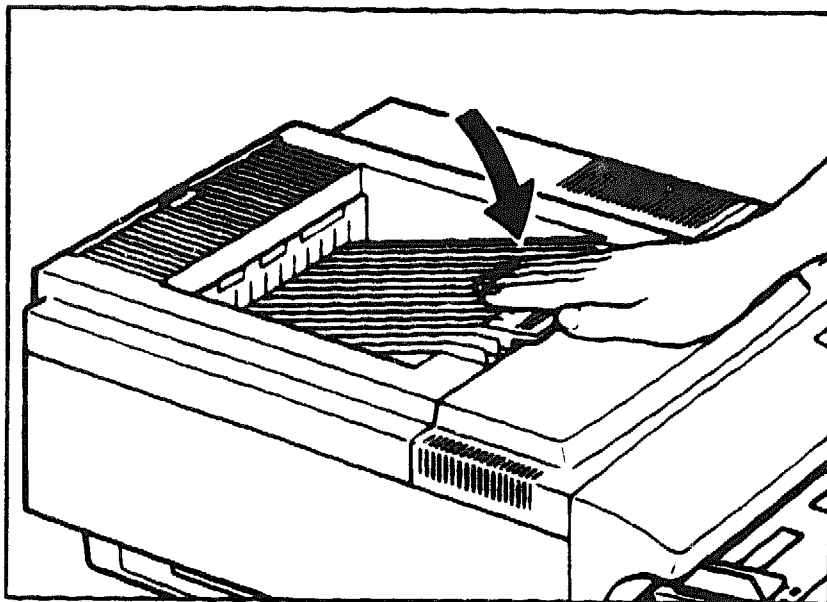22. Close the top cover by pushing down on the hand grip until it snaps into place.



MLO-004386


## 7.4 Replacing the Ozone Filter

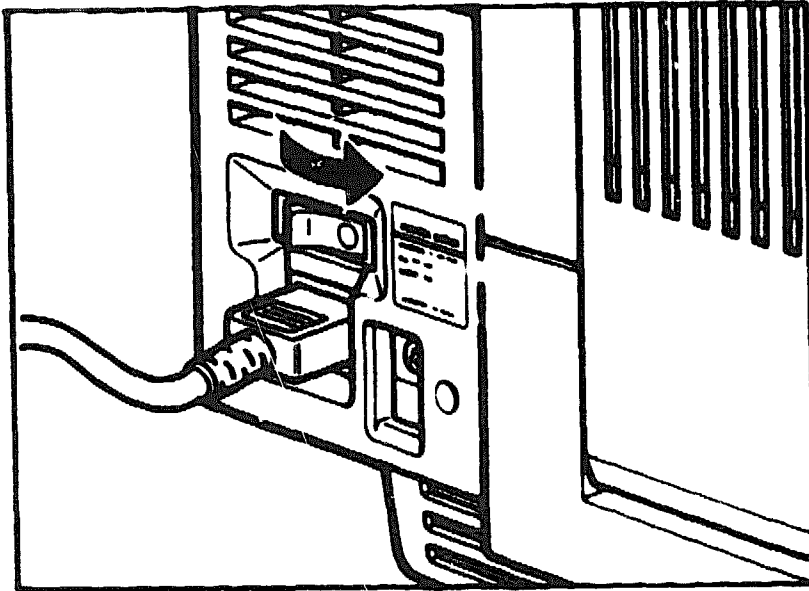The DEClaser 2100 plus printer is equipped with a disposable ozone filter that must be replaced after each 100,000 printed pages. See Appendix B for ordering information.

Use the following procedure to replace the ozone filter.


**WARNING:** *Never operate the printer without the ozone filter installed. The filter removes ozone, which could be hazardous to your health.*

1. Be sure the printer is not printing and the display reads 00 READY.
2. Press the power switch on the back of the printer to the O (OFF) position.




MLC-004829

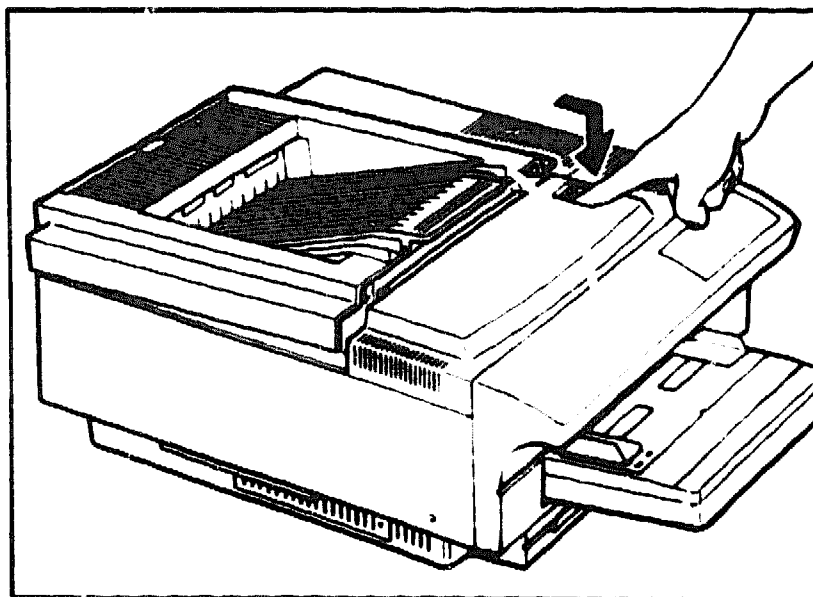3. Press the release button forward and then down.
  - The top cover will release and open slightly.



M.C.-004830

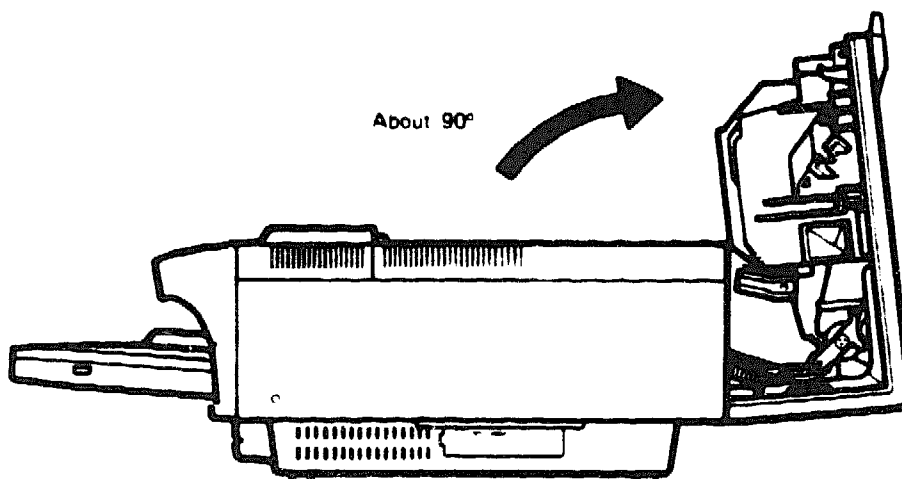
4. Lift the top cover open all the way.



M.C.-004868


5. Pull down the ozone filter cover to access the filter.

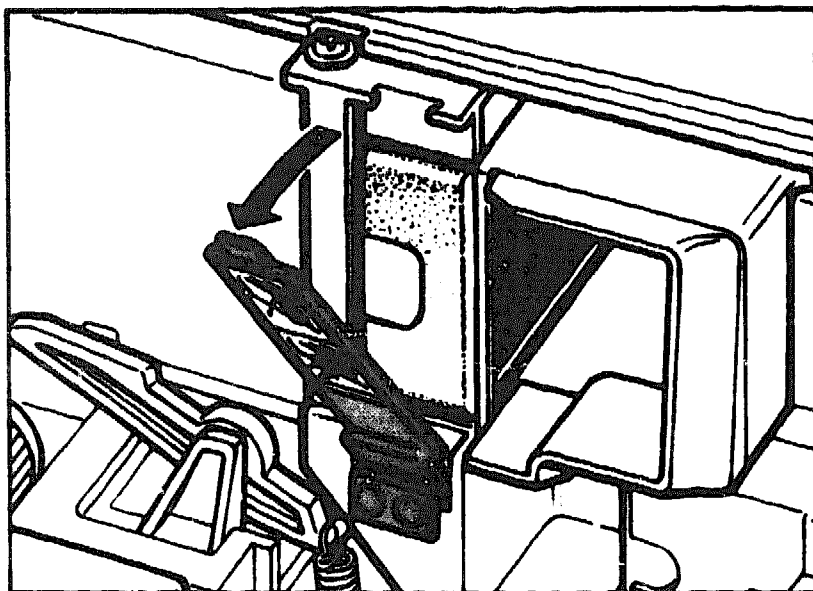**WARNING:** *The fixing assembly may be hot. Be careful when accessing the ozone filter.*



MLO-004880

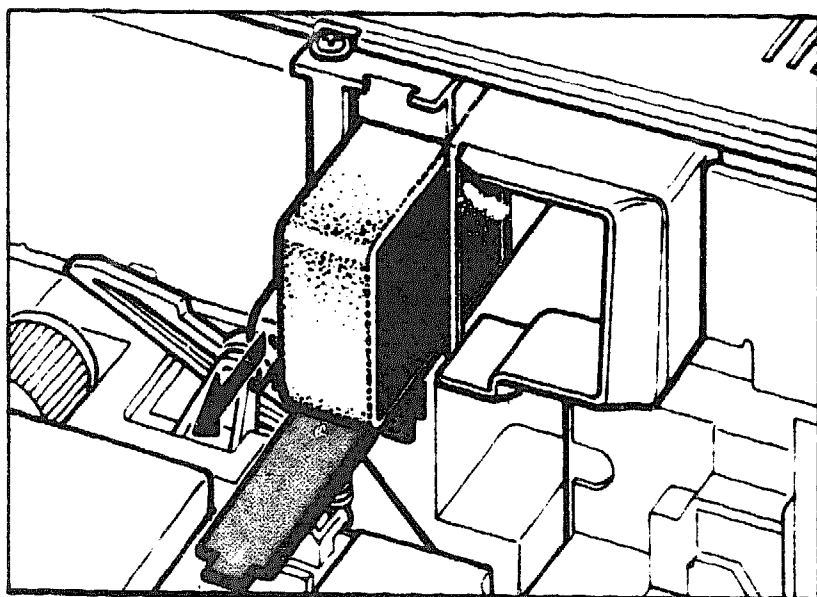
6. Remove the filter by pulling it out by its tab.



MLO-004881


7. Grasp the new filter by its tab and slide it into place.

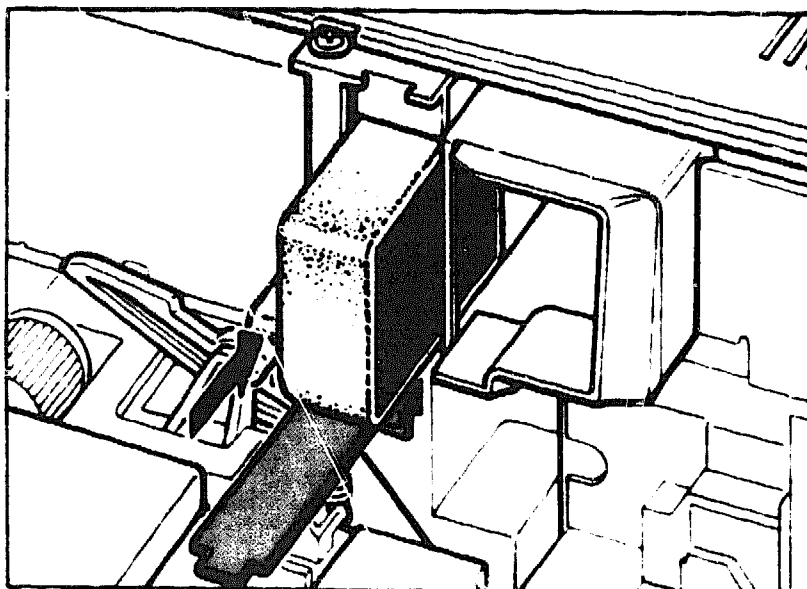**CAUTION:** *Always handle the filter by its tab and not by its mesh sides. The mesh sides are fragile and can be damaged easily.*



MLO-004882

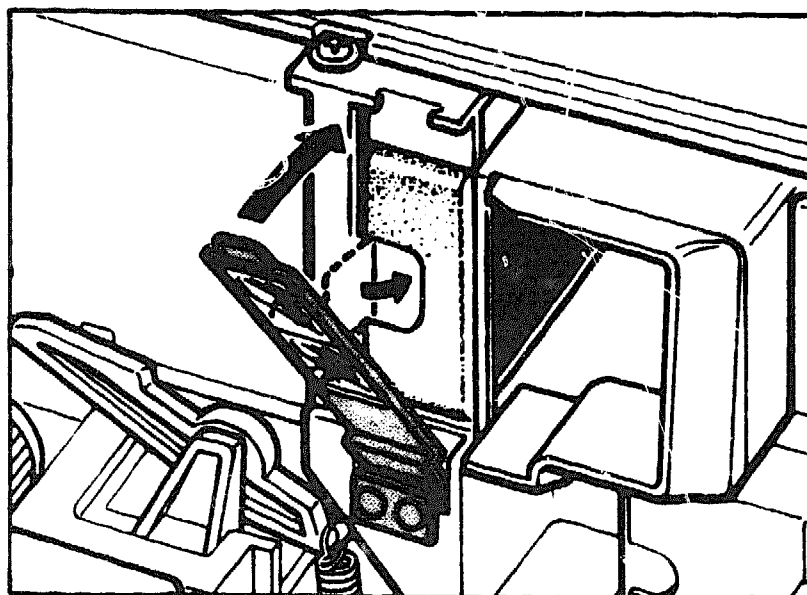8. Fold the filter tab in and close the filter cover until it snaps into place.



MLO-004883



## **Chapter 8**

# **Service**

---

If you cannot correct a problem with the DEC Laser 2100 plus printer, request servicing by a qualified Digital service representative. This chapter lists the available services.

### **8.1 Digital Equipment Corporation Services**

Digital Equipment Corporation provides a wide range of maintenance programs for printers. These include on-site, carry-in, and mail-in maintenance services. You can use these programs to select a plan that meets your service needs, from complete Digital support to self-maintenance.

Digital offers fast, low-cost, quality maintenance performed at your site by trained service specialists. Whether you select the DECservice or Basic Service agreements, or choose the Time and Materials service, your printer will receive the best possible maintenance.

There are more than 150 Digital carry-in service centers in major cities around the world. These service centers offer convenient, fast, and dependable maintenance at a savings over on-site service.

If you prefer self-maintenance, you can mail in your field replaceable unit (FRU) for repair through our fast-turnaround DECmailer repair service.



For more information on any of Digital Equipment Corporation's maintenance services, call the Digital Services office in your area during normal business hours. Refer to the list of questions in Table 8-1 before calling the service center.

**Table 8-1: Questions to Consider Before You Call**

---

<i>Is the call necessary?</i>	Check Chapter 6. Often you can solve the problem yourself.
<i>Who should call for service?</i>	Typically, the system manager should place the call for service.
<i>Where should you call?</i>	<p>In the continental United States: If you purchased on-site warranty support at the time of sale, call Digital at 1-800-DEC-8000.</p> <p>If you do not have on-site warranty support and are returning the printer to Digital for service, call 1-800-225-5355.</p> <p>For per call service information, call your local sales office.</p> <p>In Alaska, Hawaii, Canada, and Europe: Call your local sales office for service</p>
<i>What does the service center need to know?</i>	Write down the serial and model numbers located on the label on the rear output tray.
<i>How should you describe the problem?</i>	<p>Summarize the problem. Make a note of:</p> <ul style="list-style-type: none"><li>• What you were doing when the printer failed</li><li>• Any messages on the display panel</li><li>• Any strange noises</li></ul> <p>Stay by the printer and host system if possible, because the service representative may ask you to recreate the problem.</p>

---



## Appendix A

# **DEClaser Printer Quick Reference Guide**

This quick reference guide contains basic information on using certain programming instructions with your DEClaser printer.

For quick reference use, see these sections:

Category	Section
Positioning Controls	A.1
Margins and Spacing	A.2
Set/Reset Modes	A.3
Fonts and Character Sets	A.4
Miscellaneous	A.5

For detailed information about sending commands from the host computer, consult the *Digital ANSI-Compliant Printing Protocol Level 3 Programming Reference Manual* and the *Digital ANSI-Compliant Printing Protocol Level 3 Programming Supplement*.

## Conventions

The following conventions are used throughout this appendix.

Convention	Meaning
CSI	This is the control character (9/11) used to introduce the Control Sequence Introducer as part of the format of a DEC PPL3 command. For example, CSI Pn A. Both parameter characters and intermediate characters are supported in a CSI control sequence.
ESC	This is the control character (1/11) used to introduce an escape sequence as part of the format of a DEC PPL3 command. For example, ESC 4. Unlike the CSI commands, ESC commands do not support parameter characters.
SP	Indicates a space character (2/0) as part of the format of a DEC PPL3 command. For example, CSI 3 SP x. Spaces appear between characters in commands for clarity; they are not part of the command syntax unless indicated with the SP character.
P <sub>s</sub>	Selective parameter, or one that identifies a list of options pertaining to the specific command. If ">" (3/14) or "?" (3/15) occurs at the beginning of a string of parameters, the parameters that follow are Digital private parameters. If the character ">" or "?" is present, it must occur only once at the beginning of the parameter string.
P <sub>i</sub>	Intermediate character—component of an escape sequence, control sequence, or control string.
F <sub>s</sub>	Used to identify sequences in which the final character can vary.

## **A.1 Positioning Controls**

### **CUU—Cursor Up**

**CSI Pn A**

**Where:**

**Pn = n** Is the numeric value according to the Select Size Unit (SSU) sequence and Positioning Unit Mode (PUM) setting. (A value of 0 is treated as one vertical position up.)

### **DECCAHT—Clear All Horizontal Tabs**

**ESC 2** Clears all horizontal tab stops.

### **DECCAVT—Clear All Vertical Tabs**

**ESC 4** Clears all vertical tab stops.

### **DECHTS—Horizontal Tab Set**

**ESC 1** Sets a tab stop at the active horizontal position.

### **DECSHTS—Set Horizontal Tab Stops**

**CSI Pn ; . . . ; Pn u**

**Where:**

**Pn = n** Is the number of units according to the SSU sequence and PUM setting.

### **DECSVTS—Set Vertical Tab Stops**

**CSI Pn ; . . . ; Pn v**

**Where:**

**Pn = n** Is the number of units according to the SSU sequence and PUM setting.

### **DECVTS—Vertical Tab Set**

**ESC 3** Sets a tab stop at the active vertical position.

## **HPA—Horizontal Position Absolute**

CSI Pn `

Where:

Pn = 0      Is treated as horizontal position 1.

Pn = n      Is the numeric value according to the SSU sequence and PUM setting.

## **HPB—Horizontal Position Backward**

CSI Pn j

Where:

Pn = 0      Is treated as one horizontal position to the left.

Pn = n      Is the numeric value according to the SSU sequence and PUM setting.

## **HPR—Horizontal Position Relative**

CSI Pn a

Where:

Pn = 0      Is treated as one horizontal position to the right.

Pn = n      Is the numeric value according to the SSU sequence and PUM setting.

## **TBC—Tab Clear**

CSI Ps ; . . . ; Ps g

Where:

Ps = 0      Clears one horizontal tab stop at active column.

Ps = 1      Clears one vertical tab stop at active line.

Ps = 2      Clears all horizontal tab stops.

Ps = 3      Clears all horizontal tab stops.

Ps = 4      Clears all vertical tab stops.

## **VPA—Vertical Position Absolute**

CSI Pn d

Where:

Pn = 0      Is treated as vertical position 1.

Pn = n      Is the numeric value according to SSU sequence and PUM setting.

## **VPB—Vertical Position Backward**

CSI Pn k

Where:

Pn = 0      Is treated as one vertical position up.

Pn = n      Is the numeric value, according to SSU sequence and PUM setting.

## **VPR—Vertical Position Relative**

CSI Pn e

Where:

Pn = 0      Is treated as one vertical position down.

Pn = n      Is the numeric value, according to SSU sequence and PUM setting.

## **A.2 Margins and Spacing**

### **DECSHOP—Set Horizontal Pitch**

**CSI Ps w**

**Where:**

<b>Ps = 0</b>	<b>Is determined by current font.</b>
<b>Ps = 1</b>	<b>Is 720 centipoints (10 characters/inch).</b>
<b>Ps = 2</b>	<b>Is 600 centipoints (12 characters/inch).</b>
<b>Ps = 3</b>	<b>Is 545 centipoints (13.2 characters/inch).</b>
<b>Ps = 4</b>	<b>Is 436 centipoints (16.5 characters/inch).</b>
<b>Ps = 5</b>	<b>Is 1440 centipoints (5 characters/inch).</b>
<b>Ps = 6</b>	<b>Is 1200 centipoints (6 characters/inch).</b>
<b>Ps = 7</b>	<b>Is 1090 centipoints (6.6 characters/inch).</b>
<b>Ps = 8</b>	<b>Is 872 centipoints (8.25 characters/inch).</b>
<b>Ps = 9</b>	<b>Is 480 centipoints (15 characters/inch).</b>
<b>Ps = 11</b>	<b>Is 420 centipoints (approx. 17.1 characters/inch).</b>
<b>Ps = 12</b>	<b>Is 840 centipoints (approx. 8.55 characters/inch).</b>
<b>Ps = 13</b>	<b>Is 400 centipoints (18 characters/inch).</b>
<b>Ps = 14</b>	<b>Is 800 centipoints (9 characters/inch).</b>
<b>Ps = 15</b>	<b>Is 696 centipoints (approx. 10.3 characters/inch).</b>

### **DECSLPP—Set Lines per Physical Page**

**CSI Pn t**

**Where:**

<b>Pn = 0</b>	<b>Sets the form length to the logical paper size.</b>
<b>Pn = n</b>	<b>Is the numeric value, according to the SSU sequence and the PUM setting.</b>



## **DECSLRM—Set Left and Right Margins**

CSI Pn1 ; Pn2 s

**Where:**

**Pn1 = n**     Is the left margin-setting numeric value according to the SSU sequence and PUM setting (Pn1 = 0 is treated as 1).

**Pn2 = n**     Is the right margin-setting numeric value according to the SSU sequence and PUM setting (Pn2 = 0 is treated as 1).

## **DECSTBM—Set Top and Bottom Margins**

CSI Pn1 ; Pn2 r

**Where:**

**Pn1 = n**     Is the top margin-setting numeric value according to the SSU sequence and PUM setting (Pn1 = 0 is treated as 1).

**Pn2 = n**     Is the bottom margin-setting numeric value according to the SSU sequence and PUM setting (Pn2 = 0 is treated as 1).

## **DECVERP—Set Vertical Pitch**

**CSI Ps z**

**Where:**

<b>Ps = 0</b>	<b>Is determined by the current font.</b>
<b>Ps = 1</b>	<b>Is 1200 centipoints (6 lines/inch).</b>
<b>Ps = 2</b>	<b>Is 900 centipoints (8 lines/inch).</b>
<b>Ps = 3</b>	<b>Is 600 centipoints (12 lines/inch).</b>
<b>Ps = 4</b>	<b>Is 3600 centipoints (2 lines/inch).</b>
<b>Ps = 5</b>	<b>Is 2400 centipoints (3 lines/inch).</b>
<b>Ps = 6</b>	<b>Is 1800 centipoints (4 lines/inch).</b>
<b>Ps = 10</b>	<b>Is 1152 centipoints (66 lines/A-size printable area).</b>
<b>Ps = 11</b>	<b>Is 1152 centipoints (66 lines/A-size printable area).</b>
<b>Ps = 12</b>	<b>Is 864 centipoints (88 lines/A-size printable area).</b>
<b>Ps = 13</b>	<b>Is 576 centipoints (132 lines/A-size printable area).</b>
<b>Ps = 14</b>	<b>Is 3456 centipoints (22 lines/A-size printable area).</b>
<b>Ps = 15</b>	<b>Is 2304 centipoints (33 lines/A-size printable area).</b>
<b>Ps = 16</b>	<b>Is 1728 centipoints (44 lines/A-size printable area).</b>

## DECVPFS—Variable Page Format Select

CSI Pn1 ; Pn2 ; . . . ; Pn11 SP z

Where:

Pn1 = 0, 1      Is portrait orientation.  
Pn1 = 2      Is landscape orientation.  
Pn1 = Other      Is portrait orientation.

**Table A-1: DECVPFS Numeric Parameters**

	Meaning	If "Zero"
Pn2 <sup>1</sup>	Length of paper	Default <sup>2</sup>
Pn3	Width of paper	Default <sup>2</sup>
Pn4	Top margin	1
Pn5	Bottom margin	Bound of printable area (Pn2 minus .5 inch)
Pn6	Left margin	1
Pn7	Right margin	Bound of printable area (Pn3 minus .5 inch)
Pn8	Page home line	Top margin
Pn9	Page end line	Bottom margin
Pn10	Line home position	Left margin
Pn11	Line end position	Right margin

<sup>1</sup>All Pn values are according to the SSU sequence and PUM setting.

<sup>2</sup>The length and width default to the active paper tray values.

## GSM—Graphic Size Modification

CSI Pn1 ; Pn2 SP B

Where:

Pn1 = 0      Is treated as 100% of the GSS.  
Pn1 = Decimal value      Is the percentage of the height set by GSS.  
Pn2 = 0      Is treated as 100% of the GSS.  
Pn2 = Decimal value      Is the percentage of the width set by GSS.

## **GSS—Graphic Size Select**

**CSI Pn SP C**

**Where:**

**Pn = 0**      Is 10 points.

**Pn = n**      Is the font height according to SSU sequence.

## **PFS—Page Format Select**

**CSI Ps SP J**

**Where:**

**Ps = 0**      Portrait normal text.

**Ps = 1**      Landscape normal text.

**Ps = 2**      Portrait normal A4.

**Ps = 3**      Landscape normal A4.

**Ps = 4**      Portrait normal North American letter.

**Ps = 5**      Landscape normal North American letter.

**Ps = 6**      Portrait extended A4.

**Ps = 7**      Landscape extended A4.

**Ps = 8**      Portrait extended legal.

**Ps = 9**      Landscape extended legal.

**Ps = 720**      Portrait extended North American letter private.

**Ps = 721**      Landscape extended North American letter private.

**Ps = 722**      Portrait extended A4 private.

**Ps = 723**      Landscape extended A4 private.

**Ps = 724**      Portrait extended legal private.

**Ps = 725**      Landscape extended legal private.

## **SHS—Set Horizontal Spacing**

**CSI Ps SP K**

**Where:**

- Ps = 0** Is 720 centipoints (10 characters/inch).  
**Ps = 1** Is 600 centipoints (12 characters/inch).  
**Ps = 2** Is 480 centipoints (15 characters/inch).  
**Ps = 3** Is 1200 centipoints (6 characters/inch).

## **SPI—Spacing Pitch Increment**

**CSI Pn1 ; Pn2 SP G**

**Where:**

- Pn1 = 0** Line spacing is determined by the current font.  
**Pn1 = n** Line spacing is determined by the numeric value according to the SSU sequence and PUM setting.  
**Pn2 = 0** Character spacing is determined by current font.  
**Pn2 = n** Character spacing is determined by the numeric value according to the SSU sequence and PUM setting.

## **SSU—Select Size Unit**

**CSI Ps SP I**

**Where:**

- Ps = 2** Is decipoint 1/720 inch.  
**Ps = 7** Is pixel 1/300 inch.  
**Ps = 71** Is centipoint 1/7200 inch.

## **SVS—Set Vertical Spacing**

**CSI Ps SP L**

**Where:**

**Ps = 0** Is 1200 centipoints (6 lines/inch).

**Ps = 1** Is 1800 centipoints (4 lines/inch).

**Ps = 2** Is 2400 centipoints (3 lines/inch).

**Ps = 3** Is 600 centipoints (12 lines/inch).

**Ps = 4** Is 900 centipoints (8 lines/inch).

**Ps = 5** Is 1416 centipoints (6 lines/30 mm).

**Ps = 6** Is 2136 centipoints (4 lines/30 mm).

**Ps = 7** Is 2856 centipoints (3 lines/30 mm).

**Ps = 8** Is 720 centipoints (12 lines/30 mm).

**Ps = 9** Is 3600 centipoints (2 lines/inch).

## **A.3 Set/Reset Modes**

### **CRM—Control Representation Mode**

**CSI 3 h** Sets Control Representation Mode.

**CSI 3 l** Resets Control Representation Mode.

### **DECAWM—Autowrap Mode**

**CSI ? 7 h** Sets Autowrap Mode.

**CSI ? 7 l** Resets Autowrap Mode.

### **DECCRNLM—Carriage Return/New Line Mode**

CSI ? 40 h    Set—CR acts as New Line.

CSI ? 40 l    Reset—CR acts as Carriage Return.

### **DECOPM—Origin Placement Mode**

CSI ? 52 h    Sets Origin Placement Mode.

CSI ? 52 l    Resets Origin Placement Mode.

### **DECPSM—Horizontal Pitch Select Mode**

CSI ? 29 h    Sets Horizontal Pitch Select Mode.

CSI ? 29 l    Resets Horizontal Pitch Select Mode.

### **DECPSP—Proportional Spacing Mode**

CSI ? 27 h    Sets Proportional Spacing Mode.

CSI ? 27 l    Resets Proportional Spacing Mode.

### **LNLM—Line Feed/New Line Mode**

CSI 20 h    Set—LF acts as New Line.

CSI 20 l    Reset—LF acts as Line Feed.

### **PUM—Positioning Unit Mode**

CSI 11 h    Sets the Positioning Unit Mode.

CSI 11 l    Resets the Positioning Unit Mode.

## A.4 Fonts and Character Sets

### ASCEF—Announce Subset of Code Extension Facilities

ESC SP Fs

If the final character (Fs) is:

L     Is ISO 4873, level 1.

M     Is ISO 4873, level 2.

N     Is ISO 4873, level 3.

### DECATFF—Assign to Type Family or Font

DCS Ps1 ; Ps2 ) id\_string ST

Where:

Ps1 = 0 or 1     Assigns a font collection plus by a 16-character font identifier to SGR number.

Ps1 = 2     Assigns type family ID (7 characters) to SGR number.

Ps1 = 3     Assigns a 16-character font ID to SGR number.

Ps1 = 4     Assigns a 12-character font collection ID to SGR number.

Ps2 = 10     Is the primary SGR font selection.

Ps2 = 11     Is the first alternative.

Ps2 = 12     Is the second alternative.

·  
·  
·

Ps2 = 19     Is the ninth alternative.

id\_string     Is the identifier required by the type of assignment identified by Ps1.



## **DECAUPSS—Assign User-Preference Supplemental Character Set**

**DCS Ps ! u D . . . D ST**

**Where:**

**Ps = 0** Is a 94-character set.

**Ps = 1** Is a 96-character set.

**Possible D . . . D values:**

<b>%5</b>	<b>DEC Supplemental</b>	<b>(Ps = 0)</b>
<b>A</b>	<b>ISO Latin-1 Supplemental</b>	<b>(Ps = 1)</b>
<b>I</b>	<b>JIS Katakana<sup>1</sup></b>	<b>(Ps = 0)</b>
<b>"4</b>	<b>DEC Hebrew Supplemental</b>	<b>(Ps = 0)</b>
<b>H</b>	<b>ISO Latin-Hebrew Supplemental</b>	<b>(Ps = 1)</b>

---

<sup>1</sup>Not resident

## **DECDTFF—Delete Type Family or Font**

**DCS Ps ~ id\_string ST**

**Where:**

**Ps = 0** Requires the ID string for a 7-character type family ID.

**Ps = 1** Requires the ID string for a 31-character font file ID.

## **DECLFF—Load Font File**

DCS Ps1 ; Ps2 ; Ps3 y font\_record, font\_record; comment\_record ST

Where:

Ps1 = 0    Is Digital font file format.

Ps2 = 0    Is print the summary sheet.

Ps2 = 1    Is do not print the summary sheet.

Ps2 = 2    Is send font error and warning information.

Ps2 = 3    Is print the summary sheet and send font error and warning information.

Ps2 = 4    Is print font error and warning information.

Ps3 = 0    Is delete all fonts.

Ps3 = 1    Is replace loaded font files with same ID as loaded font file.

## **LS1R—Locking Shift 1 Right**

ESC ~    G1 becomes the active GR character set.

## **LS2—Locking Shift 2**

ESC n    G2 becomes the active GL character set.

## **LS2R—Locking Shift 2 Right**

ESC }    G2 becomes the active GR character set.

## **LS3—Locking Shift 3**

ESC o    G3 becomes the active GL character set.

## **LS3R—Locking Shift 3 Right**

ESC |    G3 becomes the active GR character set.

## SCS—Select Character Set

ESC I\* . . . In F

Where:

I\* = ( (Left parenthesis)<sup>1</sup>      Designates the character set into G0.

I\* = ) (Right parenthesis)<sup>1</sup>      Designates the character set into G1.

I\* = \* (Asterisk)<sup>1</sup>                  Designates the character set into G2.

I\* = + (Plus sign)<sup>1</sup>                Designates the character set into G3.

I\* = - (Minus sign)<sup>2</sup>               Designates the character set into G1.

I\* = . (Period)<sup>2</sup>                    Designates the character set into G2.

I\* = / (Slash)<sup>2</sup>                     Designates the character set into G3.

---

<sup>1</sup>For 94-character sets

<sup>2</sup>For 96-character sets

---

**Table A-2: Character Set Identification**

---

Character Set	Number of Characters	Character Set Identifier
British	94	A
ASCII	94	B (initial setting for G0 and G1)
DEC Dutch	94	4
DEC Finnish	94	5
French	94	R
DEC French Canadian	94	9
German	94	K
ISO Italian	94	Y
Legal	94	%4
JIS Roman	94	J
JIS Katakana <sup>1</sup>	94	I
DEC Norwegian/Danish	94	6
ISO Spanish	94	Z
DEC Swedish	94	7

---

<sup>1</sup>Not resident

**Table A-2 (Cont.): Character Set Identification**

<b>Character Set</b>	<b>Number of Characters</b>	<b>Character Set Identifier</b>
DEC Swiss	94	=
Norwegian/Danish	94	'
DEC Supplemental	94	%5
DEC Technical	94	>
DEC Special Graphics	94	0
DEC Portuguese	94	%6
User Preference Supplemental <sup>2</sup>	94	< (initial setting for G2 and G3)
DEC 7-Bit Hebrew	94	%=
DEC Hebrew Supplemental	94	"4
ISO Latin-1 Supplemental	96	A
ISO Latin-Hebrew Supplemental	96	H

<sup>2</sup>By default, User Preference Supplemental is DEC Supplemental to ensure compatibility.

## SGR—Select Graphic Rendition

CSI Ps ; . . . ; Ps m

Where:

Ps = 0	Turns off all attributes (standard and private).
Ps = 1	Turns on bold.
Ps = 3	Turns on italics.
Ps = 4	Turns on underline.
Ps = 9	Turns on strike-through.
Ps = 10 . . . 19	Selects the font according to the initial state or as assigned by DECATFF.
Ps = 21	Turns on double underline.
Ps = 22	Turns off bold.
Ps = 23	Turns off italics.
Ps = 24	Turns off underline and double underline.
Ps = 29	Turns off strike-through.
Ps = 53	Turns on overline.
Ps = 55	Turns off overline.
?0	Turns all private attributes off. <sup>1</sup>
?4	Turns superscript on, subscript off.
?5	Turns subscript on, superscript off.
?6	Turns on overline.
?24	Turns off superscript and subscript.
?26	Turns off overline.

---

<sup>1</sup>Turns off subscript, superscript, and overline.

## **A.5 Miscellaneous**

### **CPR—Cursor Position Report**

**CSI Pn1 ; Pn2 R**

**Where:**

**Pn1 = n**        Numeric parameter describing the active vertical position according to the SSU sequence and PUM setting.

**Pn2 = n**        Numeric parameter describing the active horizontal position according to the SSU sequence and PUM setting.

### **DA—Device Attributes**

**CSI c**            Requests the Primary Device Attributes Report.

### **DA2—Device Attributes (Secondary)**

**CSI > c**        Requests a Secondary Device Attributes Report.

### **DAR—Response to Device Attributes (DA) Request**

**CSI ? Ps1 ; Ps2 ; . . . ; Psn c**

The following is the generic response indicating a DEClaser 2200 plus printer:

**CSI ? 73 ; 4 ; 6 ; 8 ; 9 ; 10 ; 11 ; 12 ; 16 ; 18 ; c**

The following is the generic response indicating a DEClaser 2100 plus printer:

**CSI ? 73 ; 4 ; 6 ; 8 ; 9 ; 10 ; 11 ; 12 ; 16 c**

The following is an alias response for backward compatibility with the LN03 printer:

**CSI ? 26 c**

## **DA2R—Device Attributes (Secondary) Report**

**CSI > Ps1 ; Ps2 ; Ps3 ; Ps4 c**

**Where:**

**Ps1 = 46**      **Identifies the DEClaser 2100 plus printer.**

**Ps1 = 47**      **Identifies the DEClaser 2200 plus printer.**

**Ps2 = xx**      **xx is the major firmware version number multiplied by 10.**

**Ps3 = 0**      **No memory cards installed.**

**Ps3 = 1**      **1-Mbyte memory card installed.**

**Ps3 = 2**      **2-Mbyte memory card installed.**

**Ps3 = 3**      **3-Mbyte memory card installed.**

**Ps4 = n**      **Is the sum of the codes of the installed optional protocols.**

**Ps4 = 1**      **Is PostScript.**

**Ps4 = 2**      **Is CaPSL.**

**Ps4 = 4**      **Is IBM ProPrinter.**

**Ps4 = 8**      **Is HP PCL 4.**

**Ps5 = yy**      **Is the minor firmware version number.**

**Ps5 = 00**      **Is Version x.x-00.**

## **DECASFC—Automatic Sheet Feeder (input tray) Control**

**CSI Ps ! v**

**Where:**

- Ps = 0**     No tray change.
- Ps = 1**     Selects the top tray.
- Ps = 2**     Selects the bottom tray (only on the DEClaser 2200 plus printer).
- Ps = 3**     Selects the envelope feeder (only on the DEClaser 2200 plus printer).<sup>1</sup>
- Ps = 99**    Selects manual feed operation.

---

<sup>1</sup>Available only if the option is installed

## **DECRFS—Request Font Status**

**CSI Ps " {**

**Where:**

- Ps = 0**     Sends both reports (same as 1 followed by 2).
- Ps = 1**     Sends font status (includes all built-in fonts, downline loaded fonts, and cartridge fonts).
- Ps = 2**     Sends status of memory bytes available for downline loaded fonts.



## DECFSR—Font Status Report

If DECRFS is 1 or 0:

DCS 1 " { report\_string ST

If DECRFS is 2 or 0:

DCS 2 " { nnn ST

If DECLFF has Ps2 = 2 or 3:

DCS 4 " { error\_string ST

Where:

---

This Variable	Indicates
---------------	-----------

---

<i>report_string</i>	All available fonts.
----------------------	----------------------

<i>nnn</i>	The number of bytes available in memory for downline loading.
------------	---

<i>error_string</i>	Error and warning codes.
---------------------	--------------------------

---

## DECMM--Memory Management

CSI Ps + v

Where:

Ps = 0, 1    Imaging capabilities are not guaranteed.

Ps = 2<sup>1</sup>    An A-size or A4-size image is guaranteed without complexity errors.

Ps = 3<sup>1</sup>    A legal-size image is guaranteed without complexity errors.

Ps = 4<sup>1</sup>    An A-size or A4-size image is guaranteed without complexity errors in duplex mode.

Ps = 5<sup>1</sup>    A legal-size image is guaranteed without complexity errors in duplex mode.

---

<sup>1</sup>Available only when additional memory is installed

## DECNS—New Sheet

CSI SP s    Executes a conditional form feed and ensures that printing resumes on a new font face.

## **DECRVEC—Draw Relative Vector**

**CSI Ps1 ; Pn2 ; Pn3 SP |**

**Where:**

**Ps1 = 0**      Draws a horizontal (X) line to the right.

**Ps1 = 1**      Draws a vertical (Y) line down.

**Ps1 = 2**      Draws a horizontal (X) line to the left.

**Ps1 = 3**      Draws a vertical (Y) line up.

**Pn2 = n**      Is the line length according to the SSU sequence.

**Pn3 = n**      Is the line width according to the SSU sequence.

## **DECSCL—Set Conformance Level**

**CSI Ps " p**

**Where:**

**Ps = 0 or 73**      Resets to DEC PPL3 defaults.

## **DECSDPM—Set Duplex Print Mode**

**CSI Ps SP x**

<b>Ps</b>	<b>Print Mode</b>	<b>Physical State</b>	<b>Tumbling State</b>
0	True simplex normal	Simplex	Off
1	True simplex normal	Simplex	Off
2	True simplex tumbled	Simplex	On
3	True duplex normal	Duplex	Off
4	True duplex tumbled	Duplex	On
5	Duplex master normal	Simplex	Off
6	Duplex master tumbled	Simplex	On
7	Simplex compressed normal	Duplex	Off
8	Simplex compressed tumbled	Duplex	On

### **DECSITF—Select Input Tray Failover**

CSI Ps1 ; Ps2 ; . . . Psn SP w

Where:

Ps1 = 0                Disables all composite input trays.

Ps1 = 1                Defines composite tray 1.

Ps2–Psn = n           Designates the tray as a member of the composite tray.

**NOTE:** *Tray numbers are the same as in the DECASFC sequence.*

### **DECSNC—Set Number of Copies**

CSI Pn & q

Where:

Pn = 0                Is treated as one copy.

Pn = 1–99            Is the number of copies.

Pn > 99            Is treated as 99 copies.

### **DECSSS—Set Sheet Size**

CSI Ps1 ; Ps2 ; Pn3 ; Pn4 SP {

Where:

Ps1 = 0                Is any slot.

Ps1 = 1                Is top tray.

Ps1 = 99              Is manual feed.

Ps2 = n                Is key number (ignored).

Pn3 = n                Is width (defined as leading edge).

Pn4 = n                Is length.

### **DECSTR—Soft Terminal Reset**

CSI ! p               Resets the printer to initial state values and returns to DEC PPL3 protocol.

## **DECVEC—Draw Vector**

**CSI Ps1 ; Pn2 ; Pn3 ; Pn4 ; Pn5 ! ;**

**Where:**

**Ps1 = 0            Draws horizontal line (X).**

**Ps1 = 1            Draws vertical line (Y).**

**Ps1 = Other       Performs no action.**

**Pn2 = n            Is the horizontal line (X) start position according to the CSU sequence.**

**Pn3 = n            Is the vertical line (Y) start position according to the SSU sequence.**

**Pn4 = n            Is line length according to the SSU sequence.**

**Pn5 = n            Is line width according to the SSU sequence.**

## **DSR—Device Status Request**

**CSI Ps n**

**Where:**

**Ps = 0 or 5        Sends an extended status report.**

**Ps = 6            Sends a cursor position report.**

**Ps = ?1            Disables all unsolicited status reports.**

**Ps = ?2            Enables brief unsolicited status reports, sends extended status report.**

**Ps = ?3            Enables extended unsolicited status report, sends extended status report.**

## **JFY—Justify**

**CSI Ps SP F**

**Where:**

**Ps = 0            Stops text justification.**

**Ps = 2            Justifies text with limits.**

**Ps = ?2            Justifies text without limits.**

### **RIS—Reset to Initial State**

**ESC c**      Resets the printer to initial state values and returns to DEC PPL3 protocol.

### **ROCS—Return from Other Coding System**

**ESC & @**      Returns to DEC PPL3 from an alternate protocol emulation mode.

### **SOCS—Select Other Coding System**

**ESC & 8**      Selects HP PCL emulation mode.

**ESC & / 4**      Selects PostScript interpreter mode (PostScript protocol).

**ESC & =**      Selects IBM ProPrinter emulation mode.

**ESC & <**      Selects CaPSL emulation mode.

### **SnC1R—C1 Receive Mode**

**CSI SP 6**      Interprets C1 as C0.

**CSI SP 7**      Interprets C1 as C1.



## Appendix B

# Accessories and Supplies

---

This appendix lists some of the accessories and supplies available for the DECclaser 2100 plus printer. Contact your Digital sales representative or refer to your latest DECdirect catalog for a complete list of products and the latest pricing information. See Section B.1 for additional ordering information.

**Table B-1: DECclaser 2100 plus Printer Accessories and Supplies**

Part Number	Description
LNXX-CA <sup>1</sup>	CG Times proportional font cartridge
LNXX-CB <sup>1</sup>	CG Triviriate proportional font cartridge
LNXX-CC <sup>1</sup>	ITC Souvenir and Script proportional font cartridge
LNXX-CD <sup>1</sup>	Monospaced font cartridge
LNXX-CN	CaPSL ROM cartridge
LNXXR-PS	PostScript cartridge
LN05R-UA	PostScript upgrade kit
LNXX-LA	Legal-size paper cassette (8 ½ in. x 14 in.)
LNXX-LB	A4-size paper cassette (297 mm x 210 mm)
LNXX-LE	Executive-size paper cassette (7 ¼ in. x 10 ½ in.)
LNXX-HP <sup>2</sup>	HP LaserJet IIP-series emulations
LNXX-PP <sup>2</sup>	IBM Proprinter X24E emulations
LNXX-LN	Envelope cassette
LNXX-LT	Letter-size paper cassette (9 ½ in. x 11 in.)
LNXX-UC	1 MB RAM module
LNXX-UD	2 MB RAM module

---

<sup>1</sup>These fonts work only with DEC PPL3 protocol.

<sup>2</sup>These fonts work with HP PCL protocol.

**Table B-1 (Cont.): DECaser 2100 plus Printer Accessories and Supplies**

<b>Part Number</b>	<b>Description</b>
LNXX-UE	3 MB RAM module
LNXX-AC	EP-S Cartridge Supplies Kit (quantity = 1)
LNXX-XA	EP-S Cartridge Supplies Kit (quantity = 4)
LNXX-XB	EP-S Cartridge Supplies Kit (quantity = 16)
LNXX-XC	EP-S Cartridge Supplies Kit (quantity = 64)
LN03X-AE	Mobile printer cabinet/stand
H8571D-A	25-pin male-to-MMJ adapter
H8571D-B	9-pin male-to-MMJ adapter (Digital)
H8571-C	25-pin cable-to-MMJ adapter
H8571-D	25-pin female-to-MMJ adapter (modem)
H8571-J	9-pin PC type-to-MMJ adapter
H8673-AA	20mA active host Mate-N-Lock to EIA-423 DECconnect MMJ passive converter
H8673-AB	20mA active host RJ11 (6-pin) to EIA-423 DECconnect MMJ passive converter
H9850-TA	Laser labels (30/sheet x 100 sheets per box)
H9850-TB	Laser labels (21/sheet x 100 sheets per box)
BC19M-10	IBM/Centronics parallel cable
LN01X-AB	Letter-size paper 8 ½ in. x 11 in. 5,000 sheets per box
LN01X-AD	A4-size paper 297 mm x 210 mm 5,000 sheets per box
LN01X-AC	Legal-size paper 8 ½ in. x 14 in. 5,000 sheets per box
LN03X-AJ	Letter-size transparencies 8 ½ in. x 11 in. 50 sheets per box



**Table B-1 (Cont.): DEClaser 2100 plus Printer Accessories and Supplies**

<b>Part Number</b>	<b>Description</b>
LP03X-AK	A4-size transparencies 297 mm x 210 mm 50 sheets per box
29-28272-01	Replacement ozone filter
	<i>NOTE: The replacement ozone filter is available through self-maintenance services. Call 1-800-344-4825 to order the filter.</i>

## B.1 Ordering Information

Use the following mailing addresses and telephone numbers to order products for the DEC Laser 2100 plus printer.

**Table B-2: Ordering Within the U.S.A.**

---

<b>MAIL</b>	Digital Equipment Corporation PO Box CS2008 Nashua, NH 03061
<b>TELEPHONE</b>	Order toll free 1-800-DIGITAL (DECdirect) between the hours of 8:30 a.m. and 8:00 p.m. EST

---

**Table B-3: Outside the U.S.A.**

---

<b>MAIL</b>	Digital Equipment Corporation Attention: Accessories & Supplies Business Manager c/o Local Subsidiary or Digital-Approved Distributor
<b>TELEPHONE</b>	
In Canada	Order toll free 1-800-267-6215
In Australia	Outside Sydney Metropolitan Area (toll free): 008-226-363 From Sydney Metropolitan Area: 412-7000
In New Zealand	Auckland (toll free): 0800-800-332

---



## Appendix C

# Specifications

---

This appendix contains the operating and interface specifications for the DEClaser 2100 plus printer.

### C.1 Operating Specifications

<b>Type:</b>	Desktop page printer
<b>Printing Method:</b>	Electrophotographic using laser beam scanning
<b>Laser Power:</b>	5 mW maximum
<b>Resolution:</b>	300 dpi
<b>Printing Speed:</b>	8 pages/minute maximum using A4 or letter-size paper from the cassette
<b>Warm-Up Time:</b>	Less than one minute at 20°C (68°F)
<b>Paper Cassette:</b>	Approximate capacity is 200 sheets Letter (8 1/2 in. x 11 in.) A4 (297 mm x 182 mm) Executive (7 1/4 in. x 10 1/4 in.) Legal (8 1/2 in. x 14 in.)
<b>Manual Feed:</b>	One sheet at a time 100 mm x 190 mm (3.9 in. x 7 1/4 in.) to 216 mm x 356 mm (8 1/2 in. x 14 in.)
<b>Top Output Tray Capacity:</b>	100 sheets (facedown stacking)
<b>Rear Output Tray Capacity:</b>	20 sheets (faceup stacking)
<b>Paper Weight Range</b> <b>Cassette Feed:</b>	60 g/m <sup>2</sup> to 80 g/m <sup>2</sup> basis weight (16 lb. to 21 lb.)
<b>Paper Weight Range</b> <b>Manual Feed:</b>	60 g/m <sup>2</sup> to 135 g/m <sup>2</sup> basis weight (16 lb. to 35 lb.)

**Built-in Font Files:**

The DEClasser 2100 plus has 36 built-in font files that can be used with DEC PPL3. The font files consist of four fonts and nine character sets. These fonts are:

- Courier 10-point normal<sup>1</sup> portrait
- Courier 10.8-point normal portrait
- Courier 6.7-point normal landscape
- Elite 10-point normal portrait

For each font the following character sets reside in the printer:

- ASCII
- DEC Supplemental
- ISO Latin-1 Supplemental
- DEC Technical
- DEC Special Graphics (VT100 Line Drawing)
- DEC 7-Bit Hebrew
- DEC Hebrew Supplemental
- ISO Latin-Hebrew Supplemental
- Legal

**Font Cartridges:**

Capacity for two optional font cartridges

**Built-in RAM:**

0.5 MB, expandable to 3.5 MB  
with optional RAM boards

**Host Interface:**

Parallel (Centronics) and serial (RS232C)

**Acoustic Noise:**

40dB(A) maximum during standby  
53dB(A) maximum during printing

**Operating Temperature:**

10°C to 32.5°C (50°F to 90.5°F)

**Operating Humidity:**

20% to 80% relative humidity

**Storage Temperature:**

0°C to 35°C (32°F to 95°F)

**Storage Humidity:**

10% to 80% relative humidity

---

<sup>1</sup>Normal means that the font is not set in bold or italic or otherwise attributed.

**Power Requirements:**

100-115 Vac, 50/60 Hz  
220-240 Vac, 50 Hz

**Power Consumption:**

100-115 V models = 810 W @ 115 V  
220-240 V models = 790 W @ 240 V

**Packaged Weight:**

Approximately 24.0 kg (54 lb.)

**Installed Weight:**

Approximately 20.6 kg (45.5 lb.)

**Dimensions:**

Width: 454 mm (17.9 in.)  
Depth: 525 mm (20.7 in.)  
Depth: 815 mm (32.1 in.) with A4 paper cassette  
installed and the rear output tray opened  
Height: 228 mm (9.0 in.)


## C.2 Serial Interface Specifications

Table C-1 lists the pin signals for the RS232C serial interface connector. Figure C-1 shows the pin assignments on the connector. Figure C-2 and Figure C-3 show the serial connections with and without connection to a modem.

**Table C-1: Serial Interface Pin Assignment**

Pin	Signal	Direction
1	Frame Ground	-
2	Transmit Data	Out
3	Receive Data	In
4	Request to Send	Out
5	Not Used	-
6	Data Set Ready	In
7	Signal Ground	-
8-19	Not Used	-
20	Data Terminal Ready	Out
21-25	Not Used	-

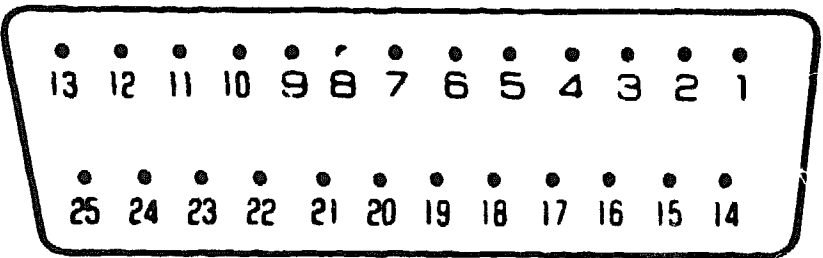
**Figure C-1: RS232C Pin Assignments**



Pin Assignment

NLO-004884

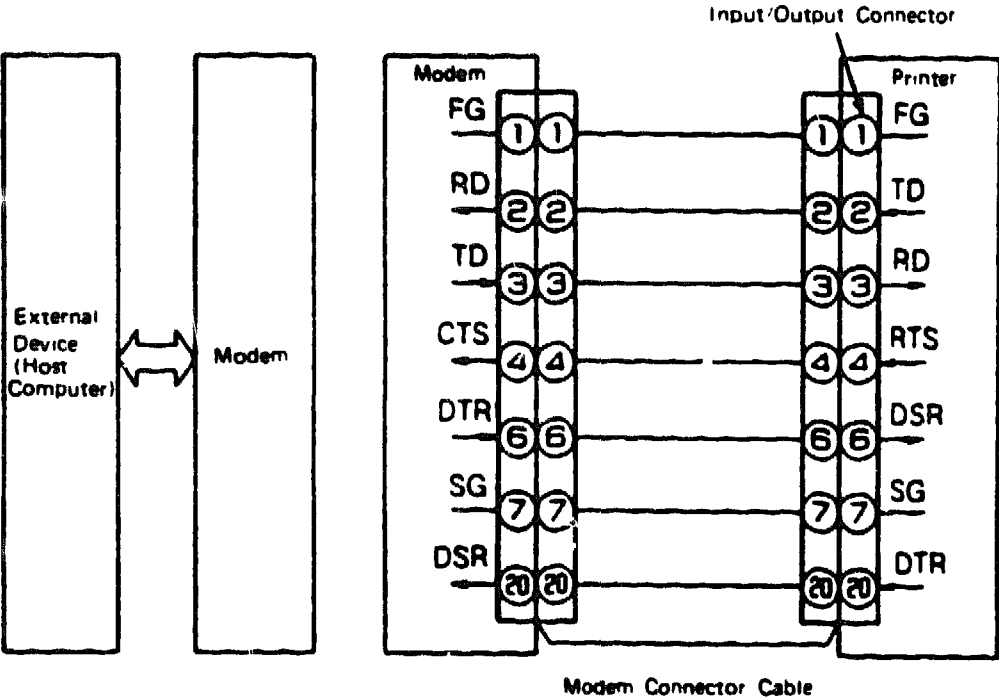
**Figure C-2: Serial Connections to Modem**



MLO-004885



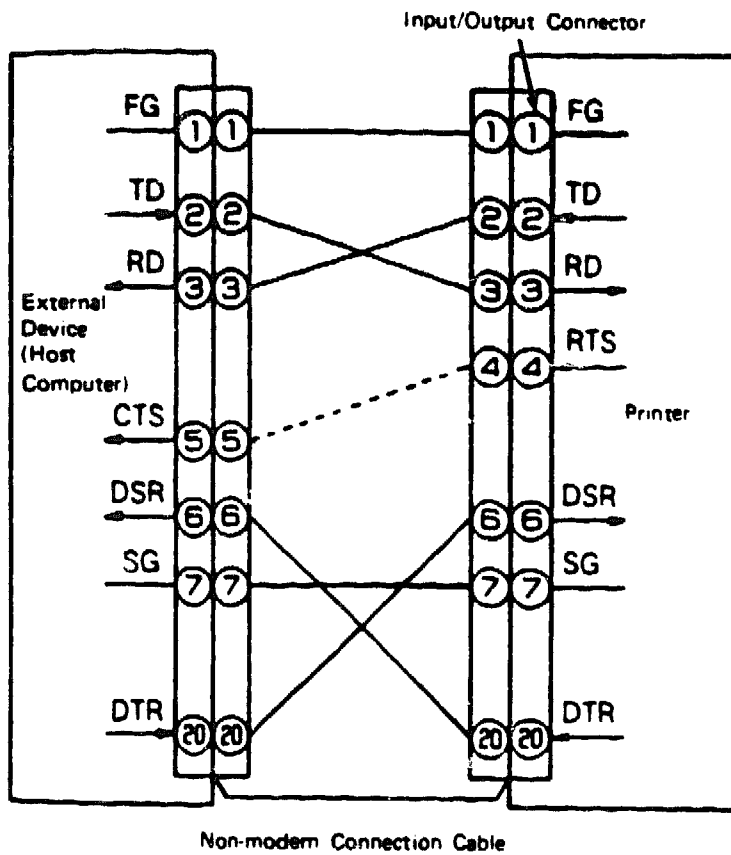**Figure C-3: Serial Connections Without Modem**



MLO-004887

### **C.3 Parallel Interface Specifications**

Table C-2 lists the pin signals for the parallel (Centronics) interface connector. Figure C-4 shows the pin assignments on the connector, and Figure C-5 shows the parallel connections to an external device.

**Table C-2: Parallel Interface Pin Assignments**


<b>Pin</b>	<b>Signal</b>	<b>Direction</b>
1	<u>DataStrobe</u>	In
2	Data 1	In
3	Data 2	In
4	Data 3	In
5	Data 4	In
6	Data 5	In
7	Data 6	In
8	Data 7	In
9	Data 8	In
10	<u>ACK</u>	Out
11	Busy	Out
12	Call (PE)	Out
13	Select	Out
14-15	Not Connected	-
16	0 Volts (Logic Ground)	-
17	Chassis Ground	-
18	5 Volts	Out
19-29	Ground	-
30	<u>InputPrimeRet</u>	Out
31	<u>InputPrime</u>	In
32	<u>Fault</u>	Out
33	Aux Out 1 <sup>1</sup>	-
34	Not Connected	-
35	Aux Out 2 <sup>1</sup>	-
36	Not Connected	-

---

<sup>1</sup>Ignored

---

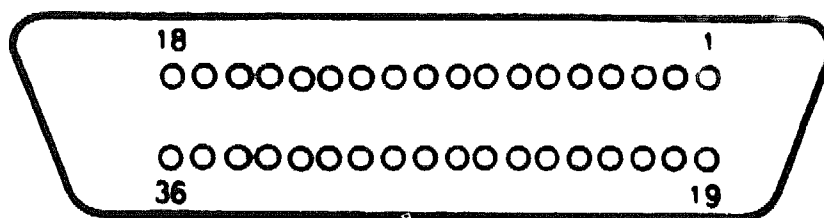
**Figure C-4: Parallel Pin Assignment**



Pin Assignment

MLO-004886

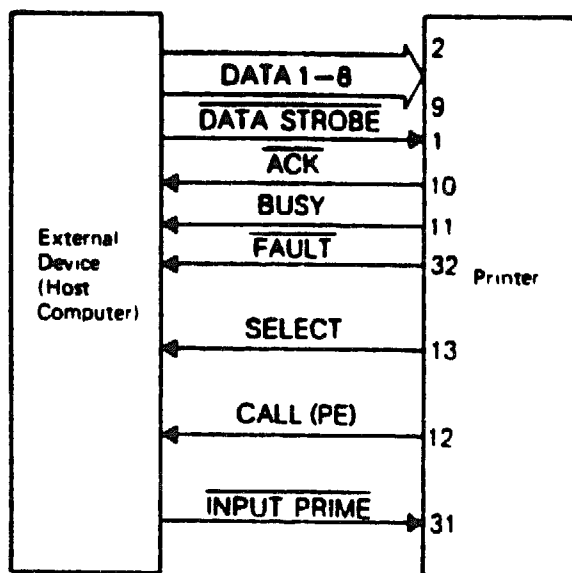**Figure C-5: Parallel Connections**



MLO-004888

[illegible]

# APPENDIX D

[illegible]

## Appendix D

# LN03 Compatibility

---

This appendix contains information highlighting the differences between the DEClaser 2100 plus printer and the LN03 printer. This information is directed at the differences affecting compatibility between the printers.

### D.1 General Differences

The following list identifies the general differences between the LN03 printer and the DEClaser 2100 plus printer.

- A 25-pin serial cable (female) and an MMJ-to-25 pin male adapter are provided with the DEClaser 2100 plus printer. The LN03 does not come with an interface cable.
- Font cartridges for the DEClaser 2100 plus printer do not have the same physical format, or the same internal data format, as the font cartridges for the LN03. If your application requires special cartridges (logos, signatures, private character sets), you need to use a soft copy or have a new cartridge made.
- The DEClaser 2100 plus printer comes with 512 KB of RAM, and can be upgraded to 3.5 MB. The available memory is 284 KB up to 3.284 MB. The LN03 PLUS option is dedicated to bitmap processing while the LN03 RAM cartridges are dedicated to font storage. On the DEClaser 2100 plus printer, you can use the available memory for font storage, bitmap storage, or a display list. To ensure the availability of bitmap memory, use the Memory Management (DECMM) command or the `main` feature in the INITIAL menu to allocate sufficient memory.
- The DEClaser 2100 plus printer does not use DIP switches to select features. Instead it uses setup menus and a nonvolatile memory to select and save features.
- The DEClaser 2100 plus printer uses coded keys on the paper cassettes to indicate paper size.
- When the DEClaser 2100 plus printer encounters a "page too complex" error, it stops until the error is cleared using the `Error Skip` key (see Section 6.1).

## D.2 Printable Area Compatibility

The printable area on the DEClaser 2100 plus printer is approximately the same as the printable area on the LN03 printer. There is an approximate ¼" non-printable area around the page.

This difference does not affect applications that do not print within ¼" of the paper edge. When the LN03 printer encounters a character that exceeds the printable area, it attempts (in some instances) to shift the character so that it falls within the printable area. The DEClaser 2100 plus printer does not image any characters that exceed the printable area. This results in lost characters.

## D.3 Protocol Compatibility

The following list contains protocol compatibility issues between the LN03 printer and the DEClaser 2100 plus printer.

- The LN03 rounds a relative motion of 1 decipoint down to a relative motion of 0, causing cumulative errors; the DEClaser 2100 plus printer keeps its position accurately. If the printers receive a relative motion of 0 decipoints, they interpret it as a 1. This leads to a 0 motion on the LN03 and a 1 motion on the DEClaser 2100 plus printer.
- When trying to image past the bottom margin, the LN03 does not always wrap. Wrapping depends on the glyph shape and the line spacing. For example "j" may print but "a" may not. The DEClaser 2100 plus printer always wraps if the character box crosses the bottom margin, even though the character may not have a descender. This ensures that all characters either print, or all characters wrap, to the next page.
- You should use the level 3 device identification for the DEClaser 2100 plus printer when possible. This allows the software to be compatible with any future devices.

Some applications, such as DECmate, require you to set up the printer to respond as an LN03 printer. When the device identification is set to LN03, it responds as a base model LN03, not an LN03 PLUS, even though it may have sufficient memory for a full bitmap. See Section 4.5.5.1 for additional information about the device identification.

- The DEClaser 2100 plus printer does not support Tektronix mode; the LN03 PLUS does.
- The DEClaser 2100 plus printer does not contain the Modern Gothic font resident in the LN03 PLUS.

- If a font used on the page is deleted to free up memory for another requirement, the DEClaser 2100 plus printer may cause a page break. It does not try to transfer the display list to bitmap memory like the LN03 PLUS would. If you encounter page breaks, set the paint feature value to Full (see Table 4-12).

**NOTE:** *The Full value can be activated only if at least 1 MB of optional RAM is installed in the printer.*

- When a font report is issued, the DEC Supplemental character set is now reported as 245 (94-character set %5), rather than 010 (94-character set <) which is now the User Preference character set. The DEClaser 2100 plus printer has three Hebrew character sets and the Legal character set resident in the printer. This also modifies the font status report because more fonts are included.
- The DEClaser 2100 plus printer enforces the Common Font File Format (CFFF) syntax and semantics more strictly than the LN03. Therefore, some fonts containing errors, which load correctly on the LN03, may not load properly on the DEClaser 2100 plus printer and will generate an error report.
- The DEClaser 2100 plus printer can save more user default settings in NVRAM than the LN03 can save using DIP switches. Therefore, when a power-up reset command is received, more values can be restored in the DEClaser 2100 plus printer. To ensure that values are not modified during a power-up reset, save them to NVRAM whenever possible.

**NOTE:** *Contact your Digital sales representative for more information about the DEClaser 2100 plus printer.*





# Glossary

---

## **ASCII**

American Standard Code for Information Interchange. The ASCII code table is widely used for data processing and communication. The codes listed represent a set of characters and commands.

## **A4 paper size**

The European paper size of 210 mm x 297 mm.

## **basis weight**

A measurement used to describe the paper weight density in grams per square meter. Acceptable basis weight ranges for the printer are from 60 g/m<sup>2</sup> to 135 g/m<sup>2</sup>, or the equivalent of 16 lb. to 36 lb. To determine the basis weight in pounds, divide the g/m<sup>2</sup> by 3.75.

## **baud rate**

The speed (bits/second) at which the computer and the printer communicate when a serial interface is used.

## **bitmap**

An image in digitized form that can be stored, transmitted, and reproduced precisely.

## **bitmap font**

The type of font created from a bitmap pattern. A bitmap font has a fixed size, similar to the type set in typography. The Courier font that resides in the DEClaser 2100 plus printer is an example of a bitmap font.

## **buffer**

An area in the printer's memory used for temporary storage of data during input and output operations.

## **built-in fonts**

Fonts that reside in memory and are shipped with the printer. These fonts are sometimes referred to as internal, or resident fonts.

## **CaPSL**

**Canon Printing System Language.** This page description language uses escape sequences to control the printer.

### **character attribute**

A feature of a highlighted character. You can select underlining, bold printing, italic printing, and strike-through attributes.

### **character set**

A set of codes that describe the general appearance of a set of characters. For example, a character set might contain the code for an uppercase A or the number 1. Character sets do not describe the style (font) of a printed character.

### **command**

An instruction that tells the printer to perform a certain function. Commands are sent from the host computer to the printer when the printer is on line.

### **configuration**

The process of changing the settings of the printer or computer to communicate properly with each other. For example, if you use a serial interface, features such as baud rate and rsmode must be configured to match the host computer and printer.

### **default**

A value or setting the printer assumes unless specific changes are made. For example, the interface default value for the DEClaser 2100 plus printer is RS232C (serial). Default values are stored in ROM and cannot be changed.

### **downline loaded fonts**

Fonts that are transferred (downline loaded) from the host computer and temporarily stored in the printer's memory. The downline loaded fonts have priority over the built-in fonts and are cleared when you use a software command or when you power off the printer.

### **dpi**

Dots per inch. Dpi is a unit of measurement to indicate printer resolution. The DEClaser 2100 plus printer has a print resolution of 300 dpi.

### **DTR**

Data Terminal Ready. DTR is a control signal used with RS232C serial communication. DTR regulates the flow of data to the input buffer of the

printer by placing a high or low voltage on the DTR line of the serial port. DTR is sometimes known as "hardware handshaking protocol."

**duplex**

A layout indicating that a document is to be printed on two sides. The DEClaser 2100 plus printer can perform duplex printing only while in the manual feed mode of operation.

**EP-S cartridge**

Electrophotographic supply cartridge. The EP-S cartridge contains toner, a photosensitive drum, a cleaning mechanism for excess toner, and the primary corona wire.

**error skip**

The process of acknowledging an error (by pressing **Error Skip**) and then continuing to print. Some errors cannot be bypassed with the error skip procedure.

**fixing assembly**

The fixing assembly contains heat and pressure rollers that bond the toner to the paper. The fixing assembly is sometimes referred to as a fusing unit.

**font**

The artistic representation of a typeface that describes a set of characters by point size, weight, and style.

**font attributes**

The seven characteristics of a font that define how printed characters look when you use that font: type family, spacing, type size, scale factor, typeset, character weight, and character proportion. These attributes are not affected by the character set you use.

**font file**

A data file that contains information used to reproduce a particular font.

**font file ID**

A 31-character code that describes the character set and font attributes for a given font file.

**font ID**

A 16-character code that describes the seven basic font attributes (including type family) of the ROM fonts. The code cannot contain lowercase letters.

**host**

The computer that provides services and enables startup and management of the peripheral devices, such as printers.

**Image area**

The printable portion of a page. Like most printers, the DECclaser 2100 plus does not allow printing to the physical edge of the page.

**Initialize**

To set starting values such as counters, switches, or addresses, at the beginning of, or at prescribed points in a computer routine.

**Interface**

Connects two devices (through the interface cable) such as a computer and printer, making it possible for them to communicate with each other. The DECclaser 2100 plus printer supports a parallel (Centronics) and a serial (RS232C) interface.

**landscape printing**

A method of printing characters parallel to the long edge of the paper. Landscape printing is typically used for printing wide charts or tables.

**LCD**

Liquid crystal display. The printer messages appear on the LCD, which is part of the control panel.

**letter size**

The North American paper size of 8 1/2" x 11".

**line weight**

The thickness of a line. The thicker the line, the heavier the line weight.

**menu**

Menus contain the features and values to configure the printer. For example, the LAYOUT menu contains features such as offsetX and offsetY, which are used to configure margins on the page. There are six menus for the DECclaser 2100 plus printer that in total constitute the current printer settings.

**moisture content**

The ratio of water to the dry mass of paper. The moisture content can vary depending on the type of paper and the amount of humidity it is exposed to.

**NVRAM**

Nonvolatile random-access memory. Nonvolatile means that data is retained in NVRAM even after the printer is powered off. NVRAM is particularly useful when you are setting up the printer configuration, because all of the values can be saved and retained.

**off line**

A communications mode during which the printer cannot receive data from the host computer. When the On Line indicator is off, it indicates that the printer is off line.

**on line**

A communications mode during which the printer can receive data from the host computer. When the On Line indicator is on, it indicates that the printer is on line.

**operating memory**

Contains the current print settings loaded from NVRAM, and any modifications. Operating memory is RAM, and is cleared when the printer is powered off. Operating memory is sometimes known as "working memory."

**ozone filter**

Removes ozone generated by the printer. The ozone filter should be replaced every 100,000 pages. Never operate the printer without the ozone filter installed. Operating the printer without the ozone filter installed could be hazardous to your health.

**page**

In the context of a laser printer, the image you are printing; you can print up to two pages per sheet (one page per side).

**parallel interface**

A data communications interface that transmits multiple bits of data (usually in 1-byte segments) simultaneously. The DEC Laser 2100 plus printer uses a Centronics parallel interface.

**portrait printing**

A method of printing characters parallel to the short edge of the paper. This is the normal page orientation for printing. For example, this page is printed in a portrait orientation.

**PostScript language**

A programming language designed to convey a description of a desired page to a printer. It can describe a page containing any combination of text, graphical shapes, and digitized images.

**primary corona wire**

A wire located inside the EP-S cartridge that places an electrical charge on the photosensitive drum, preparing it to accept an image from the laser beam.

**printer controller firmware**

The firmware that interprets the data in a print request according to a specified data syntax, builds bitmaps of each page to be printed, and forwards the bitmaps to the print engine, which produces the hardcopy output.

**print density**

The relative thickness of the line used to print characters. The thicker the line, the darker and denser it looks. The thickness of a line is known as the "line weight."

**printer software**

The software that handles the communications between the process that makes a print request (terminal), the process that provides resources (a host), and the process that performs the printing service (a print queue).

**protocol**

A procedure or set of rules that controls the communication between computers and peripherals. Also, a set of conventions between communicating processes regarding the format and contents of messages to be exchanged.

**RAM**

Random-access memory. RAM retains data only while power remains on. Data is cleared from RAM when the printer is powered off. The DEC Laser 2100 plus printer contains 0.5 MB of built-in RAM, which is expandable up to 3.5 MB with optional memory boards.

**reset**

A procedure that clears data in the print buffer and returns the printer to the ready state. The printer operates using the settings stored in RAM. These settings are loaded into operating memory when a reset is performed.

**resolution**

The number of dots in a defined area. The resolution of the DEClaser 2100 plus printer is 300 dpi.

**ROM**

Read-only memory. ROM contains all of the factory default feature values. It is a permanent memory and cannot be cleared or changed.

**serial interface**

A data communications interface that transmits data sequentially, one bit at a time, at a fixed speed. The DEClaser 2100 plus printer uses an RS232C serial interface.

**sheet**

In the context of a laser printer, the physical piece of paper that is printed.

**simplex**

A layout indicating that a document is formatted to be printed on one side of a sheet.

**toner**

A black powder commonly known as dry ink, which is used to form the characters on the paper. Toner is contained in the EP-S cartridge on the DEClaser 2100 plus printer.

**transfer corona wire**

Places an electronic charge on the paper that attracts (transfers) toner from the photosensitive drum to the paper.

**type family**

A group of fonts that have a similar design, but differ in the six other font attributes. For example, Courier is a type family that resides in the DEClaser 2100 plus printer.

**type family ID**

A 7-character code that identifies a type family.

**xon/xoff**

A software protocol used with RS232C serial communication. It regulates the flow of data to the input buffer by exchanging on/off signals with the host computer. The xon/xoff protocol is sometimes referred to as "software handshaking protocol."





# Index

---

## A

---

Accessories and supplies, B-1  
Associated documents, xiii

## C

---

CDRH regulations, xvii  
Changing and saving values, 4-15  
Cleaning the printer, 7-1  
    discharging pins, 7-13  
    internal surfaces, 7-2  
    primary corona wire, 7-7  
    transfer corona wires, 7-13  
COMMAND menu, 4-22  
Common operating problems, 6-8  
Configuring the printer, 4-1  
Control panel, 3-1  
Control Representation Mode, 2-51  
COPY menu, 4-22

## D

---

Discharging pins, 7-13  
Document structure, xii  
Duplex printing, 2-23

## E

---

Engine Test Print, 2-38  
Envelope requirements, 5-7  
Envelopes  
    special considerations, 5-7  
    specifications, 5-4  
EP-S cartridge  
    care of, 7-19  
    replacing, 7-20  
Error skip procedure, 6-1

## F

---

FEEDER menu, 4-18  
Font List, 2-48

## G

---

Glossary, 8-1

## I

---

INITIAL menu, 4-23 to 4-26  
INTERFACE menu, 4-26 to 4-30

## K

---

Keypad  
    in Keypad Mode, 3-4  
    in Menu Mode, 3-6

## L

---

Labels  
    special considerations, 5-10  
    specifications, 5-9  
Laser safety, xvii  
LAYOUT menu, 4-19 to 4-22  
LN03 compatibility, D-1  
Loading paper, 2-14

## M

---

Macro feature, 4-24  
    examples, 4-25  
Maintenance, 7-1  
Manual feed operation, 2-15  
    envelopes, 2-29  
    paper, labels, and transparencies,  
        2-17  
Memory

## **Memory (Cont.)**

- nonvolatile random-access, 4-9
- operating, 4-7
- random-access, 4-10
- read-only, 4-8

## **Menu**

- COMMAND, 4-22
- COPY, 4-22
- FEEDER, 4-18
- INITIAL, 4-23
- INTERFACE, 4-26
- LAYOUT, 4-19

Menu descriptions, 4-16

Menu Mode, 4-2 to 4-3

Menu Mode display, 4-4 to 4-5

## **Messages**

- operator call, 6-4
- printer status, 6-2
- service call, 6-8
- software error, 6-5

# **N**

---

Nonvolatile random-access memory,  
4-9

NVRAM, 4-9

# **O**

---

Operating memory, 4-7

Operating space, 1-8

Operational flow in Menu Mode,  
4-10

Operator call messages, 6-4

Ordering information, B-4

Output tray

- rear, 2-9

- top, 2-8

Output tray selection, 2-7 to 2-9

Ozone filter replacement, 7-36

Ozone safety, xvi

# **P**

---

Paint mode, 4-26

Paper

## **Paper (Cont.)**

- loading, 2-10

- manual feed, 2-15

- special considerations, 5-3

- specifications, 5-2

Paper handling, 5-10

Paper jams, 6-12

- paper feed, transfer, and fixing  
assembly areas, 6-18

- top and rear paper tray, 6-13

Paper size, 4-26

Paper storage, 5-10

Power-off, 2-3

Power-on, 2-1

Primary corona wire, 7-7

Print density

- adjusting, 2-35

Printer components and functions,  
1-1

Printer configuration memory, 4-6  
to 4-10

Printer status messages, 6-2

Print media, 5-1

# **Q**

---

Quick Reference Guide, A-1

- fonts and character sets, A-14

- margins and spacing, A-6

- miscellaneous, A-20

- positioning controls, A-3

- set/reset modes, A-12

# **R**

---

RAM, 4-10

Random-access memory, 4-10

Read-only memory, 4-8

Replacement procedure

- EP-S cartridge, 7-20

- ozone filter, 7-36

Resetting the printer, 2-52

ROM, 4-8

## **S**

---

Safety information, xvi  
    CDRH regulations, xvii  
    laser, xvii  
    ozone, xvi  
Service, 8-1  
Service call messages, 6-8  
Software error messages, 6-5  
Software requirements, xi  
Specifications  
    envelopes, 5-4  
    labels, 5-9  
    operating, C-1  
    paper, 5-2  
    parallel interface, C-7  
    serial interface, C-4  
    transparencies, 5-8

## **T**

---

Test Print A, 2-41  
Test Print B, 2-45  
Top cover  
    closing, 2-6  
    opening, 2-4  
Transfer corona wire, 7-13  
Transparencies  
    special considerations, 5-8  
    specifications, 5-8  
Troubleshooting, 6-1

## **V**

---

Values  
    saving and changing, 4-12